



OWNER'S MANUAL

EXPRESS 4 / EXPRESS 6
CRX EFI

10204632-A



OWNER'S MANUAL

CRX EFI ENGINE

EXPRESS 4

EXPRESS 6

Model Year 2027+

CONTACT INFORMATION

Textron Specialized Vehicles, Inc.
1451 Marvin Griffin Road
Augusta, Georgia, USA 30906-3852

North America:
1-800-774-3946 Technical Assistance and Warranty
1-888-438-3946 Service Parts
001-706-798-4311 International
www.ezgo.com



Thank you for purchasing this vehicle. Before driving your new vehicle, read this owner's manual to familiarize yourself with safe driving practices, operation, features and controls.

This manual contains instructions for minor maintenance only. Information about major repairs can be found in the service manual. Your dealer has thorough knowledge of your vehicle and wants your total satisfaction with your purchase. We recommend you return to your dealership for all of your service needs during, and after the warranty period.

Repair or replacement parts can be purchased from your dealer or through the manufacturer's parts and accessories department.

These are original instructions as defined by 2006/42/EC.

The manufacturer maintains the right to change the design of the vehicle without responsibility to make the changes on units purchased before changes were made. The information in this manual can change without notice.

All information in this owner's manual is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some discrepancies may be found between your vehicle and the information presented in this publication. The content in this publication is intended for reference use only. The manufacturer is not liable for omissions or inaccuracies. Any reprinting or reuse of the content in this publication, whether whole or in part, is expressly prohibited.

Printed in U.S.A.

INTRODUCTION

MANUFACTURER'S INTENDED USE.....	1
WARRANTY AND REGISTRATION.....	1
EXHAUST EMISSIONS.....	2
BATTERY PROLONGED STORAGE.....	2
BATTERY DISPOSAL	2
VEHICLE SERIAL NUMBER LOCATION.....	2
SERVICE AND PARTS MANUALS	3

SAFETY

MODIFICATIONS – GOVERNMENTAL AND INDUSTRY STANDARDS.....	5
MAXIMUM CAPACITIES	5
TIRE PRESSURE.....	5
OPERATOR SAFETY.....	6
OWNER RESPONSIBILITY	6
Unauthorized Use	7
Operating without Instruction	7
Alcohol or Drugs.....	7
Passenger	7
BEFORE OPERATING.....	7
Load Operation	7
Reverse Operation	7
Damaged Vehicle	8
Maximum Speeds	8
Different Surfaces	8
Public Roads	8
Turning	8
Uphill Operation	8
Stalling on a Hill	8
Downhill Operation.....	8
Tires	8
Slippery Terrain.....	8
FUEL HANDLING GUIDELINES	9
CARBON MONOXIDE EXPOSURE.....	9
HOT EXHAUST SYSTEMS.....	9
VEHICLE LIFTING.....	9
VEHICLE MODIFICATION	9
MAINTENANCE SAFETY.....	10

SAFETY LABELS

OPERATION (P/N 10192297)	11
ENGINE WARNING (P/N 74093G01)	11
GOVERNOR WARNING (P/N 608527).....	12
REAR HANDHOLD WARNING LABEL (P/N 697425).....	12

TABLE OF CONTENTS

PATENT LABEL (P/N 10005569).....	12
GOVERNOR WARNING CE (P/N 608822).....	12
NEGATIVE GROUND LABEL (P/N 28203G01).....	12
CE COMPLIANCE LABEL (P/N 601783)	13

FEATURES AND CONTROLS

KEY SWITCH	15
FUEL GAUGE WITH LOW OIL PRESSURE INDICATOR.....	15
HEADLIGHT SWITCH.....	15
HORN SWITCH.....	15
CUP HOLDER.....	15
12V OUTLET (IF EQUIPPED).....	15
USB PORT (IF EQUIPPED)	15
STEERING WHEEL	16
TURN SIGNAL/HORN (IF EQUIPPED).....	16
BRAKE PEDALS	16
Brake Pedal.....	16
Park Brake Pedal	16
ACCELERATOR PEDAL.....	16
DIRECTION SELECTOR	16
MALFUNCTION INDICATOR LIGHT (MIL).....	17
HOUR METER	17
HIP RESTRAINTS.....	17
SEAT BOTTOM.....	17
GLOVE BOX / STORAGE COMPARTMENTS	17
FUEL FILL	17
CANOPY TOP AND WINDSHIELD (IF EQUIPPED).....	17
FLIP SEAT/LOAD DECK.....	18

OPERATION

SAFETY.....	19
BEFORE INITIAL USE	19
PRE-RIDE INSPECTION	19
ENGINE BREAK-IN	19
CVT BELT BREAK-IN	20
FUEL	20
STARTING AND STOPPING THE ENGINE	21
Starting on a Hill.....	21
ACCELERATING.....	21
BRAKING	21
DRIVING PROCEDURE.....	22
Coasting.....	22
DRIVING WITH A PASSENGER.....	22

SLIPPERY SURFACES.....	22
DRIVING UPHILL	23
TRAVERSING HILLSIDES	23
DRIVING DOWNHILL.....	23
STALLING ON A HILL	23
DRIVING IN REVERSE	24
PARKING THE VEHICLE	24
BATTERY	24
HAULING CARGO.....	25
MAXIMUM CAPACITIES	25
FLIP SEAT/ LOAD DECK OPERATION.....	26

VEHICLE MAINTENANCE

MAINTENANCE SAFETY.....	27
SCHEDULED MAINTENANCE	27
Initial Service Requirements	27
Severe Use Conditions	27
SCHEDULED MAINTENANCE CHART	28
RECOMMENDED LUBRICANTS AND FLUIDS.....	30
REPLACEMENT OF MAINTENANCE ITEMS.....	30
LIFTING THE VEHICLE	30
Lifting Front	31
Lifting Rear.....	31
Lowering Vehicle.....	31
VEHICLE CLEANING AND CARE	31
Washing the Vehicle	31
Polishing the Vehicle	32
TIRES	32
Tire Pressure.....	32
Tire Repair	32
Tire Replacement.....	33
WHEELS.....	33
Wheel Removal	33
Wheel Installation	33
LIGHTS.....	34
LED Headlight Assembly Replacement	34
LED Tail Light/Brake Light Assembly.....	34
FUSE REPLACEMENT	34
FOUR CYCLE ENGINE.....	35
Engine Specifications.....	35
CHECK THE OIL LEVEL	35
CHANGE THE ENGINE OIL.....	36
Remove the Engine Oil	36
Change the Oil Filter	37

TABLE OF CONTENTS

Refill Oil	37
STARTER/GENERATOR BELT	37
Adjusting the Belt	38
AIR INTAKE AND COOLING FINS	38
REAR AXLE	38
Checking the Axle Oil Level	38
AIR FILTER	39
SPARK PLUG	39
MALFUNCTION INDICATOR LIGHT (MIL)	40
BRAKES	41
Periodic Brake Test	41
BATTERY	42
Battery Cleaning	42
Battery Charging	42
Discharged Battery	43
Battery Disposal	43
Battery Storage	43
TRANSPORTING THE VEHICLE	43
Hauling the Vehicle	43
Towing the Vehicle	44
VEHICLE STORAGE	44
Remove from Storage	45
 VEHICLE SPECIFICATIONS	
EXPRESS 4	48
EXPRESS 6	50
 MAINTENANCE LOG	
RECORDS	53

INTRODUCTION

The following symbols appear throughout this manual and on vehicle labels. Your safety is involved when these symbols are used. Become familiar with their meanings before reading the manual.

 **DANGER** *DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.*

 **WARNING** *WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.*

 **CAUTION** *CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.*

 **NOTICE** NOTICE provides key information by clarifying instructions.

 The PROHIBITION SAFETY SIGN indicates an action NOT to take in order to avoid hazard.

 The MANDATORY ACTION SIGN indicates an action that NEEDS to be taken to avoid a hazard.

 **WARNING** *Failure to comply with the warnings in this manual can result in severe injury or death.*

Read this entire manual carefully before operating this vehicle. Do not attempt to operate this vehicle until you have thorough knowledge of the controls and features.

Regular inspections and maintenance, along with good operating techniques, will help ensure your safe enjoyment of the capabilities and reliability of this vehicle.

This vehicle was designed and manufactured in the United States of America (USA). The standards and specifications in the following information originate in the USA unless otherwise indicated.

When servicing motors, all adjustments and replacement components must be per original vehicle specifications to maintain the USA Federal and State emission certification applicable at the time of manufacture.

MANUFACTURER'S INTENDED USE

This vehicle is designed and manufactured for off road use only. Use on public streets, roads or highways is illegal in most areas and increases the risk of an accident involving other vehicles and people. This vehicle does not meet FMVSS (Federal Motor Vehicle Safety Standards) for public street, road, or highway use.

Check all laws and regulations before choosing an area to operate your vehicle.

WARRANTY AND REGISTRATION

Register your vehicle at www.ezgo.com.

A literature package is included with the purchase of a new vehicle. The package contains the following items:

- Vehicle Warranty Statement
- EPA and California Emission Control Warranty Statement (EVAP emission)
- Emission Control System Warranty Statement (Engine emission)

Use Original Equipment Manufacturer (OEM) approved parts to keep the vehicle warranty effective.

Tampering with or adjusting the governor to allow the vehicle to operate above factory specifications will void the vehicle warranty.

All information, including coverage, limitations, exclusions and how to obtain warranty service is included in the literature package with the purchase of the vehicle. It can also be obtained from your dealer.

EXHAUST EMISSIONS

The exhaust emissions of this vehicle's engine complies with regulations set forth by the Environmental Protection Agency (EPA) of the United States of America (USA) at time of manufacture. Significant fines could result from modifications or tampering with the engine, fuel, ignition, or air intake systems. Refer to the warranty statements provided with the vehicle for all information.

BATTERY PROLONGED STORAGE

Batteries discharge over time. The rate of discharge changes according to the ambient temperature, the age and condition of the batteries.

Completely charged batteries will not freeze in winter temperatures unless the temperature is less than -75°F (- 60°C).

BATTERY DISPOSAL


Lead-acid batteries are recyclable. Return discarded batteries to distributor, manufacturer or lead smelter for recycling. For neutralized spills, put any residue in acid-resistant containers with absorbent material such as sand. Dispose in accordance with local, state and federal regulations for acid and lead compounds. Contact local or state environmental authorized people for the disposal information.

VEHICLE SERIAL NUMBER LOCATION

Four serial number and manufacture date code labels are on the vehicle.

- One label is located on the lower right wall of the dash panel.
- The second label is located on the driver side frame under the front splash shield.
- The third and fourth labels are located on the passenger side frame rail at the rear of the vehicle.

A PIN label is located on the passenger side frame under the front splash shield.

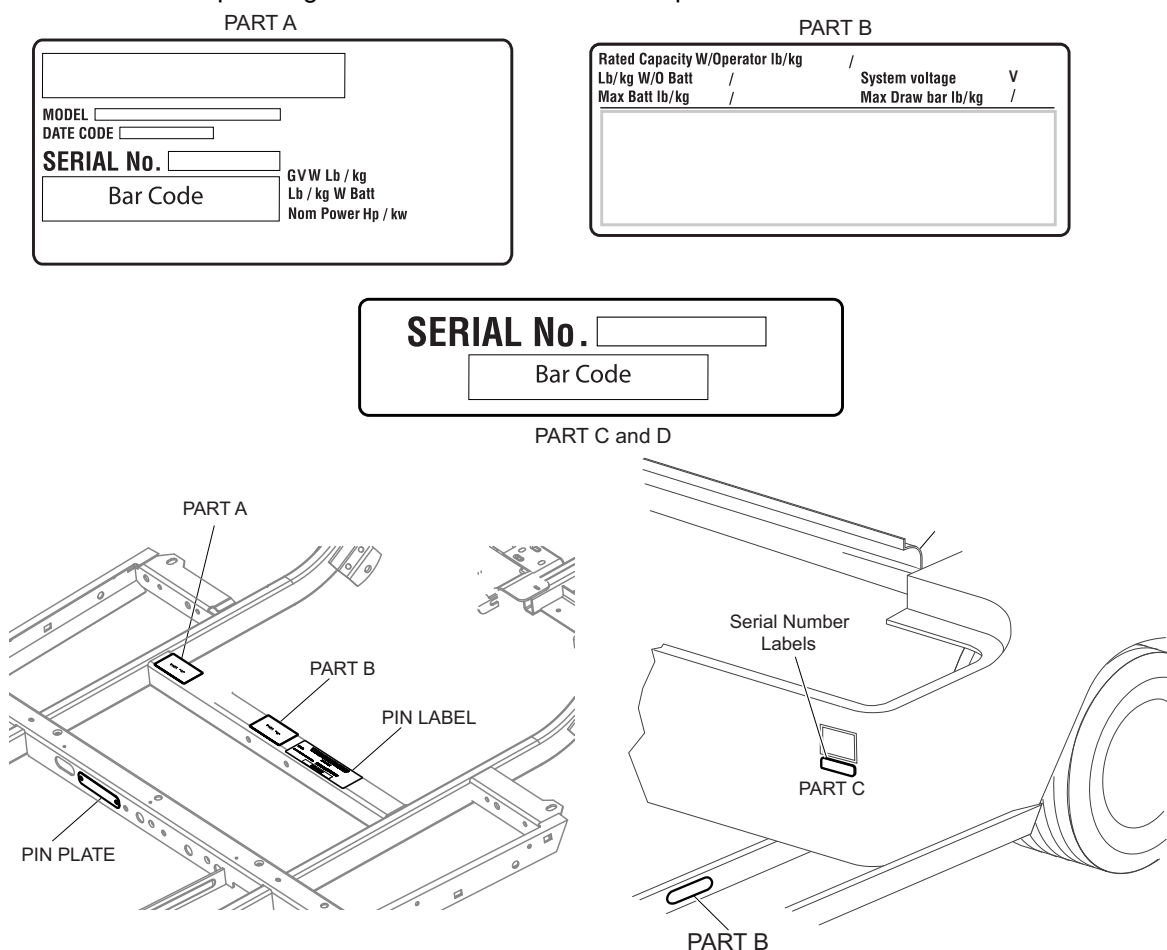

Design changes occur on a continuous basis. To order the correct components for the vehicle, the serial number or PIN and manufacture date are required.

Record the vehicle identification numbers in the spaces provided below. These identification numbers are required when ordering parts from the manufacturer.

Vehicle Serial Number	
Vehicle PIN	

SERVICE AND PARTS MANUALS

The following manuals can be purchased through a dealer:

- service manual
- parts manual

SAFETY

For questions about your vehicle or the material in this manual, see the contact information on page i or the back of this publication.

Safety and warning labels are on the vehicle for your protection. Read and comply with the instructions on the labels carefully. If any label shown in this manual is different from the label on your vehicle, always follow the instructions on the vehicle label.

If a label comes off or becomes illegible, contact your dealer for a replacement. The part number is provided in this manual, printed on the label, or can be obtained from your dealer.

MODIFICATIONS – GOVERNMENTAL AND INDUSTRY STANDARDS

Certain replacement parts can be used independently and/or in combination with other accessories to modify a TSV-manufactured vehicle to permit the vehicle to operate at or in excess of 20 mph. When a TSV-manufactured vehicle is modified in any way by the Distributor, Dealer or customer to operate at or in excess of 20 mph on public streets or roads, UNDER FEDERAL LAW the modified product will be a Low Speed Vehicle (LSV) subject to the strictures and requirements of Federal Motor Vehicle Safety Standard 571.500. In these instances, pursuant to Federal law the Distributor or Dealer MUST equip the product with headlights, rear lights, turn signals, seat belts, top, horn and all other modifications for LSVs mandated in FMVSS 571.500, and affix a Vehicle Identification Number to the product in accordance with the requirements of FMVSS 571.565. Pursuant to FMVSS 571.500, and in accordance with the State laws applicable in the places of sale and use of the product, the Distributor, Dealer or customer modifying the vehicle also will be the Final Vehicle Manufacturer for the LSV, and required to title or register the vehicle as mandated by State law.

Information on FMVSS 571.500 is found at Title 49 of the Code of Federal Regulations, section 571.500. For information on-line, go to www.ecfr.gov.

The manufacturer will NOT approve Distributor, Dealer or customer changes that change a vehicle into a Low Speed Vehicle (LSV).

This vehicle meets the current applicable standard for safety and performance requirements.

MAXIMUM CAPACITIES

⚠ WARNING *Exceeding the weight capacities can cause loss of vehicle control and possible injury or death.*

	EXPRESS 4	EXPRESS 6
Maximum Vehicle Weight Capacity	800 lb (363 kg)	1200 lb (544 kg)
Maximum Rear Seat/ Load Deck Capacity	300 lb (136 kg)	300 lb (136 kg)

- Do not exceed the maximum vehicle weight capacity (includes weight of operator, passenger, cargo, and accessories).
- Do not exceed the maximum rear seat/load deck capacity.

TIRE PRESSURE

⚠ WARNING *Improper tire pressure or uneven tire pressure can cause loss of vehicle control and possible injury or death.*

NOTICE

For hard surfaces or pavement, inflate to higher pressure within the range; never exceed maximum pressure indicated.

For soft terrain or turf, inflate to lower pressure within the range to reduce potential damage to the terrain or turf.

Maintaining correct tire inflation pressure is essential for safe vehicle operation.

EXPRESS 4	EXPRESS 6
18 - 22 psi (124 - 152 kPa)	22 - 26 psi (152 - 180 kPa)

OPERATOR SAFETY

Safe and responsible use of this vehicle is necessary to prevent dangerous conditions for the operator, passengers and other people in the area of operation. The OPERATION section of the manual provides information on the safe operation of the vehicle. Make sure you read, understand and comply with all of this information to decrease the risk of personal injury or death.



Failure to operate this vehicle as instructed can cause collision, loss of control, or rollover resulting in severe injury or death. Follow all safety warnings in this section of the owner's manual. See the OPERATION section of the owner's manual for operating procedures and additional safety information.

- Read this entire manual and all product labels carefully. Follow the safety information and operating procedures described.
- Operate the vehicle responsibly to prevent dangerous conditions for the operator, passengers, and other people in the area of operation
- Operate the vehicle responsibly and keep the vehicle in safe condition of operation.
- A damaged vehicle or a vehicle that is not functioning properly is dangerous and must not be operated until repairs are made.
- Keep feet, legs, hands, and arms inside the vehicle at all times.
- The driver must keep both hands on the steering wheel and both feet on the floor or pedals.
- Inspect the vehicle before each use to make sure it is in safe operating condition. Perform the Daily inspection described on page 19.
- Always have the vehicle checked by an authorized dealer if it is involved in an accident.
- Remove the key from the key switch when the vehicle is not in use to prevent accidental starting or unauthorized use.
- Drive the vehicle at appropriate speeds for the terrain and conditions. Be aware of environmental conditions that change the terrain and your ability to control the vehicle.
- Do not drive on excessively steep hills. Evaluate the terrain before descending a hill. Drive slowly and deliberately. Use the brake to limit speed and maintain control. Sudden braking or turning can cause the loss of vehicle control.
- Drive straight up or down the hill. Do not drive across the hill.
- Operate only in approved areas. Follow all applicable safety rules for the area.
- Avoid driving on terrain that is too rough for the vehicle's capabilities and your driving skills.
- Before driving in the reverse direction, make sure the area behind the vehicle is clear. Accelerate slowly and avoid making sharp turns.
- Make sure the direction selector is in the correct position before pressing the accelerator pedal.
- Decrease speed before and during turns.
- Decrease speed when driving on wet or slippery surfaces.
- Bring the vehicle to a complete stop before moving the direction selector.
- Do not exceed the cargo or vehicle weight capacities. Do not exceed the occupant capacity. See VEHICLE SPECIFICATIONS on page 47 for the vehicle load and seat capacity.
- If there is a risk of lightning, leave the vehicle and look for a safe location to wait until the lightning has stopped.

Additional information about safety is included throughout this manual and can be obtained from your local dealer.

OWNER RESPONSIBILITY



Improper use, maintenance, or modification of this vehicle can lead to serious injury or death.

Require proper use of your vehicle. Do not allow anyone to operate your vehicle or ride as a passenger unless they are properly instructed and you are sure they are willing to ride responsibly. To prevent unauthorized use, always remove the key when the vehicle is not in use.

Unauthorized Use

Anyone who does not have a valid driver's license is not permitted to operate the vehicle.

Anyone who is below the height of 59 in. (150 cm) is not permitted to operate the vehicle.

Leaving the key in the key switch allows unauthorized operation of the vehicle by an unlicensed driver or someone who does not meet the height requirement. Always remove the key from the key switch when the vehicle is not in operation.



Operating without Instruction



Operation of this vehicle without proper instruction increases the risk of an accident. The operator must understand how to operate the vehicle correctly in different situations and on different types of terrain.

All operators must read, understand, and comply with all warning and instruction labels before operating the vehicle.

Alcohol or Drugs



Operation of the vehicle during or after consuming alcohol or drugs can adversely affect operator judgment, reaction time, balance, and perception.

Never drink alcohol or use drugs or medications before or during operation of the vehicle.

Passenger

All passengers must be at least 59 in. (150 cm) tall. Passengers must be able to sit with their back against the seat, and both feet on the floor.

For additional safety and operational information, see Handling characteristics can change with the added weight of a passenger. Allow more time and distance for braking. on page 22.

BEFORE OPERATING

Perform the PRE-RIDE INSPECTION on page 19 before each use to make sure the vehicle is in safe operating condition. Failure to inspect and confirm that the vehicle is safe to operate increases the risk of an accident.

Follow all inspection and maintenance procedures and schedules described starting on page 28.

Load Operation

The weight of cargo and occupants affects vehicle operation. Carefully calculate how the vehicle is loaded and how to safely operate it. Follow the instructions in this manual for loading guidelines and tire pressure.

Do not exceed weight capacities specified for your vehicle. Capacities are listed in MAXIMUM CAPACITIES on page 5 of this manual, and also on the label affixed to the load deck. As passenger weight increases, cargo weight needs to be adjusted to ensure the maximum vehicle weight capacity is not exceeded.

Tire pressure must be adjusted to accommodate the load being carried. See TIRE PRESSURE on page 5 for pressure specifications.

Verify tire pressure, and drive slowly and carefully to maintain control of the vehicle if driving under any of the following conditions:

- passenger and/or cargo exceeds half the maximum weight capacity
- driving over obstacles
- towing
- climbing a hill

Reverse Operation

Make sure the area behind the vehicle is clear before operating in reverse. After making sure it is clear and safe to operate in reverse, accelerate slowly. Avoid making sharp turns in reverse. Refer to STALLING ON A HILL on page 23 for operational information.

Damaged Vehicle

Driving a damaged vehicle is not safe.

If your vehicle has been involved in any type of accident, have it inspected by a qualified service dealer to verify that it is safe for operation.

Maximum Speeds

Maximum speed operation increases risk of loss of control. Always drive at a speed that is appropriate for the terrain, visibility, operating conditions, and your skill and experience level. Use the brake to control the speed and maintain control of the vehicle.

Different Surfaces

Driving the vehicle on different surface types can affect handling characteristics of the vehicle. When driving on a dirt road, loose surface, or wet grass, the distance required to stop the vehicles will increase.

Public Roads

Driving this vehicle on public streets, roads or highways could result in a collision with another vehicle. Never drive this vehicle on any public street, road, or highway, including dirt and gravel roads, unless they are designated for off road use. Most areas prohibit the operation of this vehicle on public streets, roads or highways, and can result in traffic violations and fines.

Turning

Improper or careless turning can cause loss of traction, loss of control, accident, or rollover. Do not turn quickly or at sharp angles. Do not turn at high speeds. Practice turning at slow speeds before attempting to turn at faster speeds.

Uphill Operation

Do not climb hills that are too steep for the vehicle or your driving abilities. Loss of vehicle control or rollover can result from climbing hills incorrectly. Refer to DRIVING UPHILL on page 23 for operational information.

Stalling on a Hill

A rollover can result from stalling or rolling backward while climbing a hill. Drive uphill at a constant speed. See procedure on page 23 for maintaining control of your vehicle if it stalls on a hill.

Downhill Operation

Inspect the terrain before descending a hill. Avoid driving across hills. Use the brake to limit speed and maintain control. Loss of vehicle control or rollover can result from driving downhill incorrectly. Refer to DRIVING DOWNHILL on page 23 for operational information.

Tires

Operating the vehicle with incorrect tires or with incorrect or uneven tire pressure can cause loss of control or an accident. Always use the size and type tires specified in the *VEHICLE SPECIFICATIONS* section beginning on page 47. Always maintain correct tire pressures as specified in TIRE PRESSURE on page 5.

Slippery Terrain

Driving on rough, wet or loose terrain increases the risk of loss of traction or control, accident or rollover. Drive slowly and use correct turning procedures when operating on slippery surfaces.

Tires that have lost traction, and then regain traction suddenly, can cause loss of vehicle control or rollover.

Refer to SLIPPERY SURFACES on page 22 for operational information.

FUEL HANDLING GUIDELINES

Gasoline is flammable and can be explosive in some conditions. Use the following guidelines when handling fuel:

- Always use caution when handling gasoline.
- Refuel in a well-ventilated area.
- Turn off the engine before refueling.
- Use an approved gasoline container to store fuel.
- Remove portable gasoline containers from the vehicle and place on the ground before filling to prevent ignition caused by electrical static discharge.
- Do not smoke or allow open flames or sparks in or near the area where refueling is done or where gasoline is stored.
- Do not overfill the tank. Do not fill the tank neck.
- If any gasoline contacts skin, immediately wash with soap and water. If any gasoline gets on clothing, change immediately.

For refueling procedure, refer to FUEL on page 20.

CARBON MONOXIDE EXPOSURE

Carbon monoxide is an odorless gas that is formed as a natural part of the combustion of hydrocarbon fuels.

Carbon monoxide is poisonous, and can cause loss of consciousness or death in a short period of time. Never start the engine or allow it to run in an enclosed area.

If you experience any of the following symptoms, stop the engine and get fresh air immediately:

- dizziness
- intense headache
- weakness and sleepiness
- vomiting
- muscular twitching
- throbbing in temples

Operate this vehicle outdoors or in well-ventilated areas only.

HOT EXHAUST SYSTEMS

Exhaust system components are very hot during and after use. To avoid burn injuries, do not touch hot exhaust system components. Hot components can also cause a fire. Keep combustible materials away from the exhaust system. Check for buildup around the exhaust system after driving through high and dry grass.

VEHICLE LIFTING

The vehicle must be on a firm and level surface for lifting. Remain constantly aware that the vehicle is not stable during the lifting process. Do not get under a vehicle until you verify that it is stable on the jack stands. Never get under a vehicle while it is on a jack only. Put wheel chocks in front and behind the wheels that are not being lifted. Do not allow anyone to remain or get on the vehicle at any time during the lifting process.

Read and comply with all warnings and follow the lifting procedures described on page 30.

VEHICLE MODIFICATION

Do not install any accessory not approved by the manufacturer. Do not modify the vehicle to increase speed or power. Any modifications or installation of accessories not approved by the manufacturer can create a safety hazard and increase the risk of injury.

The warranty will be terminated if the vehicle is modified to increase vehicle speed or power.

The warranty may be terminated if original (or equivalent) replacement parts are not installed on the vehicle.

The addition of some accessories can change the handling characteristics of the vehicle. Use only manufacturer approved accessories and familiarize yourself with their function and effect on the vehicle.

MAINTENANCE SAFETY

Routine and scheduled maintenance of this vehicle is necessary to keep the vehicle in safe and reliable condition. This section of the manual provides safety information for performing maintenance on your vehicle. Make sure you read, understand, and comply with all of this information to decrease the risk of personal injury or death.

⚠ WARNING *Serious injury or death can occur if the instructions and procedures shown in this owner's manual are not followed.*

- Read this entire manual and all product labels carefully. Follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.
- Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.
- Remove all jewelry before servicing the vehicle.
- Do not allow loose clothing or hair to contact the moving parts.
- Do not touch hot objects.
- The drive wheels must be lifted and supported on jack stands before performing any service to the power-train while the motor is in operation.
- Use wheel chocks and support the vehicle on jack stands. NEVER get under a vehicle that is supported by a jack. Lift the vehicle following the instructions. See LIFTING THE VEHICLE on page 30.
- When servicing the vehicle, always wear eye protection. Be careful when working around batteries, using solvents, or compressed air.
- Use insulated tools within the battery area to prevent sparks or battery explosion.
- To prevent the risk of battery explosion, keep all flammable materials, open flames or sparks away from the battery.
- Hydrogen gas is produced as a battery is charged. Charge the battery only in well-ventilated areas.
- Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause high amperage, or get extremely hot. Battery acid and hydrogen gas can cause bodily injury. Keep your hands, face, feet, and body away from any area that can expose them to injury in the event that an unexpected situation occurs.
- After making repairs or performing maintenance, test the vehicle in a safe area that is free from vehicle and person traffic.

SAFETY LABELS

Safety and warning labels are on the vehicle for your protection. Read carefully and comply with the instructions on the labels. If any label shown in this manual is different from the label on your vehicle, always follow the instructions on the vehicle label.

If a label comes off or becomes illegible, contact your dealer for a replacement. The part number is provided in this manual, printed on the label, or can be obtained from your dealer.

OPERATION (P/N 10192297)

Located adjacent to the steering column.



⚠ WARNING

READ AND OBEY THE FOLLOWING WARNINGS TO DECREASE RISK OF SEVERE INJURY OR DEATH.



www.ezgo.com

BEFORE OPERATING: READ owner's manual and all warning labels. Contact your dealer or visit the manufacturer's website for replacement manual or labels.

Except where PERMITTED BY LAW: Do not drive on public roads. Operate only in designated areas. Drivers must possess a valid driver's license. Operate from driver's seat by authorized persons only.

AVOID FALLS from the vehicle: Do not start driving until all occupants are PROPERLY SEATED and HOLDING ON. KEEP entire body INSIDE VEHICLE, REMAIN SEATED and HOLD ON while vehicle is moving.

Reduce the RISK OF ACCIDENTS: Drive SLOWLY in congested areas, on wet or loose terrain, when backing up, and when turning. Drive straight up and down slopes. Use BRAKE when going down a slope. Do not drive or ride under the influence of drugs, alcohol or when distracted. Wear seatbelts (if equipped).

This vehicle is NOT A TOY: Drive responsibly. To park, put vehicle control in OFF (electric) or F (gas). Ensure parking brake is set and remove key. Do not leave children unattended or allow children to play on vehicle.

DO NOT OVERLOAD this vehicle: Do not carry more than two occupants on each bench seat. Do not exceed weight capacity specified in the Owner's Manual.

DO NOT MODIFY this vehicle: Do not alter vehicle to increase maximum speed. Unapproved modifications can create unsafe conditions.

⚠ LEGAL WARNING

This vehicle may be equipped with color-changing exterior lighting.

Use of these lights while driving on public roads may violate state or local laws.

10192297

ENGINE WARNING (P/N 74093G01)

Located under the front seat.

NO TAMPERING
KEEP HANDS OUT
DO NOT EXPOSE
TO FLAME
GROUND
FUEL PUMP
NEGATIVE
GROUND BATTERY
SHORTING BATTERY TERMINALS
CAN CAUSE EXPLOSION



DO NOT SPILL FUEL ON
HOT ENGINE
CLEAN GASOLINE SPILLS WITH WATER
BEFORE STARTING ENGINE

74093-G01


SAFETY LABELS

GOVERNOR WARNING (P/N 608527)

Located on the throttle-rod guard.




REAR HANDHOLD WARNING LABEL (P/N 697425)

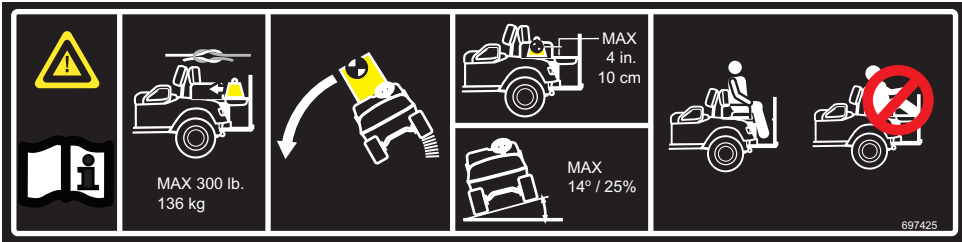

PATENT LABEL (P/N 10005569)

Located in the glove box (driver side)

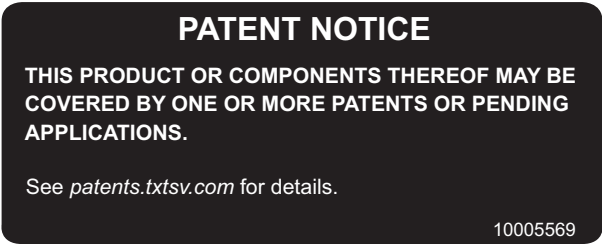

GOVERNOR WARNING CE (P/N 608822)




NEGATIVE GROUND LABEL (P/N 28203G01)

 




Located on the seat frame. (For CE vehicles only)





CE COMPLIANCE LABEL (P/N 601783)

Located on the serial plate label.

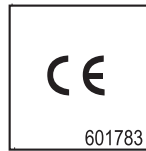

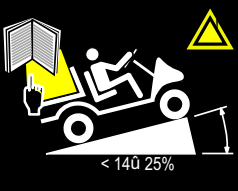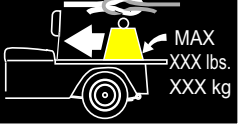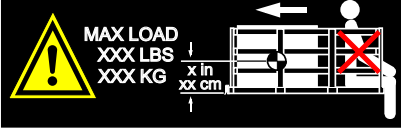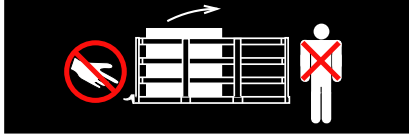1.  WARNING
2.  READ MANUAL
3.  WARNING
USE CAUTION IN
INCLEMENT WEATHER
4.  WARNING
DO NOT OPERATE
UNDER THE INFLUENCE
OF DRUGS OR ALCOHOL
5.  MAXIMUM
CROSS HILL/RAMP
ANGLE AS SPECIFIED
6.  WARNING
MAXIMUM CROSS
HILL/RAMP ANGLE
AS SPECIFIED
7.  LOAD WITH
HIGH CENTER
OF GRAVITY
COULD RESULT
IN TIP OVER
8.  LOAD
CENTER
OF GRAVITY,
MAXIMUM
HEIGHT
9.  WARNING
READ MANUAL
FOR MAXIMUM
LOAD BED
CAPACITY.
MAXIMUM RAMP/HILL
10.  SECURE LOAD
AS FAR FORWARD
AS POSSIBLE.
MAXIMUM LOAD BED
CAPACITY
11.  DO NOT RIDE IN
LOAD BED
12.  DANGER OF EXPLOSION
DO NOT FILL GAS CAN
IN LOAD BED
13.  WARNING
MAXIMUM LOAD
& CENTER OF
GRAVITY.
KEEP LOAD
AS FAR
FORWARD AS
POSSIBLE.
DO NOT RIDE
IN LOAD BED
14.  KEEP HANDS &
FINGERS AWAY
FROM DUMP BED.
DO NOT STAND
BEHIND DUMP
BED

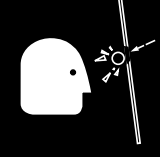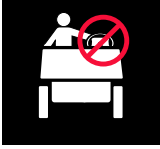- | | | | | | |
|-----|---|--|-----|---|---|
| 15. |  | CLEAN UP GASOLINE SPILLS WITH WATER BEFORE STARTING ENGINE | 28. |  | DO NOT DISPOSE OF BATTERIES IN LANDFILL |
| 16. |  | UNLEADED GASOLINE | 29. |  | DO NOT DRIVE ON HIGHWAY |
| 17. |  | DO NOT SPILL FUEL ON A HOT ENGINE | 30. |  | WINDSHIELDS DO NOT PROVIDE PROTECTION FROM FLYING OBJECTS |
| 18. |  | GROUND FUEL PUMP | 31. |  | BATTERIES ARE HEAVY. USE CARE LIFTING |
| 19. |  | LOW OIL PRESSURE | 32. |  | USE INSULATED TOOLS |
| 20. |  | NEGATIVE GROUND BATTERY | 33. |  | WEAR EYE PROTECTION |
| 21. |  | DO NOT CONNECT POSITIVE BATTERY TERMINAL TO GROUND | 34. |  | NO SMOKING |
| 22. |  | SHORTING BATTERY TERMINALS MAY CAUSE EXPLOSION | 35. |  | HOT SURFACE |
| 23. |  | NO TAMPERING. KEEP HANDS OUT | 36. |  | OPERATE FROM DRIVERS SIDE ONLY |
| 24. |  | WARNING CORROSIVE | | | |
| 25. |  | WARNING EXPLOSIVE | | | |
| 26. |  | WARNING LETHAL VOLTAGE | | | |
| 27. |  | DO NOT EXPOSE TO FLAME | | | |

FEATURES AND CONTROLS

KEY SWITCH

NOTICE

Some accessories continue to operate with the key in the OFF position. Leaving these accessories activated after the vehicle is shut down can cause the battery to discharge.

Located on the dash panel, the combination key/light switch controls the basic electrical system of the vehicle. The switch has two positions; OFF & ON.

- OFF; vehicle is disabled.
- ON; activates vehicle electronics and accessory power.

FUEL GAUGE WITH LOW OIL PRESSURE INDICATOR

The fuel gauge indicates the amount of gasoline in the fuel tank. F indicates a full tank and E indicates an empty fuel tank. The fuel gauge has a low oil pressure indicator. A low engine oil pressure condition is shown with a red indicator light.

HEADLIGHT SWITCH

The headlight switch is a three-position switch:

- Upper - High Beam
- Middle - Low Beam
- Lower - Off

HORN SWITCH

The horn switch is the red toggle switch on the console. Press the top to activate the horn.

CUP HOLDER

The vehicle has a center cup holder that will accommodate two beverage containers. Another cup holder is located to the left of the steering column and will accommodate a larger beverage container.

12V OUTLET (IF EQUIPPED)

NOTICE

Excessive use of accessories that are connected to the 12V outlet can cause battery discharge.


A 12V auxiliary outlet is located on the center console. With the key switch in the ON position, the outlet supplies power for any lights and accessories that have a 12V plug.

USB PORT (IF EQUIPPED)

NOTICE

Excessive use of accessories that are connected to the USB port can cause battery discharge.

A USB port is located on the center console. With the key switch in the ON position, the port supplies power to electronic devices via a USB cable.

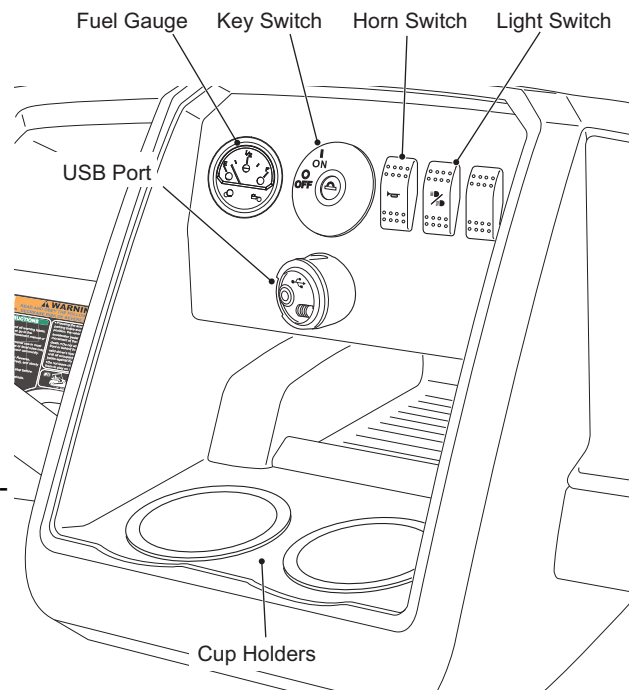


STEERING WHEEL

The steering wheel allows the driver to control the direction of travel.

TURN SIGNAL/HORN (IF EQUIPPED)

The turn signal switch also controls the hazard lights and horn. The switch is located on the steering column.

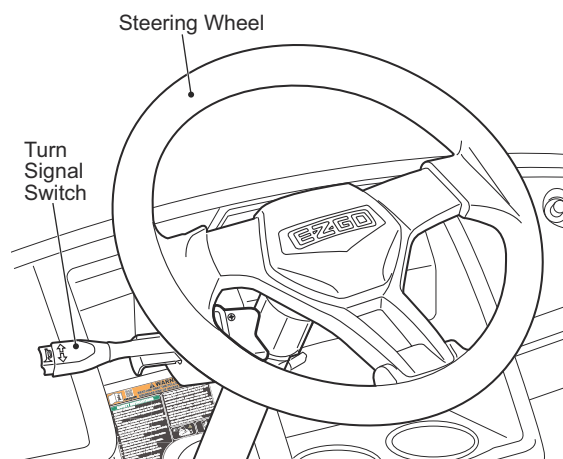

BRAKE PEDALS

The brake pedal on vehicles with mechanical brakes is a combination brake and parking brake pedal.

Brake Pedal


The brake pedal is the bottom left pedal on the floorboard.

Press the brake pedal to slow the speed or bring the vehicle to a complete stop.

Park Brake Pedal

The park brake is the upper pedal. It allows the operator to lock the brake when the vehicle is parked to prevent accidental movement.

To engage the park brake, press the upper pedal until it locks into place.

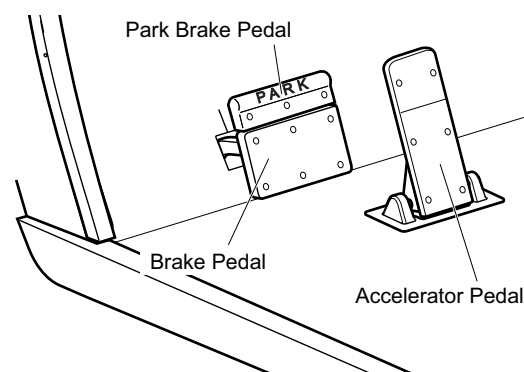

NOTICE

Quickly press and release the lower pedal to disengage. If the key switch is in the ON position and the park brake is engaged, the brake will release when you press the accelerator pedal and can cause the vehicle to move suddenly. This is a feature to make sure the vehicle is not driven with the park brake engaged. Pressing the accelerator pedal is not the recommended method to release the park brake.

ACCELERATOR PEDAL


The accelerator pedal is the right pedal on the floorboard. It activates the engine and controls the acceleration of the vehicle.

Apply slow and steady pressure to the accelerator pedal to increase vehicle speed.

DIRECTION SELECTOR

The direction selector is on the seat panel and allows the operator to select F (forward) or R (reverse) to control the direction of travel.

The direction selector has a reverse warning buzzer that activates when in the R position.

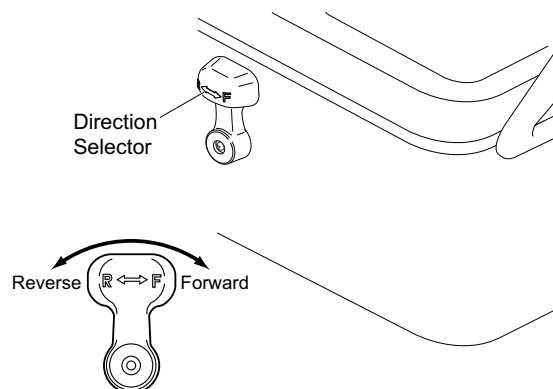


MALFUNCTION INDICATOR LIGHT (MIL)

The MIL (1) is located under the front seat and mounted to the front of the seat wrap. Lift or remove the seat bottom to view the MIL. The MIL can be used to diagnose a problem and whether a technician will be required to service the vehicle. See *MALFUNCTION INDICATOR LIGHT (MIL)* on page 38.

HOUR METER

The hour meter (2) is located under the seat and mounted to the front of the seat wrap. The hour meter shows the total run time for the life of the vehicle.

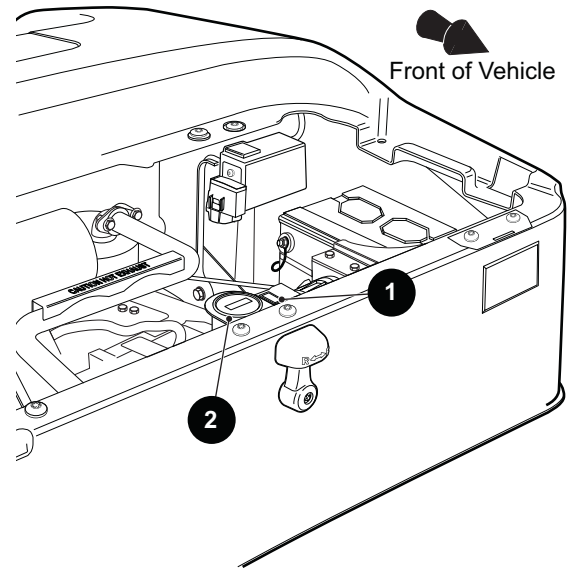

HIP RESTRAINTS

The hip restraints are designed to help keep the occupants properly positioned in the event of a sudden vehicle position change. Make sure that all passengers are seated and holding onto the hip restraint.

SEAT BOTTOM

The bench seat is designed for two occupants.

Lift up on either hip restraint to pivot the seat bottom forward and access the components underneath. Pivot and lift up on the seat to completely remove it from the vehicle before operating the vehicle.

GLOVE BOX / STORAGE COMPARTMENTS

The glove box provides storage space for small items. Glove boxes may be equipped with optional shelf and/or glove box doors.

FUEL FILL

The fuel fill is located under the front seat.

CANOPY TOP AND WINDSHIELD (IF EQUIPPED)



WARNING

The canopy top does not provide protection from rollover or falling objects.

The windshield does not provide protection from tree branches or moving objects.



CAUTION

To prevent damage to the vehicle, do not hold on to the canopy top struts.

The canopy top and windshield provide some protection from the elements, but do not keep the operator and passenger dry in heavy rain.

This vehicle is not equipped with seat belts, and the canopy top is not designed to provide rollover protection. In addition, the canopy top does not protect against falling objects, nor does the windshield protect against flying objects and tree limbs.

FLIP SEAT/LOAD DECK


When in the upright position, it is a rear seat for two passengers. The seat flips down to form a load deck.

⚠ WARNING

Always fill the forward seating capacity prior to seating any passengers on the rear flip seat.

Rear passengers must stay in the seat and hold both hip restraints and the rear hand hold when the vehicle is in motion. Always make sure that all passengers are seated and holding on before operating the vehicle.

Do not allow passengers to ride on the load deck. A sudden move or stop can cause severe injury or death to passengers on the load deck.

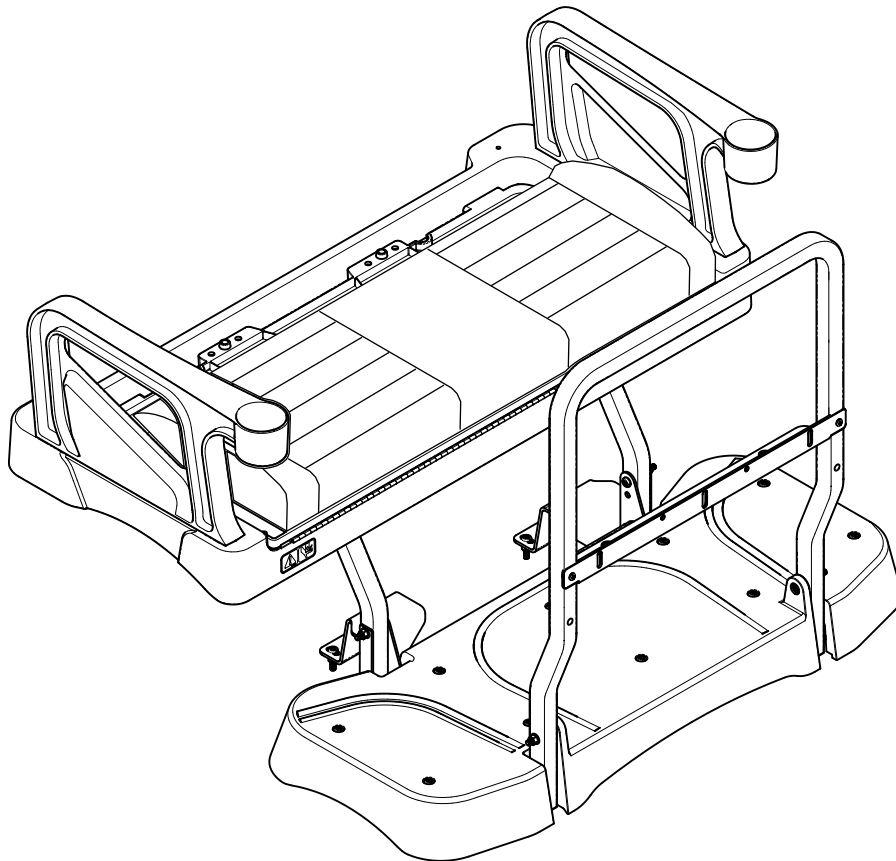

OPERATION

NOTICE

Some accessories continue to operate with the key switch in the OFF position. Leaving these accessories activated after the vehicle is shut down can cause battery discharge.

CAUTION

To prevent damage to the vehicle, do not hold on to the canopy top struts.

SAFETY

WARNING

Failure to operate the vehicle correctly can result in a collision, loss of control, accident or roll-over, and cause serious injury or death. Follow all operation procedures in this section of the manual. Read and comply with all safety warnings in the safety section of this owner's manual.

BEFORE INITIAL USE

To prepare the new vehicle for operation, complete the following:

- Remove the protective plastic from the seats.
- Check for possible leaks that may have developed during shipment of the vehicle.
- Charge the battery.
- Fill the tank with the correct fuel.
- Perform the following pre-ride inspection.

PRE-RIDE INSPECTION

Inspect and verify that the vehicle is in safe operating condition before each use to decrease the risk of an accident. Check the items in the table to help ensure safe and reliable operation.

Item	Check	Page
Brake system/pedal travel	Check for proper operation.	41
Parking brake	Ensure vehicle does not roll when the parking brake is engaged.	
Front suspension	Inspect. Lubricate if necessary. Check for loose or missing hardware.	
Rear suspension	Inspect. Lubricate if necessary. Check for loose or missing hardware.	
Steering	Check for smooth and free operation.	
Tires	Check condition and pressure.	32
Wheel hardware	Check for loose or missing hardware.	33
Frame hardware	Check for loose or missing hardware.	
Fuel and engine oil	Check for correct levels.	35
Fluid leakage	Inspect vehicle for leaks.	
Switches	Check operation.	
Reverse warning alarm	Check operation.	
Air filter	Inspect; clean or replace if necessary.	39
Headlights	Check operation.	34
Brake light / taillights	Check operation.	34
Starter / generator belt	Check condition.	37

ENGINE BREAK-IN

Correct operation of the engine during the break-in period is essential to the performance, reliability, and life of the engine. The engine break-in period is:

- the first 50 operating hours of a new engine
- the first 50 operating hours of an engine that has been completely disassembled
- the first few minutes until the engine is warm at each operation

OPERATION

During these break-in periods, operate the vehicle in the following manner:

- Avoid high engine speeds.
- Avoid long periods of idle time.
- Avoid long operating times at low engine speed.
- Avoid long operating times at the same engine speed.
- Avoid long operating times with a full load.
- Vary the engine speed during operation.
- Apply quick bursts of acceleration after the engine has warmed up.

CVT BELT BREAK-IN

The CVT belt break-in period is the first hour of operation on each new belt.

During the CVT belt break-in period, follow the same guidelines as described for engine break-in operation. See ENGINE BREAK-IN on page 19.

FUEL

Refer to FUEL HANDLING GUIDELINES on page 9 for more information regarding handling and storage of fuel.

WARNING

Refuel only in well-ventilated areas.

Do not add fuel near open flame or electrical items that can cause a spark.



Wear eye protection to protect from splashed fuel and fuel vapors.



Never use cigarettes in or near the area where refueling is done or fuel is stored.

Inspect the fuel cap, tank, and other components for leaks or damage that can cause a hazardous condition.

Do not overfill the tank. Do not fill the tank neck.

Never operate the vehicle with the fuel tank cap removed.

NOTICE

Oxygenated or reformulated gasoline, is mixed with alcohols or ethers. Excessive amounts of these blends can damage the fuel system or cause performance problems. If any performance problems occur, use gasoline with a lower percentage of alcohol or ether. Use clean, regular grade unleaded fuel. An Ethanol blend of no more than 10% is acceptable.

1. Remove the fuel refill cap that is located under the front seat on the passenger side of the vehicle.
2. Fill the tank with clean, automotive grade gasoline. See the following chart for requirements.

FUEL		NOTES
Grade requirement	Regular 87 octane	High altitude or heavy use/load applications can benefit from higher octane gasoline.
Ethanol content	10% maximum permissible	Exceeding the maximum permissible ethanol concentration can deteriorate the engine fuel system and starting performance.
Methanol content	Not permissible	The use of fuels containing methanol is not permissible.

3. Replace the cap when refueling is complete.

STARTING AND STOPPING THE ENGINE

⚠ WARNING *Unintentional roll-back of the vehicle could cause severe personal injury or vehicle damage. To reduce the possibility of vehicle roll-back, keep the brake fully pressed until the engine has started.*

NOTICE

Avoid full throttle starts and fast acceleration until the engine has warmed up.

Always start the engine outdoors or in a well-ventilated space.

1. Sit in the driver's seat.
2. Press and hold the brake pedal.
3. Insert the key and turn the key switch to the ON position.
4. Move the direction selector to the appropriate position.

NOTICE

When the direction selector is moved to the reverse position, a warning alarm will activate to indicate that the vehicle is ready to run in reverse.

5. Slowly press the accelerator pedal to start the engine.
6. When the accelerator pedal is released, the ignition circuit is de-energized and the engine stops. To stop the vehicle more quickly, press the brake pedal.
7. Engage the parking brake and remove the key from the switch before exiting the vehicle.

Starting on a Hill

⚠ WARNING *Unintentional roll-back of the vehicle could cause severe personal injury or vehicle damage. To reduce the possibility of vehicle roll-back, keep the brake fully pressed until the engine has started.*

Remove the ignition key when exiting the vehicle to prevent accidental starting or unauthorized use.

⚠ CAUTION *To decrease the risk of permanent damage to the drive train, do not allow roll-back when you start the vehicle on a hill. Do not use the accelerator and engine to hold the vehicle at a stop on a hill.*

1. Press the brake pedal with your left foot when releasing the parking brake. Keep pressure on the pedal to prevent the vehicle from rolling back.
2. Press the accelerator pedal with your right foot as you release the brake pedal.
3. Press the accelerator pedal with gradual and steady pressure until the vehicle reaches the desired speed.

ACCELERATING

⚠ WARNING *Accidental movement of the accelerator pedal can cause the vehicle to suddenly move and cause severe injury or death.*

Make sure the key is in the OFF position and the parking brake is engaged any time the vehicle is parked.

Apply slow, steady pressure to the accelerator pedal to increase vehicle speed. When you release the accelerator pedal, the engine will stop running.

NOTICE

On mechanical brake vehicles, if the key switch is in the ON position and the parking brake is engaged, the brake releases when you press the accelerator pedal and can cause the vehicle to move suddenly. This is a feature to make sure the vehicle is not driven with the parking brake engaged. Pressing the accelerator pedal is not the recommended method to release the parking brake.

BRAKING

⚠ WARNING *When carrying cargo or towing a trailer, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under load can cause an accident or injury.*

1. Release the accelerator pedal completely.
2. Press the brake pedal to slow the vehicle speed or stop the vehicle completely.
3. Practice slowing and stopping using the brake to become familiar with the controls.

DRIVING PROCEDURE

1. Perform the pre-ride inspection. See page 19.
2. Sit in the driver's seat.
3. Check the surroundings and determine the path of travel.
4. Release the parking brake.
5. Insert the key and turn the key switch to the ON position.
6. Move the direction selector to the appropriate position.
7. With both hands on the steering wheel, release the brake and immediately start to apply gradual and steady pressure to the accelerator pedal.
8. Practice maneuvering the vehicle using the accelerator and brake pedals. Drive slowly and cautiously until you are comfortable with the controls.
9. Do not drive with a passenger until you have at least two hours of experience driving this vehicle.

Coasting

⚠ WARNING *Vehicle speed can increase quickly when driving downhill. Allowing the vehicle to coast downhill at high speeds can cause a loss of control and result in severe injury or death. Limit your vehicle speed by pressing the brake.*

Do not allow the vehicle to coast at speeds that are above the maximum recommended speed. Apply constant brake pressure when descending a hill to control the speed of the vehicle.

DRIVING WITH A PASSENGER


- All passengers must be at least 59 in. (150 cm) tall. Passengers must be able to sit with their back against the seat and both feet on the floor.
- Do not allow more than one passenger in the vehicle with a load deck. If equipped with a rear facing seat, do not allow more than one passenger on the front seat and two passengers on the rear facing seat.
- Do not exceed the number of passengers the vehicle is designed to carry. See VEHICLE SPECIFICATIONS starting on page 47 for seating capacity.
- Travel at speeds appropriate for your skills, your passenger's skills and the operating conditions. Avoid unexpected or aggressive maneuvers that could cause discomfort or injury to the passenger.
- Handling characteristics can change with the added weight of a passenger. Allow more time and distance for braking.

SLIPPERY SURFACES

⚠ WARNING *Skidding or sliding can cause a loss of control. Skidding or sliding can cause a rollover if tires have lost traction, then regain traction suddenly. When operating on slippery surfaces, travel at reduced speed to help maintain control of the vehicle.*

When operating in conditions such as ice, water, muddy trails, loose gravel or freezing temperatures, follow these guidelines:

- Do not operate on excessively rough, slippery, or loose terrain.
- Slow down before entering potentially slippery areas.
- Maintain a high level of alertness, carefully evaluate the path of travel, and avoid quick, sharp turns.
- Correct a skid by turning the steering wheel in the direction of the skid. *Never apply the brakes during a skid.*

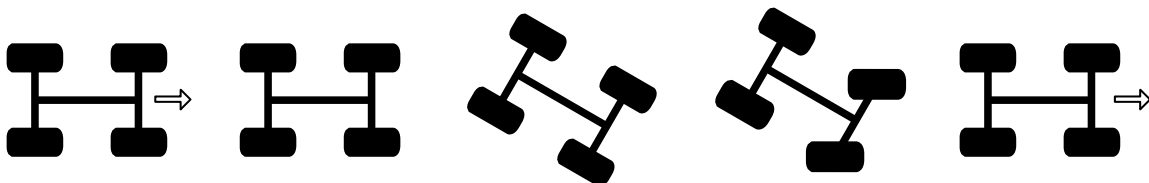

DRIVING UPHILL

When driving up a hill, follow these guidelines:

- Drive straight up the hill.
- Avoid excessively steep hills.
- Keep both feet on the floor or a pedal.
- Check the terrain before driving up a hill. Do not try to climb hills that have excessively slippery or loose surfaces.
- Drive at a steady rate of acceleration and speed.
- Do not drive over the crest of a hill at high speeds. An obstacle, sharp drop, another person, or another vehicle could be on the other side of the hill.
- Do not attempt to drive up a hill that is beyond your skill level.

TRAVERSING HILLSIDES

Traversing a hillside is not recommended. Improper procedure can cause a loss of control or a rollover. Avoid crossing the side of a hill unless absolutely necessary. If traversing a hillside is unavoidable, check the terrain and determine if it can be accomplished safely. Do not proceed if the terrain is beyond the vehicle or driver's ability.

If traversing a hillside is unavoidable, follow these guidelines:

- Drive slowly.
- Use extreme caution.
- Avoid crossing the side of a hill that has a slippery surface.
- Avoid crossing the side of a steep hill.
- When traversing a hillside that has soft terrain, it may be necessary to steer slightly uphill to keep the vehicle traveling in a straight line.
- If you feel that you are losing control of the vehicle, steer downhill if possible to regain control.

DRIVING DOWNHILL



WARNING *When carrying cargo or towing a trailer, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under a load can cause an accident or injury.*

When driving down a hill, follow these guidelines:

- Avoid excessively steep hills.
- Check the terrain carefully before descending any hill.
- Never drive down hills with excessively slippery or loose surfaces.
- Drive slowly.
- Drive straight down the hill. Avoid descending the hill at an angle that could cause the vehicle to lean sharply to one side.
- Apply light and constant pressure to the brakes to maintain slow speed and control of the vehicle.

STALLING ON A HILL

A rollover can result from stalling or rolling backward while climbing a hill. Drive uphill at a constant speed.

If your vehicle completely stalls while climbing a hill:

1. Apply the brakes.
2. Verify that the area behind you is clear.
3. Put the transmission in R (reverse).
4. Use steady brake pressure to control the speed, and allow the vehicle to slowly roll straight downhill.

If your vehicle begins to roll downhill:

1. Do not press the accelerator.
2. Apply the brakes gradually until the vehicle fully stops.

OPERATION

3. Verify that the area behind you is clear.
4. Put the transmission in R (reverse).
5. Use steady brake pressure to control the speed, and allow the vehicle to slowly roll straight downhill.

DRIVING IN REVERSE

When driving in reverse, follow these guidelines:

- Check that the area behind the vehicle is clear of obstacles and people.
- Check left and right fields of vision before driving in reverse.
- Do not back down a steep hill.
- Drive in reverse slowly.
- Press the brakes lightly for stopping.
- Accelerate slow and steady.
- Avoid turning at sharp angles.


PARKING THE VEHICLE

NOTICE

When parking the vehicle inside a garage or structure, the space must be well ventilated. Park the vehicle away from any source of flame or sparks, including any appliance with a pilot light.

Park the vehicle on a flat surface if possible. If parking on an incline is unavoidable, be sure to chock the wheels as shown in the following illustration to keep the vehicle from rolling.

1. Press the brake to stop the vehicle.
2. Engage the parking brake.
3. Turn the key switch to OFF.
4. Remove the key from the key switch to prevent unauthorized use.
5. If parking on an incline, chock the wheels on the downhill end as shown in the following illustration.

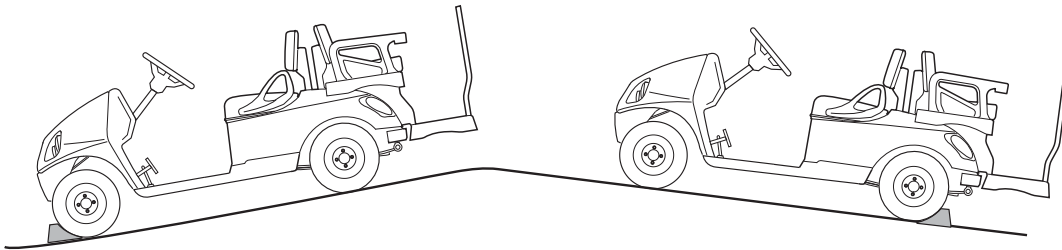

BATTERY

NOTICE

Heavy use of accessories or leaving accessories turned on when the vehicle is not being used can drain the battery and leave insufficient reserve to start the vehicle.

The vehicle uses a starter/generator to start the engine and charge the battery. The engine does not idle; so the battery does not charge while the vehicle is stopped.

Factory accessories are disabled when the key is turned off, but some aftermarket accessories may continue to pull power even when the key is off. For absolute prevention of battery drain from accessories, make sure that both the key is in the OFF position and all accessories are turned off any time the vehicle is stopped.

The generator can supply up to 35 amps. Operation of all accessories can cause the discharge of the battery even if the engine is running and the generator is operating. Discharging the battery is known as deep cycling. The battery is not a deep cycle model. It is a starting battery. Multiple deep cycling causes early failure of the battery.

If the battery discharges, charge it with a 12-volt charger that is rated at 10 amps or less and according to the instructions supplied by the manufacturer of the charger.

HAULING CARGO

WARNING

Hauling cargo incorrectly can alter the vehicle handling characteristics and cause a loss of control, brake instability, and possibly lead to serious injury or death.

Never exceed the maximum weight capacity of the vehicle. The total load (operator, passenger, accessories, and cargo) must never exceed the maximum weight capacity of the vehicle. See the chart in MAXIMUM CAPACITIES on page 25.

Position the load as far forward, and as low as possible in the load deck.

Secure all loads before operating. Unsecured loads can shift and create unstable operating conditions.

Operating the vehicle with passengers on the load deck can result in severe injury or death. Never allow a passenger to ride on the load deck. Passengers must always ride seated in the passenger seat.

Drive slowly and carefully.

Operate only with stable and safely arranged loads. When handling loads that are impossible to center in the load deck, make sure the load is secured as tightly as possible and operate the vehicle with extra caution.

Reduce speed and allow greater distances for braking when hauling cargo.

Heavy loads affect braking and handling characteristics. Use extra caution when applying brakes with a heavily loaded vehicle. Avoid terrain or situations that may require reverse downhill travel.

Use extra caution when operating with loads that extend over the load deck sides. Stability and maneuverability can be affected and increase the risk of a rollover.

This vehicle is designed to carry specific capacities. Read and comply with the load distribution warnings on the warning label affixed to the load deck. The total load (operator, passenger, accessories, and cargo) must never exceed the maximum weight capacity of the vehicle.

MAXIMUM CAPACITIES

	EXPRESS 4	EXPRESS 6
Maximum Vehicle Weight Capacity	800 lb (363 kg)	1200 lb (544 kg)
Maximum Load Deck Capacity	300 lb (136 kg)	300 lb (136 kg)

- Do not exceed the maximum cargo load capacity.
- Do not exceed the maximum vehicle weight capacity (includes the weight of the operator, passenger, cargo and accessories).

FLIP SEAT/ LOAD DECK OPERATION

The rear facing seat is for a maximum of two passengers. The seat can be converted into a load deck.

⚠ WARNING *Always fill the forward seating capacity prior to seating any passengers on the rear flip seat.*

Never fill a gas container on the load deck. Static discharge can ignite gasoline vapor and cause an explosion.

Only two passengers allowed on the rear facing seat. Never leave small children alone on the seat. Keep both arms and legs inside the vehicle boundary at all times.


To change from passenger seating to a load deck follow the steps below:

- Remove any items from the seat.
- Rotate the seat bottom toward the rear of the vehicle. The seat bottom board will rest on the seat structure.

⚠ WARNING *To reduce the possibility of severe injury or death DO NOT carry passengers on the load deck.*

To change from a load deck to passenger seating follow the steps below:

- Remove any cargo from the load deck.
- Close storage bucket lid (if open).
- Rotate the seat back and seat bottom toward the front of the vehicle.

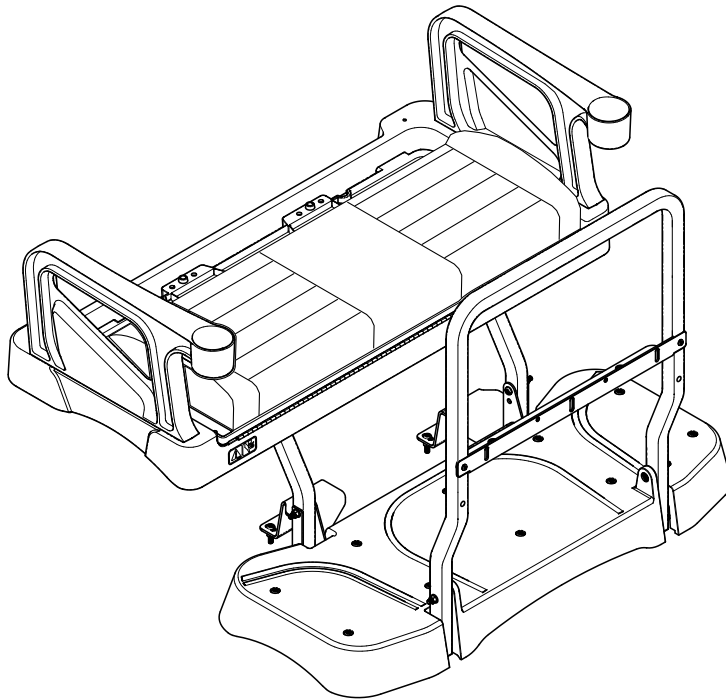

VEHICLE MAINTENANCE

MAINTENANCE SAFETY

WARNING

To prevent serious injury or death, follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.

Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.

Remove all jewelry before you service the vehicle.

Do not allow loose clothing or hair to contact the moving parts.

Do not touch hot objects.

The drive wheels must be lifted and supported on jack stands before performing any service to the powertrain while the motor is in operation.

Chock the wheels and support the vehicle with jack stands. NEVER get under a vehicle that is supported by a jack alone. Lift the vehicle according to the manufacturers instructions.



When servicing the vehicle, always wear eye protection. Be careful when working around batteries, using solvents, or compressed air.

Use insulated tools within the battery area to prevent sparks or battery explosion.

Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause high amperage, or get extremely hot. Battery acid and hydrogen gas can cause bodily injury. Keep hands, face, feet and body away from any area that can expose them to injury if an unexpected situation occurs.

After performing maintenance, test the vehicle in a safe area that is free from vehicle and person traffic.

NOTICE

To decrease the risk of engine damage, do not operate the vehicle at full throttle for more than 5 seconds if the drive wheels are lifted off the ground.

SCHEDULED MAINTENANCE

Consistent inspection, adjustment, and lubrication of some components are necessary to maintain the vehicle so that it remains in safe and reliable condition. Refer to the SCHEDULED MAINTENANCE CHART on page 28 for detailed requirements.

Inspect, clean, lubricate, adjust, and replace parts as necessary. Use manufacturer or equivalent replacement parts.

Record the maintenance items performed along with details in the MAINTENANCE LOG beginning on page 53.

NOTICE

Service and adjustments are important for safe and reliable vehicle operation. If not familiar with safe service and adjustment procedures, have a certified dealer perform the operation.

Initial Service Requirements

Perform the additional inspection or maintenance at the initial service interval indicated, in addition to regular intervals. See SCHEDULED MAINTENANCE CHART on page 28. The initial service is required for optimum performance and reliability.

- engine oil and filter
- starter/generator belt

Severe Use Conditions

Vehicles subjected to heavy or severe use must be inspected and serviced more frequently than those of normal use patterns. The following conditions are considered severe use:

- frequent or prolonged use in a dusty environment
- frequent use in mud, water or sand
- prolonged low speed operation
- short trips in cold weather
- prolonged heavy load operation

SCHEDULED MAINTENANCE CHART

Perform all services at the maintenance interval reached first.

S –Indicates operations that need to be performed on vehicles subjected to severe use.

E –Indicates emission-related services (Failure to do this maintenance will not void the emissions warranty but may affect emissions).

D –Indicates services that must be performed by an authorized dealer.

Item	Interval (perform at interval that comes first)		Remarks	Page
	Hours	Calendar		
Steering		Pre-ride	Check for smooth and free operation.	
Front suspension		Pre-ride	Inspect. Check for leaks and loose or missing hardware.	
Rear suspension		Pre-ride	Inspect. Check for leaks and loose or missing hardware.	
Tires		Pre-ride	Check condition and pressure.	32
Wheel lug nuts		Pre-ride	Check for loose or missing.	33
Accelerator		Pre-ride	Check for smooth operation.	
Brake system		Pre-ride	Check for proper operation.	40
Frame hardware		Pre-ride	Check for loose or missing.	
Fuel and engine oil level		Pre-ride	Check for correct level.	30
Air filter		Pre-ride	Inspect. Clean as needed.	39
Headlights and taillights		Pre-ride	Check operation. Replace bulbs as needed.	34
Reverse warning alarm		Pre-ride	Check operation.	
Switches		Pre-ride	Check operation.	
Fluid leakages		Pre-ride	Inspect entire vehicle for leaks	
CVT belt		Pre-ride	Check condition.	
Engine oil and filter		Initial Service	Replace oil and filter at first 50 hours of operation.	35
Starter/generator belt		Initial Service	Check between first 15 and 20 hours.	
Wheels		Weekly	Check condition of rims, missing or loose lug nuts.	33
S E Air filter		Weekly	Inspect. Clean as needed.	39
S Cooling fan		Weekly	Check for build-up of dirt inside blower housing and fins; clean as necessary.	
S Engine oil		Weekly	Check level; add as necessary.	35
Starter/generator belt		Weekly	Check condition.	
S Brake pads	10	Monthly	Inspect. Replace as needed.	
Parking brake	20	Monthly	Conduct brake performance test; adjust as necessary	
Controller	20	Monthly	Check operation of controller braking force.	
Wiring	20	Monthly	Inspect for loose connections, broken or missing insulation.	
Direction selector	20	Monthly	Inspect attachment and mechanism; adjust as necessary.	
Steering	20	Monthly	Check for excess play, loose or missing hardware.	
S Tie rods	20	Monthly	Check for excess play, bent rods, loose or missing hardware.	
Engine	20	Monthly	Check for unusual noise, vibration, acceleration, oil leaks.	
Rear axle	20	Monthly	Check for leakage; add oil as required.	
Throttle/governor linkage	50	3 Months	Check operation and governed speed.	
E Fuel system	50	3 Months	Check for leakage at tank, cap, lines, filters, pump, fuel rail.	
Front axle	50	3 Months	Check for damage, loose or missing hardware.	

Item	Interval (perform at interval that comes first)		Remarks	Page
	Hours	Calendar		
Parking brake	50	3 Months	Inspect linkage rods, latch arm, catch bracket. Lubricate with light oil (Do not lubricate cables or brake latch).	
S Engine electrical system	50	3 Months	Check coil/spark plug wires for cracks or loose connections.	
S Rear suspension	50	3 Months	Inspect shocks for leaks, worn bushings, loose or missing hardware.	
S Front suspension	50	3 Months	Inspect strut for leaks. Check hubs and kingpins, for excessive play, worn bushings, loose or missing hardware.	
Front wheel alignment	50	3 Months	Inspect for unusual tire wear; align if necessary.	
S Battery	125	6 Months	Inspect terminals. Clean as needed.	42
King pins	125	6 Months	Check for excessive play and tightness of retaining nuts.	
Rear axle	125	6 Months	Check for unusual noise, loose or missing hardware.	
S E Air filter	125	6 Months	Inspect; clean as necessary.	
CVT belt	125	6 Months	Inspect for cracks, fraying and excessive wear.	
Direction selector	125	6 Months	Check for wear and smooth movement; lubricate shaft with light oil if necessary.	
Steering	125	6 Months	Inspect bellows and pinion seal for damage and leakage.	
Rack end ball joint	125	6 Months	Check for noise and loose or missing hardware.	
S Air Filter	250	Yearly	Replace.	
S Oil filter	250	Yearly	Replace (with oil change).	
S Engine oil	250	Yearly	Replace. See RECOMMENDED LUBRICANTS AND FLUIDS on page 30 for type and capacity.	30
S Rear axle	250-300	Yearly	Check fluid level; add if required.	
S Front wheel bearings	250-300	Yearly	Check and adjust as necessary.	
S Brakes	250-300	Yearly	Clean and adjust. Check brake shoe linings; replace if necessary.	
S Muffler/exhaust system	250-300	Yearly	Check hardware. Inspect for leaks at head and muffler gaskets.	
Valves - intake/exhaust	250-300	Yearly	Check cold.	
S E Spark plug	250	Yearly	Replace and gap new.	39
Cylinder head and piston	500	5 years	Remove carbon.	
Cylinder head and piston	500	5 years	Check valve seats for carbon buildup; clean if necessary.	
Rear axle	500	5 years	Replace fluid.	

RECOMMENDED LUBRICANTS AND FLUIDS

Check and lubricate all components at the intervals shown in the SCHEDULED MAINTENANCE CHART beginning on page 28.

Item	Capacity	Lubricants/Fluids		Notes
Engine oil	1.3 qt. (1.25 L)	10W-30	Light duty use engines	See page 35.
		10W-30	Heavy duty use in air temperatures below 40° F (4° C)	
		10W-40	Heavy duty use in air temperatures above 40° F (4° C) after 100 hour break-in period	
Fuel	6.0 gal. (22.7 L)	Unleaded; 87 octane min10% ethanol content max.		See page 20.
Rear axle oil	51 oz. (1.5 L)	MOBIL 424		
Rear axle friction modifier	2 oz. (60 ml)			

REPLACEMENT OF MAINTENANCE ITEMS

These items or their equivalents can be purchased through an authorized dealer, directly from your dealer or any other qualified source.

Item	Part Number
Oil Filter	607454
Air Filter	28463G01
Spark Plug (NGK BPR2ES)	607462
Starter/Generator Belt	26414G1
Clutch Belt	618630
15A Fuse	636455G13
10A Fuse	636455G12
Fuel Pump Relay	663593
LED Headlight Assembly	651411G03
Turn Signal Bulb	619102
LED Taillight	10014910
5A	636455G10
20A	636455G14
Accessory Relay	603282

LIFTING THE VEHICLE



WARNING Read and comply with all of the following warnings and lifting procedures to prevent the possibility of the vehicle falling and causing serious injury or death.

For some maintenance procedures, it is necessary to lift the vehicle. Comply with the following warnings and follow the lifting procedure to ensure the safety of you, your vehicle and surroundings.



WARNING The vehicle must be on a firm and level surface for lifting.

Remain constantly aware that the vehicle is not stable during the lifting process.

Place the jack and jack stands only in the areas indicated in the following illustration.

Do not get under a vehicle until it's stability on the jack stands is verified; never get under a vehicle while it is on a jack alone.

Put wheel chocks in front and behind all wheels that are not being lifted.

⚠ WARNING

Do not allow anyone to remain or get on the vehicle at any time during the lifting process or when the vehicle is lifted.

When performing any service to the drive train, lift the drive wheels off the ground.

Tools

- jack
- jack stands (4)
- wheel chocks

Lifting Front


1. Chock the rear wheels to keep the vehicle from rolling backward.
2. Put a jack under the center of the front axle.
3. Raise the vehicle with the jack.
4. Install jack stands under the front frame cross member as shown.
5. Lower the vehicle until it rests on the jack stands.
6. Remove the jack.
7. Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lifting Rear

1. Chock the front wheels to keep the vehicle from rolling forward.
2. Put a jack under the center of the rear frame cross member.
3. Raise the vehicle with the jack.
4. Install jack stands under each end of the rear axle.
5. Lower the vehicle until it rests on the jack stands.
6. Remove the jack.
7. Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lowering Vehicle

1. Make sure chocks are still in place on any wheels that remain on the ground.
2. Put the jack in the same location that was used to raise the vehicle.
3. Raise the vehicle enough to remove the jack stands. Remove the jack stands from underneath the vehicle.
4. Slowly lower the vehicle to the ground and remove the jack.

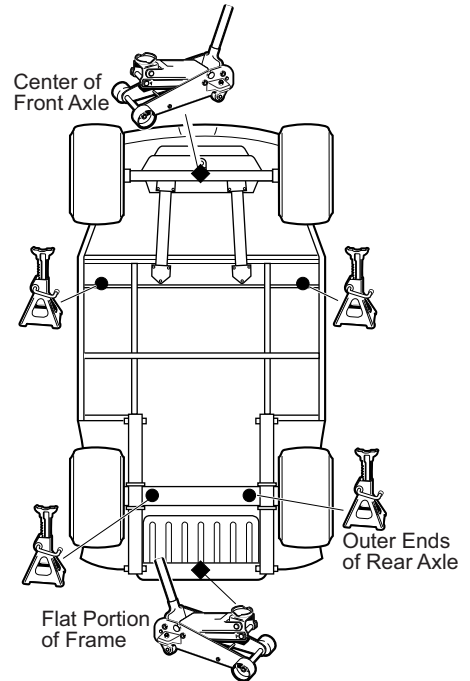**VEHICLE CLEANING AND CARE**

Keeping your vehicle clean is not only beneficial to its appearance but can also help extend the life of various components.

Washing the Vehicle**NOTICE**

Do not use a pressure washer to wash the vehicle. High water pressure can damage components.

Some products, including insect repellents and chemicals, will damage plastic surfaces. Do not allow these types of products to contact the vehicle.

- Do not use a pressure washer to clean the vehicle.
- Use an automotive type cleaner or mild soap to wash the vehicle. Harsh cleaners can scratch the finish.
- Use clean or new cloths and pads for washing. Reused cloths and pads can contain dirt particles that will scratch the finish.
- Use a sponge or soft brush and a soap/water solution to clean the vinyl seats. Rinse with clean water.
- Use an automotive type wash cloth to wash the body of the vehicle. To prevent the soap from drying on the vehicle, rinse with clean water frequently.
- Clean the windshield with water and a clean cloth. Remove small scratches with a plastic polish.

VEHICLE MAINTENANCE

- Clean the bottom of the vehicle where mud or dirt can collect. Loosen any packed sediment to help with removal. Be careful not to damage the paint.
- Dry the vehicle with a chamois before the water dries to prevent water spots.

Polishing the Vehicle

- Do not use medium to heavy duty compounds on the finish. Use wax that is for clear coat automotive finishes only. Do not apply wax or polish to matte finish surfaces.
- Use clean or new cloths and pads for polishing. Old or reused cloths and pads can contain dirt particles that will scratch the finish.

TIRES

Follow the tire maintenance procedures as instructed in this manual and on the labels on the vehicle.

Always use the approved size and type of replacement tires. See Vehicle Specifications for the proper tire type and size.

WARNING

Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.

Inflate all tires to the same pressure. Operating with unequal or incorrect pressure can adversely affect steering and handling and could cause an accident resulting in severe injury or death.

To decrease the risk of tire explosion, do not exceed the tire inflation rating on the tire sidewall. Make sure the tires are properly inflated at all times of operation. See Tire Pressure on page 32

To decrease the risk of tire explosion, inflate small amounts of air into the tire at intervals to allow the bead to seat properly. Because of the low volume of the small tires, over inflation can occur in seconds. Never exceed the tire inflation pressure rating on the tire sidewall when seating a bead. Protect your face and eyes when you remove a valve core.

When you remove the wheels, use only sockets made for impact wrenches to decrease the risk of injury by a broken socket.

Do not use tires with a low rated pressure. Do not use tires that have a recommended tire inflation pressure less than the tire inflation pressure recommended in the owner's manual.

Do not over inflate the tires. Excess pressure can cause the tire to separate from the wheel or cause a tire explosion.

Tire Pressure

Maintaining correct tire inflation pressure is essential for safe vehicle operation. You can vary the inflation pressure, within the recommended range to suit the condition of the terrain.

TIRE PRESSURE RANGE	TERRAIN CONDITIONS	RECOMMENDATION
22 - 26 psi (152 - 179 kpa)	hard surfaces or pavement	Inflate to higher pressure within the range; never exceed maximum pressure indicated.
	soft terrain or turf	Inflate to lower pressure within the range to reduce potential damage to the terrain or turf.

Tire Repair

Tools

- lug wrench, 3/4"
- impact socket, 3/4"
- impact wrench
- torque wrench, ft.lbs.

NOTICE

Tire plug tools and plugs are available at automotive outlets. The tire does not have to be removed from the wheel to install the tire plug.

Use a tire plug to repair small holes in the tread part of the tire. For large holes or holes/cuts in the tire sidewall, the tire must be replaced.

1. Remove the wheel from the vehicle. See Wheel Removal on page 33
2. Locate the leak in the tire.
 - a. If the tire is very low or flat, fully inflate the tire.
 - b. Brush soapy water over the surface of the tire. Air bubbles will be visible where the air is leaking from the tire.
 - c. Mark the hole with chalk.
3. Install the plug according to the manufacturer's instructions.
4. Install the wheel on the vehicle. See Wheel Installation on page 33
5. Fully inflate the tire. See Tire Pressure on page 32

Tire Replacement

Tire replacement requires a tire mounting machine, and must be done by a qualified tire center or an authorized dealer.

WHEELS

⚠ WARNING *Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.*

⚠ WARNING *The wheel spacers and wheel bolts provided must not be modified in any manner. Assemble per instructions. Confirm adapters or spacers are sitting flush after assembly and properly torque wheel bolts and lugs. Not properly torquing or inspecting could result in vibration, wheel loss, serious injury, or death.*

⚠ CAUTION *To decrease the risk of component damage, do not tighten the lug nuts to more than the torque specified below.*


Check the lug nuts for tightness at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

Wheel Removal

Tools

- lug wrench, 3/4"
- impact socket, 3/4"
- impact wrench
- torque wrench, ft.lbs.

1. Lift the vehicle. See LIFTING THE VEHICLE on page 30
2. Remove the lug nuts.
3. Remove the tire from the vehicle.

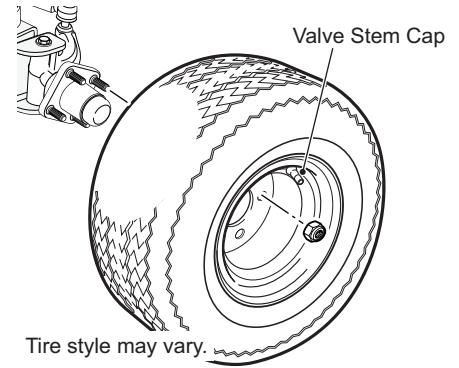

Wheel Installation

Lug Nut Torque	65 - 85 ft.lbs. (88 - 115 Nm)
----------------	-------------------------------


NOTICE

To decrease the risk of component damage, do not tighten the lug nuts to more than the specified torque.

Always install lug nuts using a cross sequence pattern to ensure the even seating of the wheel against the hub.

1. Install the wheel on the hub with lug nuts. Make sure the valve stem is to the outside.
2. Finger tighten the lug nuts.
3. Using the cross tightening pattern shown to the right, tighten the lug nuts to 65 - 85 ft.lbs. (88 - 115 Nm). Tighten in increments of 20 ft. lbs. (27 Nm).

Lug Nut Tightening Pattern

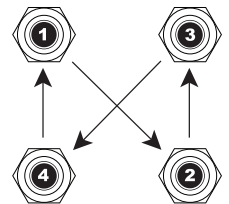

LIGHTS

- Clean the lights frequently to maximize visibility.
- Replace burned out bulbs promptly.


CAUTION *Do not operate this vehicle at night or in low light if any bulbs are burned out. Poor lighting reduces visibility that could cause an accident resulting in severe injury or death.*

NOTICE Replacement bulbs are available from a local Distributor, an authorized Branch or the Service Parts Department.

CAUTION *Light components can get hot if they have been in operation. Allow the lights to cool before servicing to prevent burns to the skin.*


LED Headlight Assembly Replacement

1. Disconnect the headlight harness from the headlight.
2. Remove the screws securing the headlight assembly to the headlight bezel.
3. Remove the headlight assembly and install the new one with screws.
4. Connect the harness to the headlight assembly.

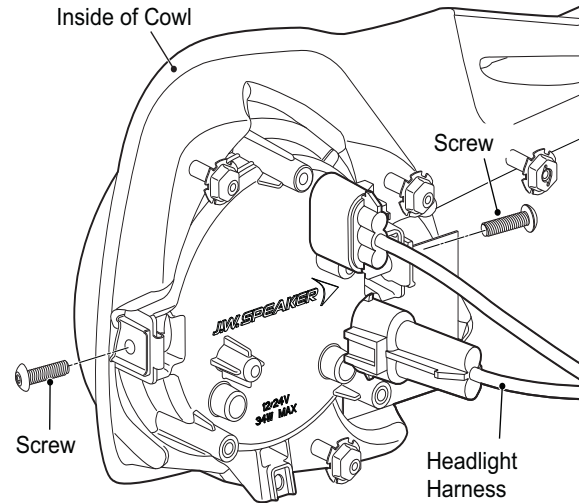

LED Tail Light/Brake Light Assembly

1. Locate the assembly on the inside of the rear wheel well.
2. Disconnect the taillight harness from the taillight.
3. Remove the three plastic screws and washers securing the LED to the headlight bezel.
4. Secure the new LED into the headlight bezel using the three screws and washers.
5. Reconnect the main harness to the new LED.

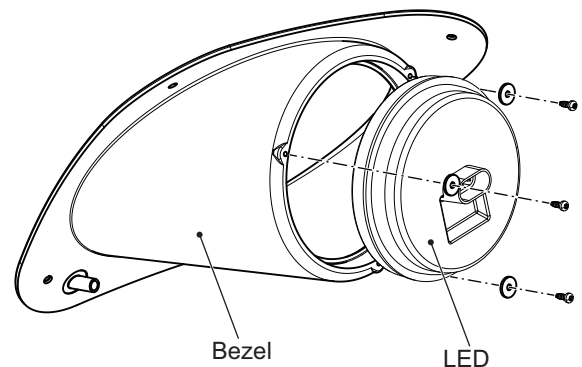

FUSE REPLACEMENT

The fuse block is under the driver seat.

NOTICE *Have the vehicle inspected by an authorized dealer if fuses continue to blow after they have been replaced.*

1. Lift the seat bottom to access the fuses.
2. Remove the old fuse and replace with a new fuse of the same type and size.
3. Fuses are available from a local Distributor, an authorized Branch, or the Service Parts Department.

6	REV BUZZ(15A)	5	5	OPT ACC	3	2(86)	1(30)
						FUEL PUMP RELAY	
12	ENG MAIN(15A)	11	10	OPT ACC	9	8(87)	7(85)
18(86)	17(30)			USB(5A)	15	14	13
	ACCESSORY RELAY		16				
24(87)	23(85)	22	21	TURN SIG(15A)	20		19
						12V/HORN(20A)	
						BRAKE SW(15A)	

FOUR CYCLE ENGINE

The engine is an air cooled, 4-stroke, OHV, single cylinder gasoline engine. It has a pressure fed lubrication positive displacement oil pump with a cartridge type full flow oil filter and a counter rotating balance shaft.

NOTICE

The engine uses more oil during the first hours of operation, than after the internal parts are run-in. As the run-in process occurs, oil use will gradually decrease until it stabilize.

Engine Specifications

Engine Model	EFIA-1
Type.....	Four cycle, OHV
Number of Cylinders	1
Displacement.....	401 cc
Rated Horsepower.....	13.5 hp
Spark Plug Type	NGK BPR2ES
Spark Plug Gap	.028" - .031" (.70 - .80 mm)
Cooling	Forced Air Cooled
Oil Filter	Cartridge Type Full Flow Filter
Oil Pump.....	Positive Displacement Pump

CHECK THE OIL LEVEL

Check the engine oil at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

Tools

- funnel
- clean lint-free cloth

CAUTION

Wear protective gloves to prevent scalding from hot engine oil.


Check the engine oil level when the engine is warm and the vehicle parked on level surface.

1. Turn key switch to the OFF position and engage the parking brake.
2. Allow oil to drain into crankcase.
3. Wipe the top of the engine clean with a cloth to remove debris that could fall in the engine.
4. Remove the dipstick and wipe off the entire length with a clean lint-free cloth.
5. To get an accurate level reading, wipe oil from the dipstick and insert back into the opening.
6. Remove the dipstick again and check the level. The oil level must be in the area between L and H (in the crosshatch) on the dipstick.
7. The engine can be operated safely as long as oil is within the safe operating range as indicated on the dipstick.

NOTICE

The lack of oil or low oil level can damage the engine. Do not operate vehicle if oil level is below the safe area indicated on the dipstick.

8. If the oil level is below the L line, add engine oil into the dipstick hole until the level is between L and H.

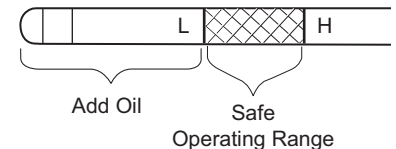

NOTICE

Excessive oil can damage the engine. Oil expands as it gets hot, so do not overfill.

9. If the oil level is above the H line, pump out the excessive oil with a siphon pump.
10. Replace the dipstick.

NOTICE

The oil dipstick/fill cap must be in place before operating the engine. Failure to install the dipstick/fill cap will result in oil contamination or oil being discharged into the engine compartment.

See **RECOMMENDED LUBRICANTS AND FLUIDS** on page 30 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Do not overfill. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

11. When the level is correct, replace the dipstick.

CHANGE THE ENGINE OIL

Change the engine oil at the initial service and then intervals indicated in the **SCHEDULED MAINTENANCE CHART** on page 28.

Tools

- ratchet
- socket, 19 mm
- Extension, 8"
- universal strap wrench
- funnel
- drain pan

NOTICE

See **RECOMMENDED LUBRICANTS AND FLUIDS** on page 30 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Do not overfill the oil tank. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

If vehicle is to be stored over winter months, it can be stored with old oil left in engine. The oil should be changed as part of spring maintenance to remove any moisture that has accumulated during storage.

Remove the Engine Oil

CAUTION

Wear protective gloves to prevent scalding from hot engine oil.

Change the engine oil when the engine is warm and the vehicle is parked on a level surface.

1. Turn the key to OFF and engage the parking brake.
2. Wipe the top of the engine clean with a cloth to remove debris that could fall in the engine.
3. Remove the oil fill cap.
4. Place a drain pan under the oil drain plug at the rear of the engine base.
5. Remove the drain plug and allow the oil to completely drain into the pan.





NOTICE

At the first oil change, small metal chips and lint may be found. This is normal, resulting from the break-in period. Inspect the filter at every oil change. The presence of large metal chips could indicate possible damage to the engine.

6. Before installing the drain plug, clean the area around the drain hole with a lint free cloth
7. Inspect the drain plug and o-ring for damage; replace if necessary.
8. Tighten the drain plug to 62 in. lbs. (7 Nm) torque.

Change the Oil Filter

1. Clean the area around filter.
2. Place a drain pan below the oil filter.
3. Remove the filter from the engine and allow the oil to drain.
4. If the filter o-ring remains on the engine surface, remove it and discard it along with the filter.
5. Inspect the new oil filter for any defects.
6. Apply engine oil to the oil filter o-ring.
7. Install the oil filter onto the engine until the o-ring contacts the mounting surface of the engine. Turn the filter 2/3 to 3/4 rotations by HAND(S).

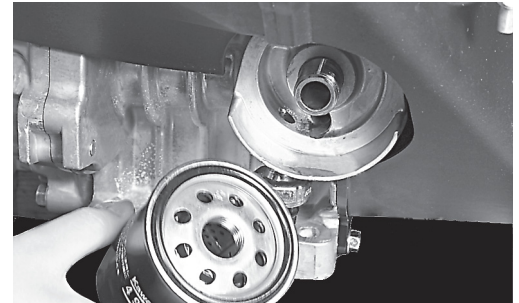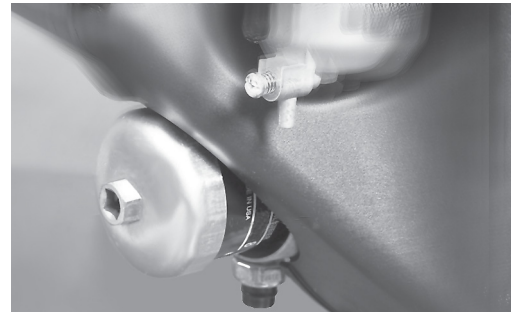

Refill Oil

NOTICE

See **RECOMMENDED LUBRICANTS AND FLUIDS** on page 30 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Engine oil must be high quality oil that meets or exceeds API SF, SG, CC standards.

Do not overfill. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

1. To allow for possible residual oil left in the engine, add slightly less than the rated engine capacity (**RECOMMENDED LUBRICANTS AND FLUIDS** on page 30) into the fill hole.
2. Check the oil level on the dipstick. The oil should be slightly below the H level and within the crosshatch to allow for expansion.
3. Add oil in small quantities with repeated level checks to make sure you are not overfilling the engine.
4. When the level is correct, replace the dipstick.
5. As a final check, check the oil level again with the vehicle on level ground.

Oil increases in volume when warm. The H mark on the dipstick is calibrated for an engine at operating temperature. When the engine is cold, the oil will be below the full mark. The engine can be operated safely as long as the oil is within the safe operating range as indicated on the dipstick. Do not operate the vehicle if the oil level is below the safe area indicated on the dipstick.

STARTER/GENERATOR BELT

Check the starter/generator belt at the initial service and then intervals indicated in the **SCHEDULED MAINTENANCE CHART** on page 28.

Tools

- Belt Tension Gauge
- Wrench, 3/4"
- Wrench, 9/16"
- Ratchet
- Socket, 3/4"

CAUTION


Never allow the tension to exceed 160 lbs. (73 kg) while installing the belt. At the time of installation, the belt must not be rolled over the installed edges of the starter/generator or drive clutch pulleys. Excessive stretch in the belt can cause cord failure.

NOTICE

A loose belt can cause audible vibration and squeal.

VEHICLE MAINTENANCE

1. New belt:
 - a. Tighten a new starter/generator belt to 25 - 30 lbs. (110 - 130 N) tension when a gauge is applied half way between the two pulleys.
 - b. A new belt may be checked manually. A maximum deflection of 3/8" (10 mm) is acceptable.
2. Existing belt:
 - a. Tighten an existing belt to 17 - 18 lbs. (75 - 80 N) tension using the same technique.
 - b. Inspect for cracks or wear. A maximum deflection of 1/2" (13 mm) is acceptable.

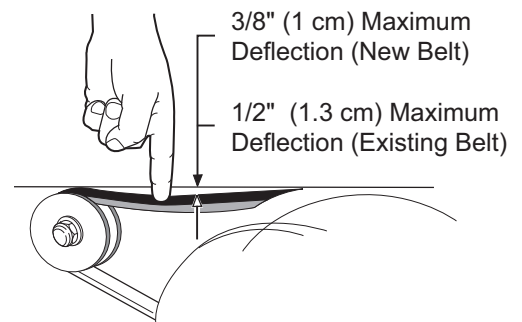

Adjusting the Belt


1. Loosen the starter/generator pivot bolt.
2. While holding the lower adjusting nut with a wrench, loosen the upper jam nut with another wrench. Move the lower nut up or down the adjustment bolt until the correct belt tension is achieved.
3. Hold the lower nut in place and tighten the upper jam nut against it.
4. Tighten the starter/generator pivot bolt.

AIR INTAKE AND COOLING FINS

⚠ WARNING *Keep the engine cooling components clean to reduce the risk of overheating and the possible ignition of accumulated debris.*

Dirt and debris can clog the engine air cooling system. Allow the engine to cool and use the following guidelines after every off-road use:

- Check for a build up of dirt and debris in the air intake and cooling fins.
- Clean the areas shown to prevent engine damage.
- Make sure the linkages, springs and controls are clean.
- Make sure the area around the muffler is free of any combustible material.

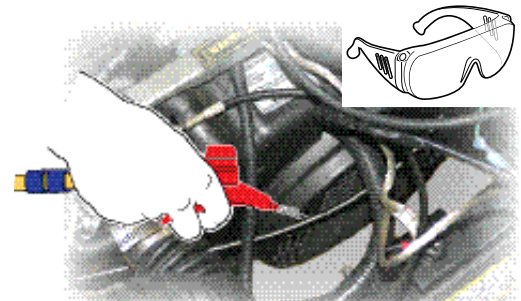

Regular maintenance of the cooling system is required to ensure an adequate supply of air to the cooling fins. Compressed air can be used for routine cooling system maintenance.

Clean the cooling system at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

REAR AXLE

The rear axle has an oil level check/fill plug located on the driver side at the rear of the housing. Unless leakage of axle oil is evident, an annual check is sufficient.


Change the axle oil at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28. The drain plug is located at the bottom of the rear axle housing.

Checking the Axle Oil Level

Tools

- Socket, 13 mm
- Ratchet
- Funnel

1. Clean the area around the check/fill plug.
2. Remove the plug. The correct axle oil level is **just** below the bottom of the threaded hole.
3. If axle oil is low, slowly add oil with a pump until it starts to seep from the check/fill hole. Install the plug.

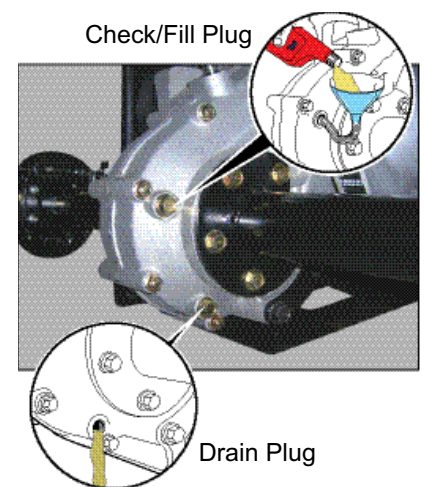


AIR FILTER

Inspect and replace the air filter cartridge at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

NOTICE

The filter is a dry filter. Do not apply oil.

1. Unlatch the cover to access the air filter cartridge.
2. Remove the filter from the housing.
3. Inspect the cartridge.

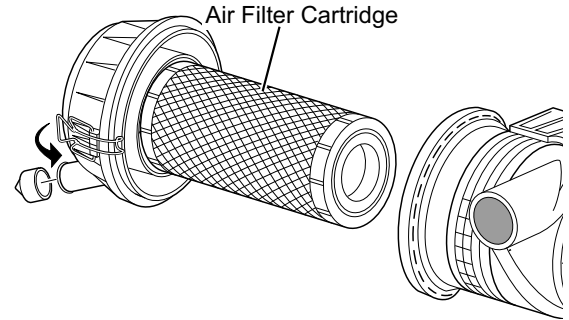

CAUTION

Using compressed air to clean the filter cartridge will damage the filter which can cause engine damage.

4. A lightly soiled filter can be cleaned by tapping out dust. Do not use compressed air on the filter. If the filter is heavily soiled, it must be replaced.
5. Reinstall or replace the filter, making sure it is fully seated in the housing.
6. Replace the housing and secure with the latches on the air cleaner cover.

SPARK PLUG

Tools


- spark plug socket, 13/16"
- torque wrench, ft. lbs
- ratchet
- feeler gauge
- anti-seize compound

CAUTION

Do not over tighten the spark plug. Over tightening the plug can cause damage to the aluminum cylinder head threads.

1. Remove the spark plug when the engine is cold.
2. Inspect and replace the spark plug at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

INSPECT	CONDITION OF SPARK PLUG	ACTION
Electrode	Sooty	Clean carefully with a wire brush.
	Worn or damaged	Replace spark plug.
Condition of plug	Fouled (indicated by a wet, black appearance) possibly caused by:	
	• dirty air filter element or other restrictions in the air intake system	Clean air system. Replace spark plug.
	• incorrectly adjusted valves	Adjust valves. Replace spark plug.
	• park plug wire in poor condition	Repair or replace wire. Replace spark plug.
	• poor fuel quality	Change fuel. Replace spark plug.
Porcelain insulator	Visible cracks	Replace spark plug.
Gap	Correct gap (see illustration at right)	Reinstall spark plug.
	Incorrect gap (see illustration at right)	Adjust to correct measurement.

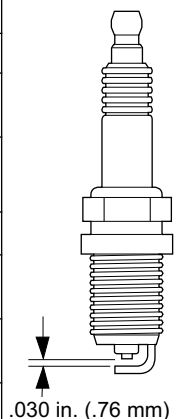

3. Apply a light coat of anti-seize compound to the spark plug threads.
4. Tighten to 16 ft. lbs. (22 Nm) torque.

MALFUNCTION INDICATOR LIGHT (MIL)

The EFI system uses Diagnostic Trouble Codes to report issues. Both active and stored faults are reported by the Engine Control Module (ECM).

- **Active Faults** – These are faults that have been triggered since the key switch was last turned to the ON position.
- **Stored Faults** – These are faults that are no longer active. These faults have not been triggered since the key switch was last turned to the ON position. They were active at one time but were stored when the key switch was turned to the OFF position sometime in the past.

These faults can be read from the MIL located on the rear of the vehicle's seat frame. The MIL can be viewed through the opening between the rear of the center console and the refresher unit. A series of flashes indicates each fault code. A description of how to read codes from the MIL is detailed below. More information about each fault can be obtained from a service technician with the proper equipment.

Follow the below procedure to read active and stored vehicle faults from the MIL:

1. Lock the vehicle's direction selector in Neutral.
2. View the MIL by lifting the front seat bottom.
3. Turn the key switch to the ON position.
4. Observe the sequence of flashes. Each code is separated by five seconds of solid illumination.
 - a. Single-digit fault codes display as a sequence of one-second flashes, with the number of flashes matching the code value (e.g. 8 flashes for MIL code 8).
 - b. Double-digit fault codes display as a combination of 0.3-second flashes for the tens place and 1-second flashes for the ones place.
 - c. Active faults are displayed first, then stored faults are displayed.
 - d. Active faults are displayed whether the engine is running or not. Stored faults only display when the engine is not running.

If there are no active or stored faults, the MIL will illuminate continuously (no flashes) to demonstrate functionality.

The ECM will enter sleep mode after 60 minutes of inactivity. If the key switch is in the ON position and the MIL is not illuminated, press and release the accelerator pedal to wake the system and reveal any active fault codes.

MIL Flash Code	Fault	Recovery Steps
1	Temp Sensor Disconnected / Failure	1. Check that the sensor is connected. 2. If connected, contact an authorized service rep.
2	Throttle Position Sensor Failure	1. Contact an authorized service rep.
4	O ₂ Sensor Disconnected / Failure	1. Check that the sensor is connected. 2. If connected, contact an authorized service rep.
5	High Battery Voltage	1. Verify battery voltage is between 10-16 VDC. 2. If voltage is over 16 VDC, contact an authorized service rep.
5	Low Battery Voltage	1. Verify battery voltage is between 10-16 VDC. 2. If the voltage is below 10 VDC, replace the battery. 3. If the fault persists, contact an authorized service rep.
SOLID	Safeties Active	1. Press and release the accelerator pedal. 2. If the fault is still present while the accelerator pedal is pressed, contact an authorized service rep.
8	Engine Running Rich / Lean	1. Verify that the air filter is not clogged. 2. If the fault persists, contact an authorized service rep.
22	Limp Home	1. Contact an authorized service rep.

BRAKES

⚠ WARNING

Always inspect the pedal travel before operating a vehicle to confirm some brake function is present.

All driving brake tests must be done in a safe location with regard for the safety of all personnel.

NOTICE

Over time, a subtle loss of performance may take place. It is, therefore, important to establish the standard with a new vehicle.

Test and service the brake system at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28.

Periodic Brake Test**NOTICE**

You must have enough space to accelerate to maximum speed before engaging the parking brake. Use a marker to indicate the predetermined line to engage the parking brake that you will use for the performance test.


The Periodic Brake Test must be performed initially and regularly as an evaluation of your vehicle's brake system performance. It is a method of identifying a subtle loss of braking performance over time.

Establish the 'acceptable stopping distance' when your vehicle is new and the brakes are at their peak of performance. As your vehicle is used, a subtle loss of braking performance may be detected, so it is important to establish the standard with a new vehicle.

Actual stopping distances are influenced by weather conditions, terrain, road surface condition, vehicle weight and speed. No specific braking distance can be reliably specified, so it is important to establish a base to test with.

The test is conducted by engaging the park brake instead of the brake pedal to eliminate different pedal pressures, to include affects of linkage mis-adjustment and provide a more accurate test.

1. On a dry, level, clean, paved surface, accelerate the vehicle to maximum speed.
2. Engage the parking brake at the predetermined and marked line.
3. Mark the line where the vehicle comes to a complete stop.
4. If the vehicle stops in a significantly greater distance than the established distance in future tests, or pulls to one side, it should be tested again.
5. If the vehicle fails the second test, discontinue use until it can be inspected and determined safe for operation by a qualified mechanic.

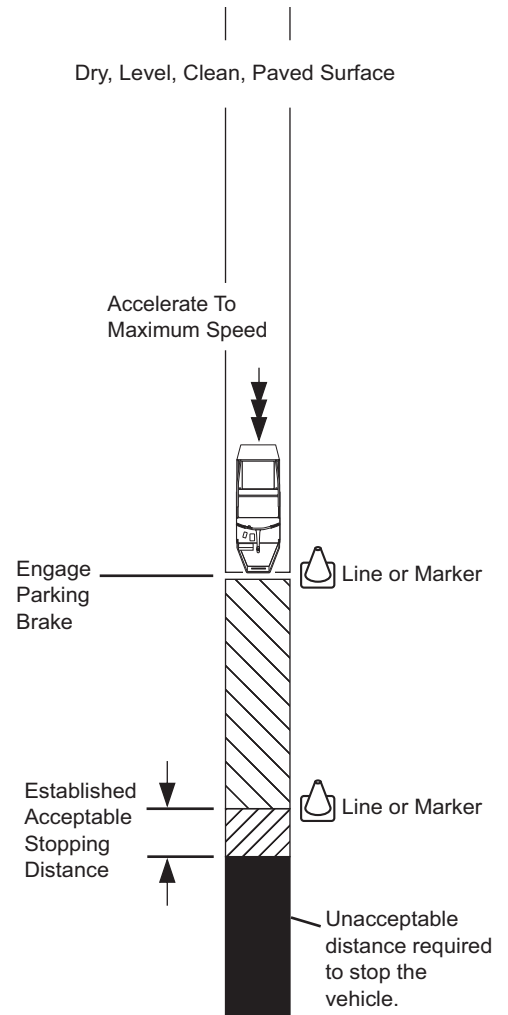

BATTERY

The vehicle has a sealed battery, which requires no maintenance except to keep it corrosion-free, and to test for functionality.

The sealed battery is filled with electrolyte and sealed at the factory. Never pry the seal strip off, or add fluid to the battery.

Inspect the battery terminals at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 28. Clean and tighten as needed.

⚠ WARNING *Use insulated wrenches to prevent direct contact of a wrench with the battery terminals. Direct contact of a bare wrench with battery terminals can cause an explosion resulting in severe injury or death.*

To prevent the risk of battery explosion, keep all flammable materials, open flames or sparks away from the batteries.

⚠ CAUTION *The electrolyte in a battery is an acid solution which can cause burns to the skin and eyes. Completely clean all electrolyte spills that contact the body and eyes with clear water. Contact a physician immediately.*

Neutralize electrolyte spills with a solution of 2 teaspoons (10 ml) sodium bicarbonate (baking soda) mixed in 1 quart (1 liter) of water. Clean with water.

Battery Cleaning

⚠ CAUTION *To decrease the risk of damage to the vehicle or floor, neutralize any acid before you spray the battery with water.*

Always wear eye protection when cleaning the battery.

NOTICE *To decrease the risk of damage to the electrical components surrounding the battery while cleaning, do not use a pressure washer.*

1. Remove corrosion with a wire brush.
2. Wash the top and sides of the battery with a solution of:
 - 1 tsp. (5 ml) baking soda
 - 1 cup (236 ml) water
3. Wash all metal components near the battery.
4. Rinse with tap water and dry with shop towels.
5. After the battery is clean and dry, coat with a commercially available battery terminal spray.

Battery Charging

⚠ WARNING *Hydrogen gas is produced as batteries are charged. Charge batteries only in well-ventilated areas.*

Do not overcharge the battery. Overcharging the battery can cause overheating and possible explosion, resulting in severe injury or death.

NOTICE *Use a battery charger that is designed for charging sealed batteries.*

Keep battery fully charged.

Heavy use of accessories can drain the battery and leave insufficient charge to start the vehicle.

The sealed battery is a 12 V starter battery that supplies power to the starter and accessories. A starter starts the engine and an internal generator charges the battery while the engine is running. Due to heavy use of accessories, the battery can become discharged even if the engine is running and the generator is operating.

It is important to keep the battery fully charged. Since the battery is sealed, a voltmeter or multimeter is required to check voltage.

1. Check the battery voltage with a voltmeter or multimeter.
 - If the voltage measured is 12.8 V or higher, the battery is fully charged and requires no further action.
 - If the voltage measured is less than 12.8 V, recharge the battery.

2. Charge the battery with a charger designed for sealed batteries. Follow the instructions supplied from the manufacturer of the charger.

Discharged Battery

⚠ WARNING *To decrease the risk of severe injury or death from accidental movement, do not use jumper cables to start a vehicle.*

The vehicle has a starter/generator and does not idle. When you start the engine, the starter/generator functions as a starter and with the engine running, it functions as a generator.

The generator can keep the battery charged with short run times, but the generator will not charge a discharged battery.

When the engine starts, the clutches engage and cause the vehicle to move making jump starting both dangerous and impractical.

If the battery has discharged, charge it with a 12-volt charger that is rated at 10 amps or less and according to the instructions supplied by the manufacturer of the charger.

Battery Disposal

Return used batteries to the manufacturer or lead smelter for recycling purposes. For neutralized spills, put any residue in acid-resistant containers with absorbent material such as sand. Dispose in accordance with state and federal regulations for acid and lead compounds. Contact authorized environmental agencies for information about disposal.

Battery Storage

NOTICE A battery will self-discharge over time. The rate of discharge varies depending on the ambient temperature, age, and condition of the battery. Check the battery each month during storage and charge as needed to maintain a full charge.

A full charge will prevent the battery from freezing in winter conditions.

If the vehicle is going to be out of operation for three (3) months or longer, do the following:

1. Remove the battery from the vehicle.
2. Make sure the battery is fully charged.
3. Store it out of the sun, in a cool, dry place.
4. Check the battery voltage each month during storage and recharge as needed to maintain a full charge.

TRANSPORTING THE VEHICLE

⚠ WARNING *Do not ride or allow other people on a vehicle being transported on a trailer or being towed with another vehicle.*

Hauling the Vehicle

⚠ WARNING *Loose cargo or vehicle components can fly off when the vehicle is being transported. Secure or remove all cargo. Inspect the vehicle for loose components prior to transport.*

Do not allow anyone to ride in a vehicle being transported on a trailer.

Remove the canopy top and windshield before transporting a vehicle on a trailer.

- If the vehicle is being hauled on an open trailer or truck at highway speeds, the canopy top must be removed.
 - The rated capacity of the hauling trailer or truck must be more than the weight of the vehicle and load plus 1000 lbs. (454 kg). See VEHICLE SPECIFICATIONS starting on page 27 for the weight of the vehicle.
1. Drive the vehicle onto the trailer or truck.
 2. Engage the parking brake. Leave the direction selector in F (forward).
 3. Turn the key switch to the OFF position.
 4. To prevent the loss of the key, remove it from the key switch.
 5. Make sure the fuel cap is tight.
 6. Make sure the seats are secured.
 7. Secure the vehicle to the trailer or truck with tie downs, straps or ropes.

Towing the Vehicle

⚠ WARNING *Only tow the vehicle for recovery purposes. Ensure brakes and steering are operable.*

Always have a person driving the vehicle to steer and operate brakes when it is being towed.

Do not tow the vehicle above 5 mph (8 kph).


Failure to abide by these instructions could cause harm to vehicle and persons involved.

1. Turn the key switch to OFF.

NOTICE

The direction selector has a neutral lock to prevent the driven clutch from turning the rear wheels when the vehicle is being towed by another vehicle.

2. Lock the direction selector with the neutral lock to ensure the direction selector remains locked in the neutral position.
 - a. Lift the seat to access the neutral lock.
 - b. Pull out and rotate the neutral lock pin handle so that the pointed portion of the handle is to the side of the direction selector cam.
 - c. Move the direction selector toward the area between F and R. During that motion the pin will snap into the hole in the direction selector mounting bracket, preventing movement.
When in this position, the direction selector remains locked in the neutral position.
3. Attach the vehicle to the towing vehicle with a tow bar that is approved by the manufacturer.
4. Release the parking brake if it is engaged.
5. After the vehicle has been towed, unlock the direction selector.
 - a. Pull the neutral lock pin handle out.
 - b. Rotate until the pointed portion of the handle fits into the hole in the direction selector cam.

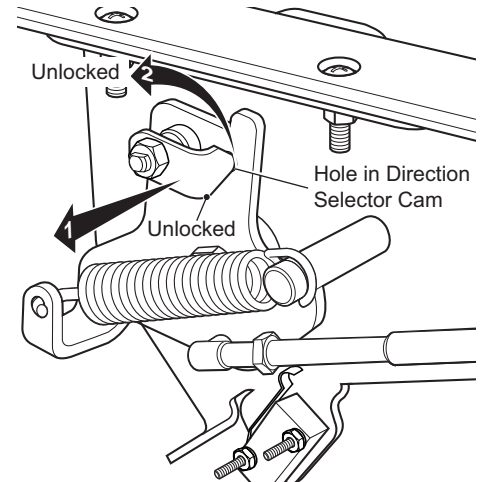

VEHICLE STORAGE

Storing a vehicle for 30 days or more requires proper preparation to prevent a build-up of varnish and gum in the fuel system, and corrosion in the engine. The following procedure will prepare the vehicle for storage:

Store your vehicle in an area that is well ventilated. Cover the vehicle. Covers designed specifically for vehicles are recommended because they allow enough ventilation to prevent condensation and corrosion.

⚠ WARNING *Store the vehicle in a clean, dry area. Do not store in an area with a stove, furnace, water heater, or other appliance that uses a pilot light, or has a device that can create a spark.*

Do not handle fuel in an area that is not adequately ventilated. Do not smoke near the fuel tank or refuel near open flame or electrical items which could produce a spark.

When refueling, inspect the fuel cap for leaks or breaks that could result in fuel spillage.

Always wear safety glasses while refueling to prevent possible eye injury from gasoline or gasoline vapor.

Keep hands, clothing and jewelry away from moving parts. Use caution not to contact hot objects. Raise the rear of the vehicle and support on jack stands before attempting to run the engine.

NOTICE

The vehicle can be stored with the old oil left in the engine. The oil must be changed when the vehicle is removed from storage, before resuming operation. This removes condensation that may have accumulated in the crankcase.

Do not leave the parking brake engaged during the storage period. Use wheel chocks to prevent the vehicle from rolling.

1. Clean the vehicle. See VEHICLE CLEANING AND CARE on page 31.
2. Turn the key switch to the OFF position and put the direction selector in the NEUTRAL position.
3. Chock the wheels to prevent the vehicle from rolling. Do not engage the parking brake.
4. Perform all required routine maintenance indicated in the SCHEDULED MAINTENANCE CHART on page 28.
5. Fully inflate the tires. See Tire Pressure on page 32.
6. Add fuel stabilizer (4 oz. for a full tank of fuel) to the fuel and install the cap securely.
7. Remove the spark plug and pour approximately 1/2 oz. (15 ml) of SAE 10 - 30 weight oil or fogging oil into the cylinder.
8. Rotate the crankshaft by hand several times, and reinstall the spark plug.

Remove from Storage



1. Change the oil.
2. Check the spark plug for tightness. Tighten if necessary.
3. Check all items in the daily pre-ride inspection. See PRE-RIDE INSPECTION on page 19.
4. Lubricate according to the SCHEDULED MAINTENANCE CHART on page 28.

VEHICLE SPECIFICATIONS

EXPRESS 4

Engine	Textron 4-Cycle 24.5 in³ (401 cc)	
Valvetrain	Single Cylinder OHV	
Horsepower (kW)	13.5 hp (10.1 kW) Exceeds SAE J1940 Standard	
Balancer	Internal Counter Rotating Balance Shaft	
Electrical System	Starter / Generator. Solid State Regulator	
Ignition	Electronic Inductive Spark	
Battery	12-Volt Maintenance-Free (525 CCA, 85 minute reserve)	
Key or Pedal Start	Pedal	
Air Cleaner	Replaceable Dry Cartridge	
Lubrication	Pressurized Oil System	
Oil Filter	Spin-On	
Cooling System	Air Cooled	
Fuel System	Closed-loop electronic fuel injection	
Max Fuel Volume	5.96 Gallon (22.6 L)	
Fuel Pump Operating Pressure	43.5 psi (3 bar)	
Speed (Level Ground)	19.5 mph (31.4 kph) Max	
Drivetrain	Automatic, Continuously Variable Transmission (CVT)	
Transaxle	Differential with helical gears	
Gear Selection	Forward - Reverse	
Rear Axle Ratio	11.47:1 (Forward) 14.35:1 (Reverse)	
Dash / IP Storage Capacity	1123 in³ (18403 cm³)	
Steering	Self-compensating reduction rack and pinion	
Front Suspension	Leaf springs with hydraulic shock absorbers	
Rear Suspension	Leaf springs with hydraulic shock absorbers	
Brakes	Dual rear wheel mechanical self-adjusting drum	
Parking Brake	Self-compensating, single point engagement	
Frame	Welded steel with DuraShield™ powder coat and e-coat	
Body and Finish	Injection Molded TPO	
Body and Finish	Injection Molded TPO	
Standard Color	Black	
Seating Capacity	4-person	
Vehicle Load Capacity	800 lb (363 kg)	
Load Deck Capacity	300 lb (136 kg)	
	EXPRESS 4 — Standard	EXPRESS 4 — Lifted
Overall Length	116.5 in (296 cm)	115.6 in (293 cm)
Overall Width	48.75 in (124 cm)	48.5 in (123 cm)
Overall Height (Top of Steering Wheel)	49.125 in (125 cm)	52.5 in (133 cm)
Overall Height (With Canopy)	72.125 in (183 cm)	83.0 in (210 cm)
Wheel Base	64.125 in (163 cm)	65.5 in (166 cm)
Front Wheel Track	35.25 in (89.5 cm)	38.5 in (98 cm)
Rear Wheel Track	39 in (99.1 cm)	38.5 in (98 cm)
Ground Clearance (at Differential)	5.125 in (13 cm)	6.0 in (15 cm)
Turning Radius	9.5 ft (2.90 m)	11.0 ft (3.4 m)
Dry Weight (without batteries)	899 lb (408 kg)	1061 lb (481 kg)
Curb Weight	998 lb (453 kg)	1101 lb (499 kg)
Outside Clearance Circle	19.0 ft (5.79 m)	22.8 ft (7.0 m)
Tires	Kenda K389, 4Ply, 20x9-12	Paramount M/T 23x10-14
Noise	Sound pressure; continued A-weighted equal to or less than 6db(A)	
Vibration, WBV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	
Vibration, HAV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	



Measurement methods were applied per the ISO 2631 and ISO 5349 standards under conditions of typical vehicle surfaces.

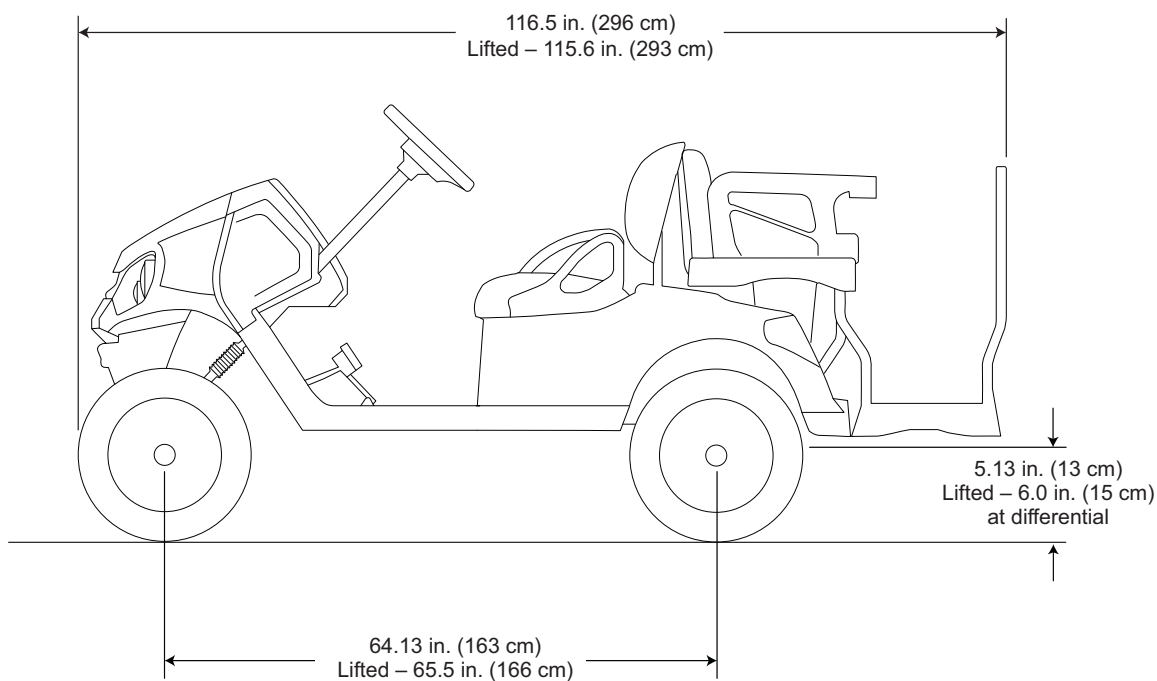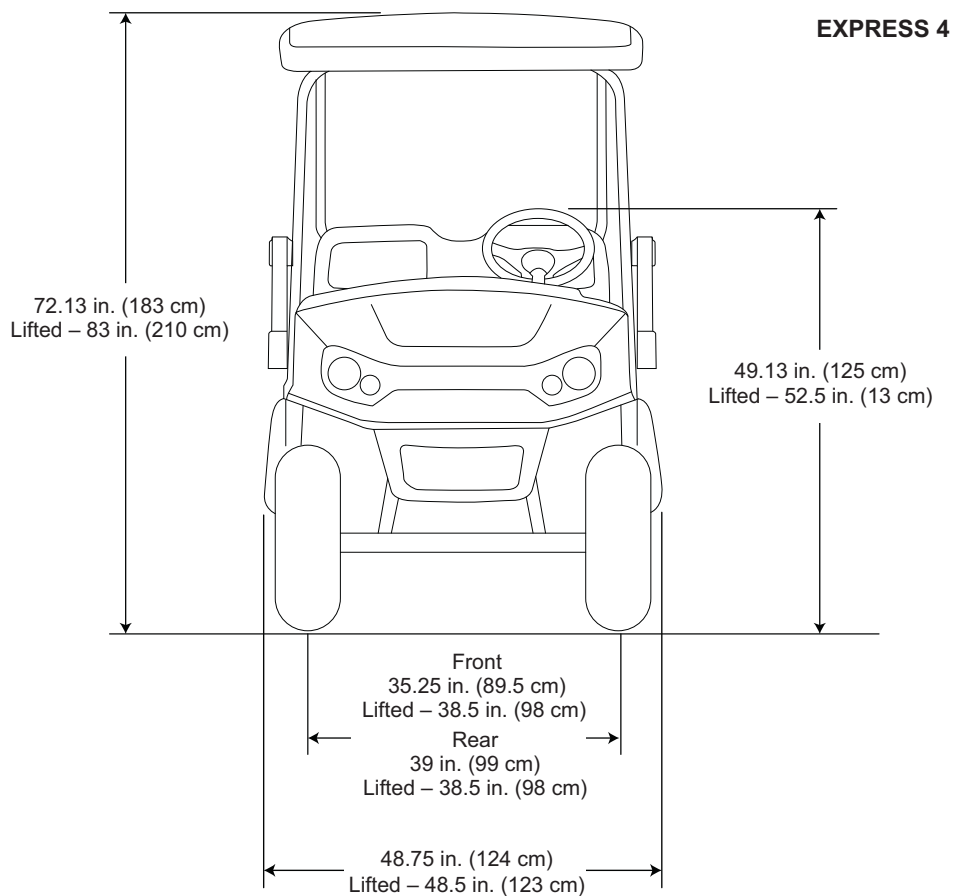

EXPRESS 6

Overall Length	143 in (363 cm)	
Overall Width	50.5 in (129 cm)	
Load Deck Width	40 in (101.5 cm)	
Load Deck Length	32 in (81 cm)	
Engine	Walbro 4-Cycle 24.5 in³ (401 cc)	
Valvetrain	Single Cylinder OHV	
Horsepower (kW)	13.5 hp (10.1 kW) Exceeds SAE J1940 Standard	
Balancer	Internal Counter Rotating Balance Shaft	
Electrical System	Starter / Generator. Solid State Regulator	
Ignition	Electronic Inductive Spark / Magneto	
Battery	12-Volt Maintenance-Free (525 CCA, 85 minute reserve)	
Key or Pedal Start	Pedal	
Air Cleaner	Replaceable Dry Cartridge	
Lubrication	Pressurized Oil System	
Oil Filter	Spin-On	
Cooling System	Air Cooled	
Fuel System	Closed-loop electronic fuel injection	
Max Fuel Volume	5.96 Gallon (22.6 L)	
Fuel Pump Operating Pressure	43.5 psi (3 bar)	
Speed (Level Ground)	19.5 mph (31.4 kph) Max	
Drivetrain	Automatic, Continuously Variable Transmission (CVT)	
Transaxle	Differential with helical gears	
Gear Selection	Forward - Reverse	
Rear Axle Ratio	11.47:1 (Forward) 14.35:1 (Reverse)	
Load Deck Capacity	300 lb (136 kg)	
Vehicle Load Capacity	1200 lb (544 kg)	
Outside Clearance Circle	25.5 ft (7.8 m)	
Steering	Self-compensating reduction rack and pinion	
Front and Rear Suspension	Leaf springs with hydraulic shock absorbers	
Brakes	Dual rear wheel mechanical self-adjusting drum	
Parking Brake	Self-compensating, single point engagement	
Frame	Welded steel with DuraShield™ powder coat	
Body and Finish	Injection Molded TPO	
Standard Color	Black	
	EXPRESS 6 — Standard	EXPRESS 6 — Lifted
Overall Height (Top of Steering Wheel)	51 in (130 cm)	55.5 in (141 cm)
Overall Height (With Canopy)	74.5 in (189 cm)	83 in (211 cm)
Wheel Base	97 in. (245 cm)	97 in. (245 cm)
Front Wheel Track	38.5 in (98 cm)	38.5 in (98 cm)
Rear Wheel Track	38.5 in (98 cm)	38.5 in (98 cm)
Ground Clearance (at Differential)	7.0 in (18 cm)	7.0 in (18 cm)
Turning Radius	14.4 ft (3.9 m)	14.4 ft (3.9 m)
Dry Weight	1090 lb (439 kg)	1150 lb (522 kg)
Curb Weight	1130 lb (540 kg)	1190 lb (540 kg)
Front and Rear Tires	Loadstar Daytona 205/65-10	Paramount M/T 23x10-14
Noise	Sound pressure; continued A-weighted equal to or less than 6db(A)	
Vibration, WBV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	
Vibration, HAV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	
	The uncertainty of measurement is 0.54 m/s².	
	Measurement methods were applied per the ISO 2631 and ISO 5349 standards under conditions of typical vehicle surfaces.	

EXPRESS 6

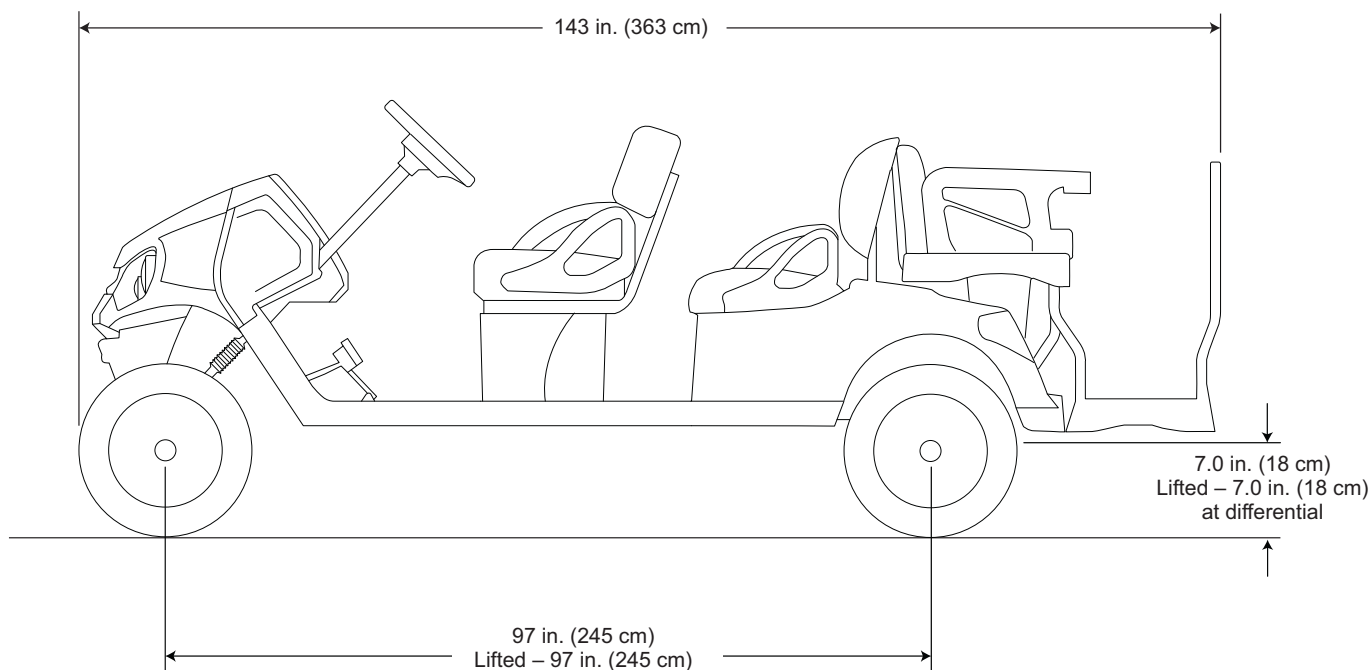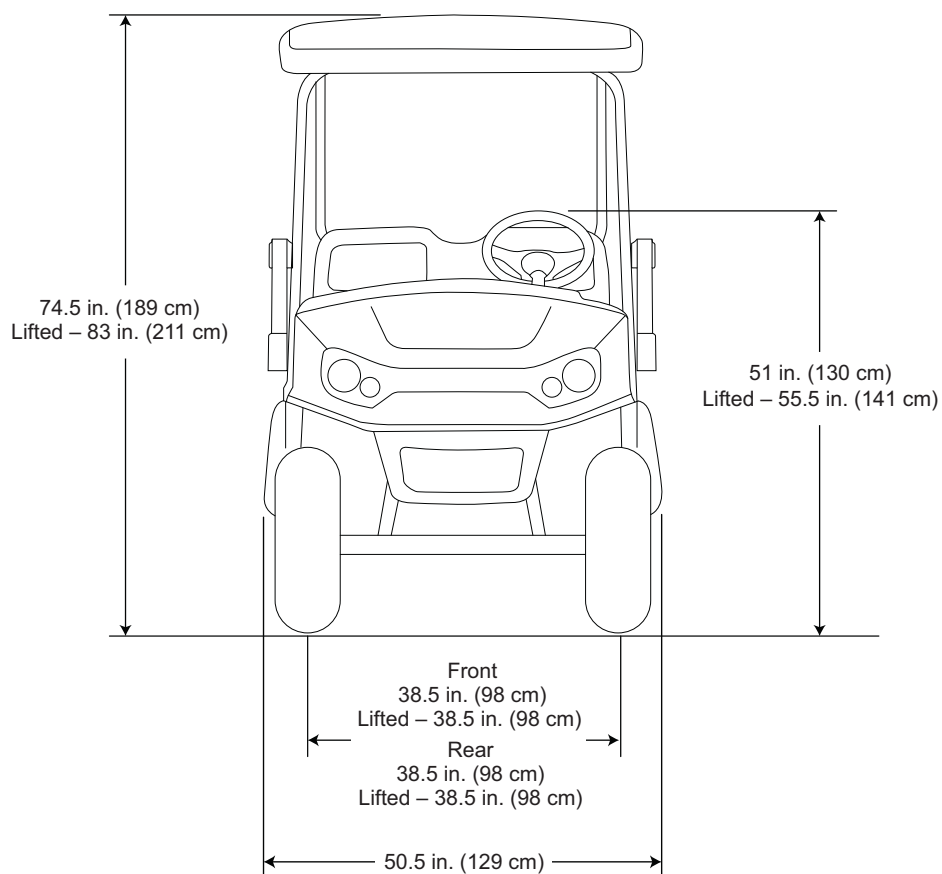

MAINTENANCE LOG

RECORDS

Record periodic maintenance in the following maintenance log.

[illegible]



TEXTRON SPECIALIZED VEHICLES, INC.

1451 Marvin Griffin Road
Augusta, Georgia 30906 - 3852
USA

CONTACT INFORMATION

North America:

Technical Assistance & Warranty:
Phone: 1-800-774-3946
Service Parts Phone:
1-888-GET-E-Z-GO (1-888-438-3946)

International:

Phone: 001-706-798-4311

California Proposition 65



WARNING

The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Parts Manuals and Service Manuals are available from a local Distributor, an authorized Branch, Genuine E-Z-GO Parts & Accessories Department or at www.shopezgo.com.

Copyrighted Material

This manual may not be reproduced in whole or in part without the express permission of the manufacturer.