



OWNER'S MANUAL

RXV 4

with IntelliBrake™ Technology

ELITE
LITHIUM

10108691-A

OWNER'S MANUAL



MODEL YEAR 2026 - CURRENT

MANUFACTURER INFORMATION

Textron Specialized Vehicles, Inc.
1451 Marvin Griffin Road
Augusta, Georgia, USA 30906-3852

1-800-774-3946 Technical Assistance & Warranty
1-888-438-3946 Service Parts
011-706-798-4311 International

www.ezgo.com

Thank you for purchasing this vehicle. Before driving your new vehicle, read this owner's manual to familiarize yourself with safe driving practices, operation, features and controls.

This manual contains instructions for minor maintenance only. Information about major repairs can be found in the service manual. Your dealer has thorough knowledge of your vehicle and wants your total satisfaction with your purchase. We recommend you return to your dealership for all of your service needs during, and after the warranty period.

Repair or replacement parts can be purchased from your dealer or through the manufacturer's parts and accessories department.

These are original instructions as defined by 2006/42/EC.

The manufacturer maintains the right to change the design of the vehicle without responsibility to make the changes on units purchased before changes were made. The information in this manual can change without notice.

All information in this owner's manual is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some discrepancies may be found between your vehicle and the information presented in this publication. The content in this publication is intended for reference use only. The manufacturer is not liable for omissions or inaccuracies. Any reprinting or reuse of the content in this publication, whether whole or in part, is expressly prohibited.

INTRODUCTION

MANUFACTURER'S INTENDED USE	7
WARRANTY AND REGISTRATION	7
BATTERY PROLONGED STORAGE	7
VEHICLE IDENTIFICATION NUMBERS	8
PARTS AND SERVICE MANUALS	8
RADIO COMPLIANCE	9
U.S. FCC RADIO COMPLIANCE	9
CANADA RADIO COMPLIANCE	9

SAFETY

MAXIMUM WEIGHT CAPACITY	11
TIRE PRESSURE	11
OPERATOR SAFETY	11
BODY RESTRAINTS/HAND HOLDS	12
OWNER RESPONSIBILITY	12
Unauthorized Use	12
Operating without Instruction	12
Alcohol or Drugs	12
Before Operating	12
Operation With a Load	12
Reverse Operation	13
Damaged Vehicle	13
Maximum Speeds	13
Different Surfaces	13
Public Roads	13
Turning	13
Uphill Operation	13
Downhill Operation	13
Tires	13
Slippery Terrain	13
BATTERY CHARGING	13
BATTERY DISPOSAL	13
VEHICLE LIFTING	13
VEHICLE MODIFICATION	14
MAINTENANCE SAFETY	14

SAFETY LABELS

OPERATION	15
RUN/TOW SWITCH OPERATION	15
PATENT NOTICE	16
ELECTRIC SHOCK (CE ONLY)	16
HOT SURFACE (CE ONLY)	16
BRAKE RELEASE LABEL	16
MAINTENANCE/TOWING	16
REAR HANDHOLD WARNING LABEL	17

TABLE OF CONTENTS

FEATURES AND CONTROLS

KEY SWITCH / DIRECTION SELECTOR.....	19
INTELLIGAUGE® (IF EQUIPPED)	19
STATE OF CHARGE METER (IF EQUIPPED)	19
DISPLAY SCREEN (IF EQUIPPED)	19
CUP HOLDER.....	19
USB PORT (IF EQUIPPED)	19
USB PORT – SCREEN INTERFACE (IF EQUIPPED)	20
HEADLIGHT SWITCH (IF EQUIPPED)	20
HORN.....	20
TURN SIGNAL (IF EQUIPPED)	20
PREMIUM SWITCH (IF EQUIPPED).....	20
Horn	20
Turn Signal.....	20
Lights	20
ACCELERATOR PEDAL	20
BRAKE PEDAL	20
PARKING BRAKE	20
SEAT BOTTOM	21
CHARGER RECEPTACLE	21
GLOVE BOX / STORAGE COMPARTMENTS	21
CANOPY TOP AND WINDSHIELD	21
OPTIONAL PREMIUM SEAT PACKAGE WITH FLIP-UP ARM RESTS	22
REAR-VIEW MIRROR	22
REAR FACING SEAT AND LOAD DECK	22

OPERATION

SAFETY	23
BEFORE INITIAL USE	23
DAILY INSPECTION	23
BATTERY CHARGER.....	23
PERFORMANCE FEATURES	24
Speed Control	24
Pedal-Up Braking	24
High Pedal Disable Feature	24
STARTING AND STOPPING THE VEHICLE	24
Starting on a Hill.....	24
SEAT BELTS	25
Proper Use of the Seat Belt	25
ACCELERATING	25
BRAKING	25
Coasting	25
DRIVING PROCEDURE	25
DRIVING WITH A PASSENGER	26
SLIPPERY SURFACES	26
DRIVING UPHILL.....	26

TRAVERSING HILLSIDES	26
DRIVING DOWNHILL	27
DRIVING IN REVERSE	27
PARKING THE VEHICLE	27
HAULING CARGO ON THE LOAD DECK.....	28
Maximum Weight Capacity	28
Flip Seat/Load Deck Operation.....	28
 MAINTENANCE	
MAINTENANCE SAFETY	29
SCHEDULED MAINTENANCE.....	29
SCHEDULED MAINTENANCE CHART	30
RECOMMENDED LUBRICANTS AND FLUIDS	30
REPLACEMENT OF MAINTENANCE ITEMS	30
LIFTING THE VEHICLE.....	31
Lifting Front	31
Lifting Rear	31
Lowering Vehicle	31
VEHICLE CLEANING AND CARE.....	32
Washing the Vehicle	32
Polishing the Vehicle	32
TIRES	32
Tire Pressure	32
Tire Repair	33
Tire Replacement.....	33
WHEELS.....	33
Wheel Removal.....	33
Wheel Installation	33
LIGHTS	34
REAR AXLE.....	34
LITHIUM-ION BATTERY PACK.....	34
BATTERY CHARGER MAINTENANCE	34
BATTERY CHARGING	35
AC Voltage.....	35
BATTERY PROLONGED STORAGE	35
Storage Preparation.....	35
Setting State of Charge (SOC)	35
During Storage.....	35
Extreme Low Temperature Storage.....	36
Returning Vehicle to Service.....	36
BATTERY FAULT DIAGNOSIS	36
TRANSPORTING THE VEHICLE	36
TOWING THE VEHICLE.....	36
Hauling the Vehicle	36
Manual Release of IntelliBrake™.....	37

VEHICLE SPECIFICATIONS

RXV 4 39

MAINTENANCE LOG

RECORDS 41

APPENDIX

QUIQ CHARGER 43

RC900 CHARGER 45

DELTA-Q EZ 350 47

INTRODUCTION

The following symbols appear throughout this manual and on vehicle labels. Your safety is involved when these symbols are used. Become familiar with their meanings before reading the manual.



DANGER indicates a hazardous situation that, if not avoided, **WILL** result in death or serious injury.



WARNING indicates a hazardous situation that, if not avoided, **COULD** result in death or serious injury.



CAUTION indicates a hazardous situation that, if not avoided, **COULD** result in minor or moderate injury.



NOTICE provides key information by clarifying instructions.



The PROHIBITION SAFETY SIGN indicates an action NOT to take in order to avoid a hazard.



The MANDATORY ACTION SIGN indicates an action that NEEDS to be taken to avoid a hazard.



Failure to comply with warnings in this manual can result in severe injury or death.

Read this entire manual carefully before operating the vehicle. Do not attempt to operate the vehicle until you have thorough knowledge of the controls and features.

Regular inspections and maintenance, along with good operating techniques, will help ensure your safe enjoyment of the capabilities and reliability of this vehicle.

This vehicle was designed and manufactured in the United States of America (USA). The standards and specifications in the following information originate in the USA unless otherwise indicated.

MANUFACTURER'S INTENDED USE

This vehicle is designed and manufactured for off road use only. Use on public streets, roads, or highways is illegal in most areas and increases the risk of an accident involving other vehicles and people. This vehicle does not meet FMVSS (Federal Motor Vehicle Safety Standards) for public street, road, or highway use.

Check all laws and regulations before choosing an area to operate your vehicle.

As manufactured, this vehicle meets or exceeds ANSI/OPEI Z-135 Personal Transport Vehicles and its top speed is set at 19.5 mph (31 kph). In the factory configuration, it is intended to be used on designated roadways, or within closed communities where permitted by law or by regulatory authority rules.

This vehicle has been designed so that certain authorized service professionals are capable of altering the vehicle's maximum level-ground speed. This vehicle does not meet State or Federal LSV (Low Speed Vehicle) requirements and cannot be used on public roadways of any kind if any combination of modifications or speed settings increases the vehicle's maximum level-ground speed over 20 mph (32 kph).

WARRANTY AND REGISTRATION

All information, including coverage, limitations, exclusions and how to obtain warranty service is included in the literature package with the purchase of the vehicle. It can also be obtained from your dealer.

Register your new vehicle at www.ezgo.com.

Use Original Equipment Manufacturer (OEM) approved parts to keep the vehicle warranty effective.


Tampering with or adjusting the controller to allow the vehicle to operate above factory specifications will void the vehicle warranty.

BATTERY PROLONGED STORAGE

See BATTERY PROLONGED STORAGE on page 35 for safety information and storage procedure.

INTRODUCTION

VEHICLE IDENTIFICATION NUMBERS

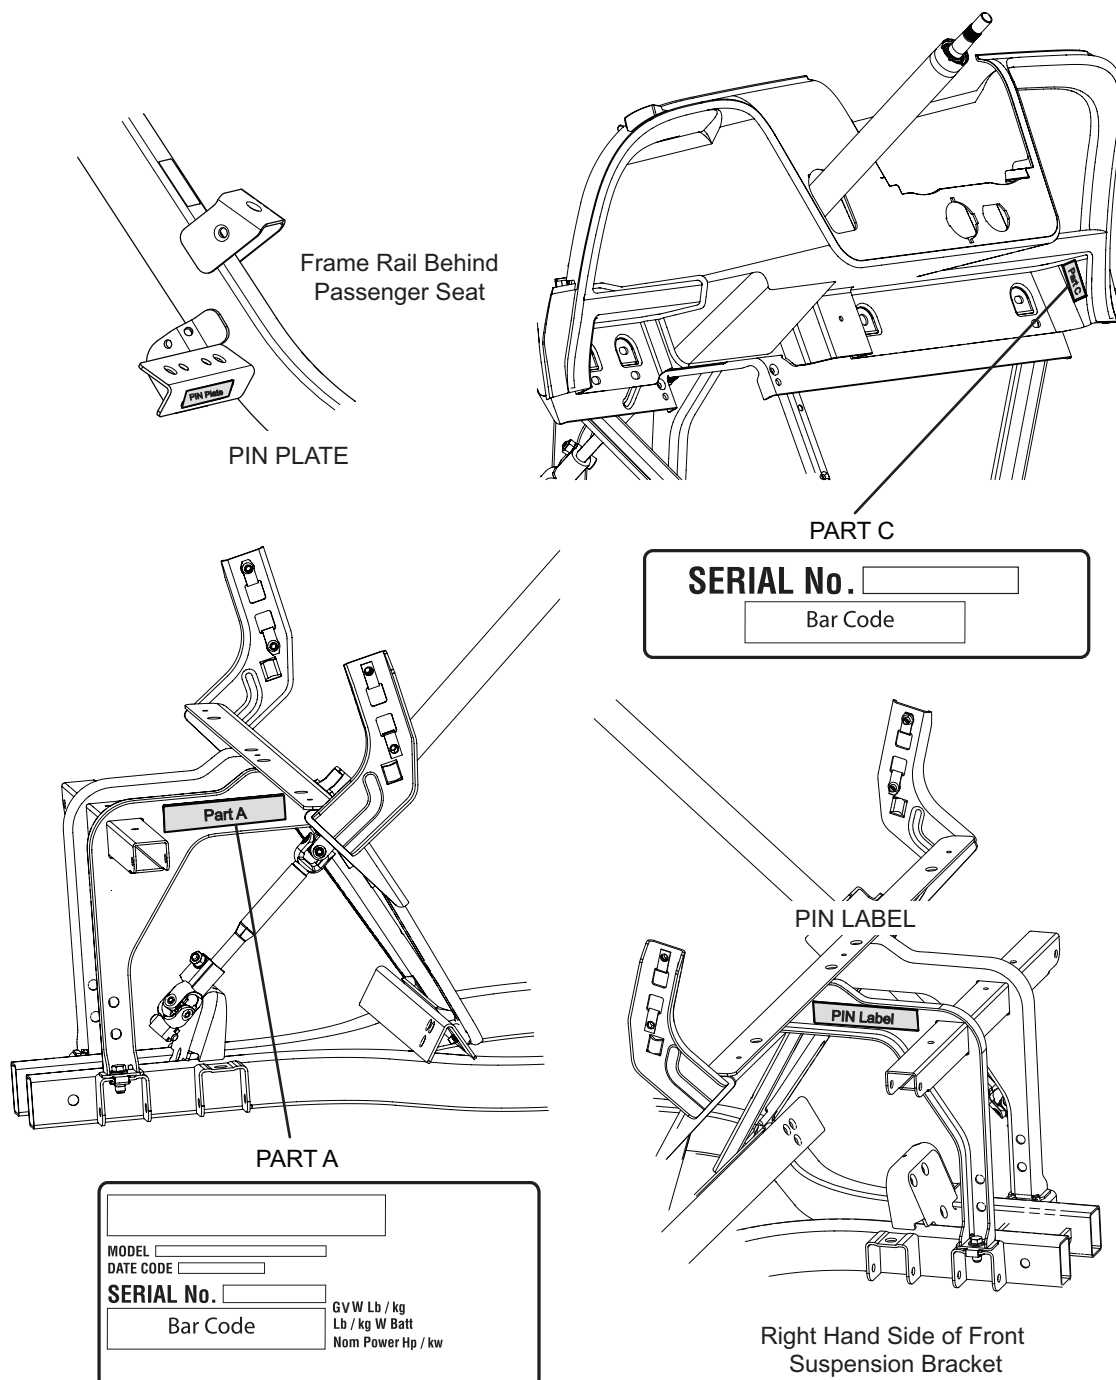

Record the vehicle identification numbers in the spaces provided below. These identification numbers are required when ordering parts.

Vehicle Model Number	
Frame PIN	

PARTS AND SERVICE MANUALS

The following manuals can be purchased through your dealer:

- service manual
- parts manual

RADIO COMPLIANCE

When equipped with 10" display screen, this vehicle contains the following radio equipment:

Identification	Manufacturer	FCC ID	IC
SEI-EXSE2801OEM Soundbar	SoundExtreme Inc.	2BADE-EXSE2801OEM	30122-EXSE2801OEM
SEI-CPAA101 Bluetooth® Media Player	SoundExtreme Inc.	2BADE-SEICPAE101	30122-SEICPAA101

U.S. FCC RADIO COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CANADA RADIO COMPLIANCE

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. EU (European Community) Radio Compliance

Hereby, Sound Extreme Inc declares that the radio equipment type SEI-EXSE2801 and SEI-CPAA101 is in compliance with Directive 2014/53/EU. The full EU declaration of conformity is available upon request.

SAFETY

For questions about your vehicle or the material in this manual, see the contact information on page 1 or the back of this publication.

Certain replacement parts can be used independently and/or in combination with other accessories to modify a TSV (Augusta) manufactured vehicle to permit the vehicle to operate at or in excess of 20 mph. When a TSV-manufactured vehicle is modified in any way by the Distributor, Dealer or customer to operate at or in excess of 20 mph on public streets or roads, UNDER FEDERAL LAW the modified product will be a Low Speed Vehicle (LSV) subject to the strictures and requirements of Federal Motor Vehicle Safety Standard 571.500. In these instances, pursuant to Federal law the Distributor or Dealer MUST equip the product with headlights, rear lights, turn signals, seat belts, top, horn and all other modifications for LSV's mandated in FMVSS 571.500, and affix a Vehicle Identification Number to the product in accordance with the requirements of FMVSS 571.565. Pursuant to FMVSS 571.500, and in accordance with the State laws applicable in the places of sale and use of the product, the Distributor, Dealer or customer modifying the vehicle also will be the Final Vehicle Manufacturer for the LSV, and required to title or register the vehicle as mandated by State law.

Information on FMVSS 571.500 is found at Title 49 of the Code of Federal Regulations, section 571.500. For information on-line, go to www.ecfr.gov.

The manufacturer will NOT approve Distributor, Dealer or customer changes that change a vehicle into a Low Speed Vehicle (LSV).

This vehicle meets the current applicable standard for safety and performance requirements.

Safety and warning labels are on the vehicle for your protection. Read and comply with the instructions on the labels carefully. If any label shown in this manual is different from the label on your vehicle, always follow the instructions on the vehicle label.

If a label comes off or becomes illegible, contact your dealer for a replacement. The part number is provided in this manual, printed on the label, or can be obtained from your dealer.

MAXIMUM WEIGHT CAPACITY

⚠ WARNING *Exceeding the weight capacities can cause loss of vehicle control and possible injury or death.*

Do not exceed the maximum vehicle weight capacity (includes weight of operator, passenger, cargo and accessories). Refer to Maximum Weight Capacity on page 28 for capacity ratings and additional information.

TIRE PRESSURE

⚠ WARNING *Improper tire pressure or uneven tire pressure can cause loss of vehicle control and possible injury or death.*

Refer to TIRES on page 32 for additional information.

OPERATOR SAFETY

Safe and responsible use of this vehicle is necessary to prevent dangerous conditions for the operator, passengers and other people in the area of operation. The OPERATION section of the manual provides information on the safe operation of the vehicle. Make sure you read, understand and comply with all of this information to decrease the risk of personal injury or death.

⚠ WARNING *Failure to operate this vehicle as instructed can cause collision, loss of control or rollover resulting in severe injury or death. Follow all safety warnings in this owner's manual. See the OPERATION section for operating procedures.*

- Read this entire manual and all product labels carefully. Follow the safety information and operating procedures described.
- Operate the vehicle responsibly to prevent dangerous conditions for the operator, passengers, and other people in the area of operation
- Operate the vehicle responsibly and keep the vehicle in safe operating condition.
- A damaged vehicle or a vehicle that is not functioning properly is dangerous and must not be operated until repairs are made.
- Keep feet, legs, hands, and arms inside the vehicle at all times.
- The driver must keep both hands on the steering wheel and both feet on the floor or pedals.
- Inspect the vehicle before each use to make sure it is in safe operating condition. Perform the Daily Inspection described on page 23.
- Always have the vehicle checked by an authorized dealer if it is involved in an accident.
- Remove the key from the key switch when the vehicle is not in use to prevent accidental starting or unauthorized use.
- Drive the vehicle at appropriate speeds for the terrain and conditions. Be aware of environmental conditions that change the terrain and your ability to control the vehicle.
- Do not drive on excessively steep hills. Evaluate the terrain before descending a hill. Drive slowly and deliberately. Use the brake to limit speed and maintain control. Sudden braking or turning can cause the loss of vehicle control.
- Drive straight up or down the hill. Do not drive across the hill.
- Operate only in approved areas. Follow all applicable safety rules for the area.
- Avoid driving on terrain that is too rough for the vehicle's capabilities and your driving skills.
- Before driving in the reverse direction, make sure the area behind the vehicle is clear. Accelerate slowly and avoid making sharp turns.
- Make sure the direction selector is in the correct position before pressing the accelerator pedal.

SAFETY

- Decrease speed before and during turns.
- Decrease speed when driving on wet or slippery surfaces.
- Bring the vehicle to a complete stop before moving the direction selector.
- Do not exceed the cargo or vehicle weight capacities. Do not exceed the occupant capacity. See VEHICLE SPECIFICATIONS on page 39 for the vehicle load and seat capacity.
- If there is a risk of lightning, leave the vehicle and look for a safe location to wait until the lightning has stopped.

Additional information about safety is included throughout this manual and can be obtained from your local dealer.

BODY RESTRAINTS/HAND HOLDS



Riding in this vehicle without proper use of body restraints/hand holds increases the risk of serious injury in the event of a sudden maneuver, stop or accident.



To avoid falls from the vehicle, every person must be properly seated and holding on. Keep entire body inside the vehicle, hold on and remain seated while the vehicle is in motion.

Vehicles without permanent front seat hip restraints are equipped with seat belts in place of the hip restraint. Front seat occupants must wear seat belts at all times during vehicle operation.

OWNER RESPONSIBILITY



Improper use, maintenance, or modification of this vehicle can lead to serious injury or death.

Require proper use of your vehicle. Do not allow anyone to operate your vehicle or ride as a passenger unless they are properly instructed and you are sure they are willing to ride responsibly. To prevent unauthorized use, always remove the key when the vehicle is not in use.

Unauthorized Use

Anyone who does not have a valid driver's license is not permitted to operate the vehicle.

Anyone who is below the height of 59 in. (150 cm) is not permitted to operate the vehicle.

Leaving the key in the key switch allows unauthorized operation of the vehicle by an unlicensed driver or someone who does not meet the height requirement. Always remove the key from the key switch when the vehicle is not in operation.



Operating without Instruction



Operation of this vehicle without proper instruction increases the risk of an accident. The operator must understand how to operate the vehicle correctly in different situations and on different types of terrain.

All operators must read, understand, and comply with the all warning and instruction labels before operating the vehicle.

Alcohol or Drugs



Operation of the vehicle during or after consuming alcohol or drugs can adversely affect operator judgment, reaction time, balance, and perception.

Never drink alcohol or use drugs or medications before or during operation of the vehicle.

Before Operating

Perform the DAILY INSPECTION on page 23 before each use to make sure the vehicle is in safe operating condition. Failure to inspect and confirm that the vehicle is safe to operate increases the risk of an accident.

Follow all inspection and maintenance procedures and schedules described on page 30.

Operation With a Load

The weight of cargo and occupants affects vehicle operation. Carefully calculate how the vehicle is loaded and how to safely operate it.

Do not exceed weight capacities specified for your vehicle. Capacities are listed in MAXIMUM WEIGHT CAPACITY on page 11 of this manual, and also on the label affixed to the truck bed. As passenger weight increases, cargo weight needs to be adjusted to ensure the maximum vehicle weight capacity is not exceeded.

Reverse Operation

Make sure the area behind the vehicle is clear before operating in reverse. After making sure it is clear and safe to operate in reverse, accelerate slowly. Avoid making sharp turns in reverse. Refer to DRIVING IN REVERSE on page 27 for operational information.

Damaged Vehicle

Driving a damaged vehicle is not safe.

If your vehicle has been involved in any type of accident, have it inspected by a qualified service dealer to verify that it is safe for operation.

Maximum Speeds

Maximum speed operation increases risk of loss of control. Always drive at a speed that is appropriate for the terrain, visibility, operating conditions, and your skill and experience level. Use the brake to control the speed and maintain control of the vehicle.

Different Surfaces

Driving the vehicle on different surface types can affect handling characteristics of the vehicle. When driving on a dirt road, loose surface, or wet grass, the distance required to stop the vehicles will increase.

Public Roads

Driving this vehicle on public streets, roads or highways could result in a collision with another vehicle. Never drive this vehicle on any public street, road, or highway. Most areas prohibit the operation of this vehicle on public roads can result in traffic violations and fines.

Turning

Improper or careless turning can cause loss of traction, loss of control, accident, or rollover. Do not turn quickly or at sharp angles. Do not turn at high speeds. Practice turning at slow speeds before attempting to turn at faster speeds.

Uphill Operation

Do not climb hills that are too steep for the vehicle or your driving abilities. Loss of vehicle control or rollover can result from climbing hills incorrectly. Refer to Driving Uphill on page 26 for operational information.

Downhill Operation

Inspect the terrain before descending a hill. Avoid driving across hills. Use the brake to limit speed and maintain control. Loss of vehicle control or rollover can result from driving downhill incorrectly. Refer to Driving Downhill on page 27 for operational information.

Tires

Operating the vehicle with incorrect tires or with incorrect or uneven tire pressure can cause loss of control or an accident. Always use the size and type tires specified for the vehicle in the VEHICLE SPECIFICATIONS on page 39. Always maintain correct tire pressures as specified in TIRES on page 32.

Slippery Terrain

Driving on rough, wet or loose terrain increases the risk of loss of traction or control, accident or rollover. Drive slowly and use correct turning procedures when operating on slippery surfaces.

Tires that have lost traction, and then regain traction suddenly, can cause loss of vehicle control or rollover.

Refer to Slippery Surfaces on page 26 for operational information.

BATTERY CHARGING

Charging should be performed when ambient temperatures are between 40°F and 110°F (4°C and 42°C). The battery pack may be charged or topped off after every use. see Battery Charging on page 35.

BATTERY DISPOSAL



Lithium-Ion batteries are recyclable:

- Contact the distributor or manufacturer for information on returning or recycling used or damaged battery packs.
- Contact local or state environmental department for disposal information.
- For additional information, see LITHIUM-ION BATTERY PACK on page 34.

VEHICLE LIFTING

The vehicle must be on a firm and level surface for lifting. Remain constantly aware that the vehicle is not stable during the lifting process. Do not get under a vehicle until you verify that it is stable on the jack stands. Never get under a vehicle while it is on a jack only. Put wheel

chocks in front and behind the wheels that are not being lifted. Do not allow anyone to remain or get on the vehicle at any time during the lifting process.

Read and comply with all warnings and follow the lifting procedures described on page 31.

VEHICLE MODIFICATION

Do not install any accessory not approved by the manufacturer. Do not modify the vehicle to increase speed or power. Any modifications or installation of accessories not approved by the manufacturer can create a safety hazard and increase the risk of injury.

The warranty will be terminated if the vehicle is modified to increase vehicle speed or power.

The warranty may be terminated if original (or equivalent) replacement parts are not installed on the vehicle.

The addition of some accessories can change the handling characteristics of the vehicle. Use only manufacturer approved accessories, and familiarize yourself with their function and effect on the vehicle.

MAINTENANCE SAFETY

Routine and scheduled maintenance of this vehicle is necessary to keep the vehicle in safe and reliable condition. This section of the manual provides safety information for performing maintenance on your vehicle. Make sure you read, understand, and comply with all of this information to decrease the risk of personal injury or death.



WARNING *Serious injury or death can occur if you do not follow the instructions and procedures shown in this owner's manual.*

- Read this entire manual and all product labels carefully. Follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.
- Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.
- Remove all jewelry before servicing the vehicle.
- Do not allow loose clothing or hair to contact the moving parts.
- Do not touch hot objects.
- The drive wheels must be lifted and supported on jack stands before performing any service to the powertrain while the motor is in operation.
- Use wheel chocks and support the vehicle on jack stands. NEVER get under a vehicle that is supported by a jack. Lift the vehicle following the instructions on page 31.
- Always wear eye protection while servicing the vehicle.
- Wear a face shield when working around the battery pack.
- Use insulated tools within the battery area to prevent blowing the internal BMS fuse. Only a dealer or certified technician can repair a blown BMS fuse.
- To prevent the risk of battery explosion, keep all flammable materials, open flames, or sparks away from the battery pack.
- Always keep your hands, face, feet, and body away from any area that can expose them to injury if an unexpected situation occurs.
- After making repairs or performing maintenance, test the vehicle in a safe area that is free from vehicle and pedestrian traffic.

SAFETY LABELS

Safety and warning labels are on the vehicle for your protection. Read carefully and comply with all instructions on the labels. If any label shown in this manual is different from the label on your vehicle, always follow the instructions on the vehicle label.

If a label comes off or becomes illegible, contact your dealer for a replacement. Label part numbers are provided here, printed on the label, or can be obtained from your dealer.

OPERATION


Located on the dash panel. P/N 10016317



RUN/TOW SWITCH OPERATION

Located under the vehicle seat.

P/N 612594

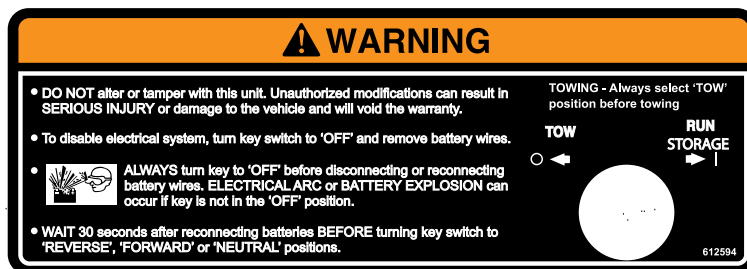

SAFETY LABELS

PATENT NOTICE

Located inside the driver's side dash storage compartment.
P/N 10005569

PATENT NOTICE 10005569

This product or components thereof may be covered by one of more patents or pending applications.
See patents.txtsv.com for details.

 **WARNING** CANCER AND REPRODUCTIVE HARM

For more information, go to P65Warning.ca.gov/passenger-vehicle

ELECTRIC SHOCK (CE ONLY)

Located on the controller splash shield.
P/N 71415G01




HOT SURFACE (CE ONLY)

Located on the motor.
P/N 75696G01



BRAKE RELEASE LABEL

Located under the run/tow cover.
P/N 609694

 **WARNING** Failure to follow these instructions can result in **SERIOUS INJURY** or **DEATH**

THIS PROCEDURE SHOULD ONLY BE TO CLEAR VEHICLE FROM AN UNSAFE AREA AND BE PERFORMED ONLY BY QUALIFIED TRAINED PERSONNEL


In Case Of Total Power Loss And The 'Run-tow' Switch DOES NOT Release The Brake To Move The Vehicle:

- Turn the ignition key to the 'OFF' position and 'chock' tires to prevent inadvertent movement.
- Identify the 'Auxiliary Power' line (3) and remove the Weather Pack Seal (4) from the connector.
- Identify the 'Primary Power' line (1) connector and disconnect the line (2).
- Connect 'Auxiliary Power' line (3) to 'Primary Power' line (1) which will release the brake. **THIS WILL CAUSE THE VEHICLE TO MOVE IMMEDIATELY IF NOT ON LEVEL GROUND.**
- Move vehicle to desired location and park it properly on level ground, chock tires, **IMMEDIATELY DISCONNECT 'AUXILIARY POWER' AND RECONNECT 'PRIMARY POWER' (1, 2) FOR SAFETY AND TO AVOID BATTERY DRAIN.**
- Reconnect the Weather Pack Seal (4) to the Auxiliary Power line (3) and perform required service procedures following all Safety guidelines as outlined in your repair manual.

609694

MAINTENANCE/TOWING

Located on the controller splash shield.
P/N 609987


 **WARNING** Failure to follow these instructions can result in **SERIOUS INJURY** or **DEATH**

IF VEHICLE IS INOPERABLE AND NEEDS TO BE MOVED:


- Turn the ignition key to the 'N' position and 'chock' tires to prevent inadvertent movement.
- Flip the RUN-TOW switch to the 'TOW' position and move vehicle to the desired location and park it properly on level ground and chock tires immediately.
- Turn the ignition key to the 'OFF' position, remove key and perform required service procedures following all Safety Guidelines as outlined in your repair manual.

In Case of Total Power Loss and the 'Run-tow' Switch DOES NOT Release the Brake to Move the Vehicle :


- Remove this plastic cover by removing 3 plastic fasteners. See illustrations below.
- See emergency brake release instruction under this panel.



Push center of fastener with vehicle key. When center is depressed lift fastener to remove.



To reuse fastener push center stem up then install fastener through shield into hole.




To secure fastener in place press down on center stem until flush with head of fastener.

609987

REAR HANDHOLD WARNING LABEL

Located on the rear seat.

P/N 697425

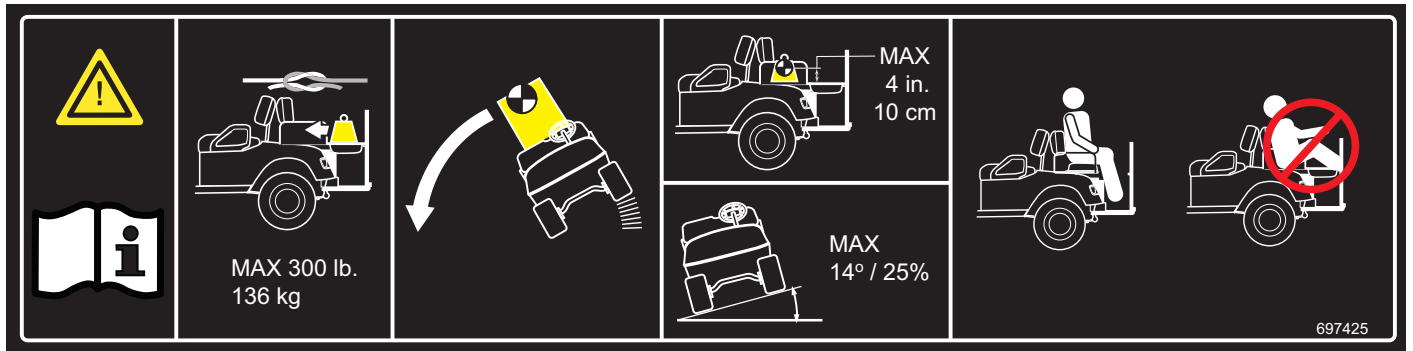

FEATURES AND CONTROLS

NOTICE

Additional 12V accessories must be connected to the DC to DC converter.

KEY SWITCH / DIRECTION SELECTOR

CAUTION

To decrease the risk of component damage, bring the vehicle to a complete stop before moving the key switch.

NOTICE

Some factory installed accessories continue to operate with the key switch in the OFF position. Leaving these accessories activated when the vehicle is shut down can cause the battery to discharge.

The key switch/direction selector is a four-position switch.

- OFF – vehicle is disabled.
- ON/N – activates vehicle electronics and accessory power.
- R – allows the vehicle to be driven in reverse and activates the reverse warning indicator.
- F – allows the vehicle to be driven in the forward direction.

INTELLIGAUGE® (IF EQUIPPED)

The Intelligauge® performs a variety of advanced functions. Refer to the Intelligauge® user's guide for further information.

STATE OF CHARGE METER (IF EQUIPPED)

The state of charge meter is on the dash panel beside the key switch. It indicates the amount of usable power in the batteries, with 100% indicating a full charge on the battery pack and 0% indicating no charge. The text "LOWBAT" indicates the batteries must be charged immediately. When the vehicle is in motion, the meter functions as a speedometer and hour meter.

DISPLAY SCREEN (IF EQUIPPED)

The display screen performs the following functions:

- Bluetooth® media player
- backup camera
- vehicle information

See the user's guide for further information on display screen functionality.



CUP HOLDER

The vehicle has a center cup holder that will accommodate four beverage containers. Vehicles equipped with the display screen have two cup holders.

USB PORT (IF EQUIPPED)

A USB port is located on the center of the dash.

With the key switch in the ON position, the USB port supplies power to electronic devices via a USB cable.

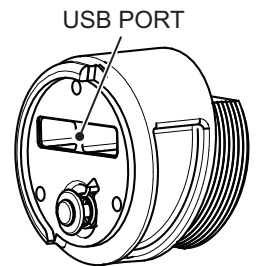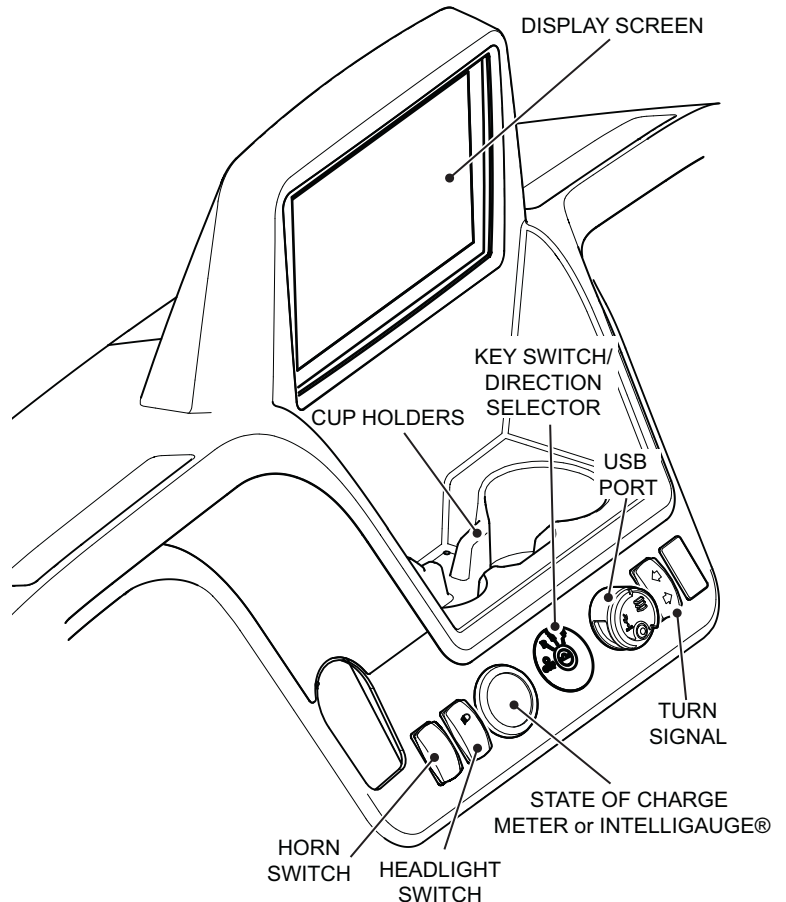

USB PORT – SCREEN INTERFACE (IF EQUIPPED)

The Type A USB port allows connectivity to the display screen. The Type C USB port allows for charging of a device.

HEADLIGHT SWITCH (IF EQUIPPED)

The headlight switch is a two-position switch.

- upper – on
- lower – off

HORN

The horn switch is located on the center of dash to the left of the light switch. The horn is activated when the top of the rocker switch is pressed.

TURN SIGNAL (IF EQUIPPED)

The turn signal switch is located on the dash and is used to activate the turn signals.

PREMIUM SWITCH (IF EQUIPPED)

The premium switch is mounted to the steering column. The switch includes self canceling turn signal, rotating light switch, and horn button.

Horn

The button on the end of the switch activates the horn.

Turn Signal

- In the up position, the right turn signal is activated.
- In the down position, the left turn signal is activated.

Lights

- The accent lights are activated when the stalk is rotated forward one position.
- The headlights are activated when the stalk is rotated to the second position.
- The high beams are activated when the switch is pulled towards the driver.
- The low beams are activated when the switch is pulled towards the driver again.
- The lights are off with the stalk rotated to the O position.

ACCELERATOR PEDAL

The accelerator pedal is the narrow pedal to the right. It activates the motor and controls the acceleration of the vehicle.

Pressure applied to the accelerator pedal increases vehicle speed.




BRAKE PEDAL

The brake pedal is the wider pedal to the left.

Pressure applied to the brake pedal slows the speed or bring the vehicle to a complete stop.

PARKING BRAKE

This vehicle is equipped with an IntelliBrake™, an automatic parking brake that is activated when the vehicle is stopped. The brake is released when the vehicle is in the F (forward) or R (reverse) position and the accelerator pedal is pressed.

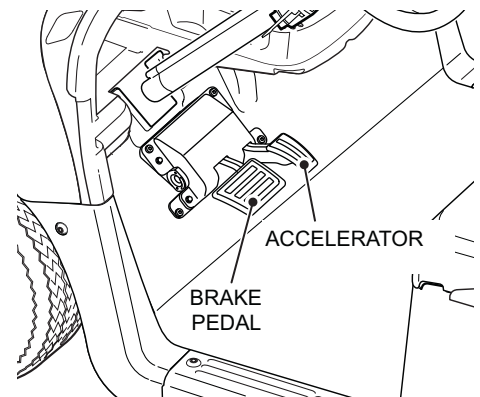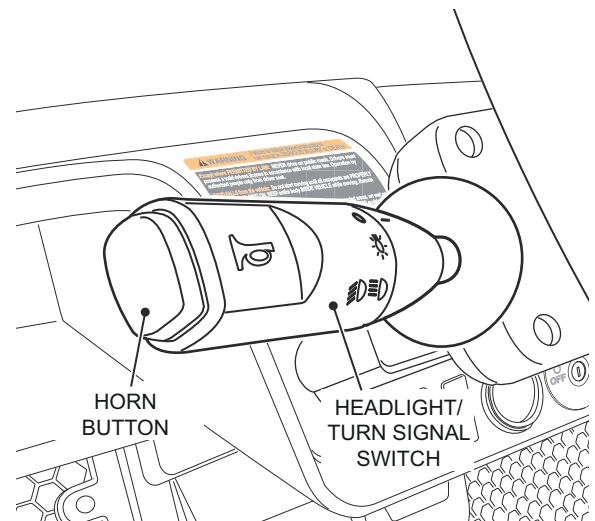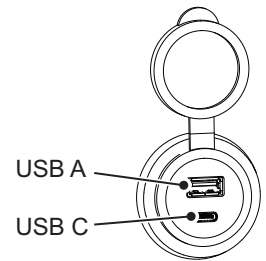


SEAT BOTTOM

The forward facing bench seat is designed for two occupants.

For vehicles equipped with hip restraints, lift up on either hip restraint to pivot the seat bottom forward and access the components underneath. Pivot and lift up on the seat to completely remove it from the vehicle.

For vehicles equipped with arm rests, buckle the front seat belts prior to lifting the seat bottom to prevent them falling underneath the seat. Lift the armrest and flip seat up using back middle strap on the seat bottom. Make sure seatbelt buckles are put back on top of the seat bottom when seat is lowered.

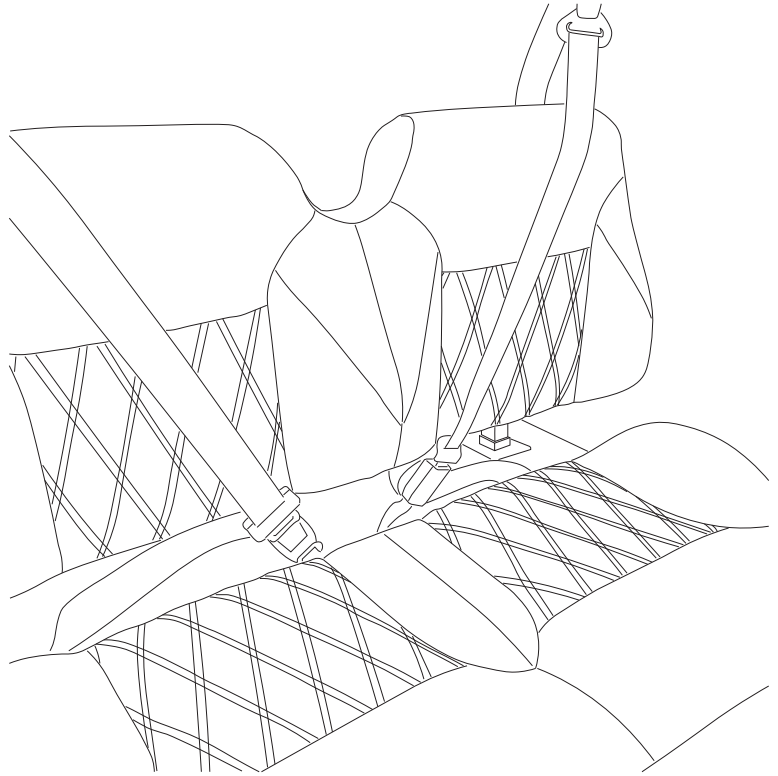


CHARGER RECEPTACLE

The charger receptacle is located on the front panel of the seat.

GLOVE BOX / STORAGE COMPARTMENTS

The glove box provides storage space for small items. Glove boxes may be equipped with optional doors.

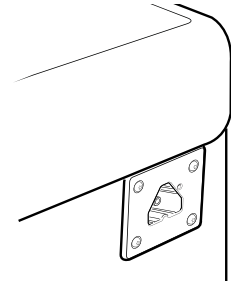

CANOPY TOP AND WINDSHIELD



The canopy top does not provide protection from rollover or falling objects.

The windshield does not provide protection from tree branches or moving objects.


The canopy top and windshield provide some protection from the elements, but do not keep the operator and passenger dry in heavy rain.

The canopy top is not designed to provide rollover protection. In addition, the canopy top does not protect against falling objects, nor does the windshield protect against flying objects and tree limbs.

OPTIONAL PREMIUM SEAT PACKAGE WITH FLIP-UP ARM RESTS

Vehicles equipped with optional flip-up arm rests do not have permanent front seat hip restraints and are therefore equipped with seat belts and OPS (Occupant Protective Structure).

- arm rests – the arm rests can be pivoted upward to ease entering or exiting the vehicle.
- seat belts – front seat occupants must wear seat belts at all times during vehicle operation. See SEAT BELTS on page 25.

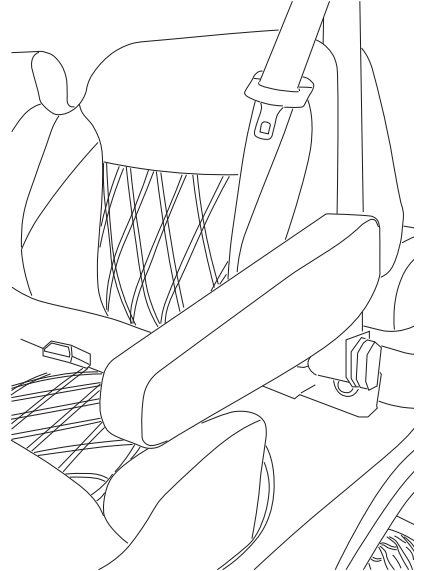

REAR-VIEW MIRROR

The vehicle is equipped with an adjustable rear-view mirror for optimum visibility to surroundings during operation.

Adjust the mirror before each use for clear rear and side views. Be sure to check blind spots before merging or operating in reverse.

REAR FACING SEAT AND LOAD DECK



Do not allow passengers to ride on the load deck. Severe injury or death could result if the vehicle is involved in an accident or if the vehicle makes a sudden change in direction.

To prevent the risk of tipping the vehicle, occupants must fill the forward facing seat prior to filling the rear facing seat.

The rear facing seat will accommodate two passengers, one on each side of the seat. Passengers must remain seated while the vehicle is in motion. Hand holds are provided, one on each side of the seat and one mounted to the footrest in the center.

Fold the seat bottom towards the rear of the vehicle to expose the load deck. When using the load deck, always:

- Place the load as far forward as possible.
- Secure the load on the load deck to prevent the load from moving.
- Make sure the center of gravity is less than 4 inches (10 cm) above the load deck.
- Do not exceed the load capacity of the load deck. The maximum capacity of the load deck is 300 lb (136 kg).

OPERATION

NOTICE

Some accessories continue to operate with the key switch in the OFF position. Leaving these accessories activated after the vehicle is shut down can cause the battery to discharge.

SAFETY

⚠ WARNING

Failure to operate the vehicle correctly can result in a collision, loss of control, accident or rollover, and cause serious injury or death. Follow all operation procedures in this section of the manual. Read and comply with all safety warnings in the safety section of this owner's manual. This is a Personal Transport Vehicle (PTV), NOT an All Terrain Vehicle (ATV).

BEFORE INITIAL USE

To prepare your new vehicle for operation, check for possible leaks that may have developed during shipment of the vehicle.

- Charge the batteries fully. See Battery Charging on page 35.
- Perform the following daily inspection.

DAILY INSPECTION

To decrease the risk of an accident, inspect and verify that the vehicle is in safe operating condition before each use. Check the items in the table to help ensure safe and reliable operation.

Item	Check
Brake system/pedal travel	Check for proper operation.
Parking brake	Ensure vehicle does not roll when the parking brake is engaged.
Front suspension	Inspect. Check for loose or missing hardware.
Rear suspension	Inspect. Check for loose or missing hardware.
Steering	Check for smooth and free operation.
Tires	Check condition and pressure. See page 11.
Wheel hardware	Check for loose or missing hardware.
Frame hardware	Check for loose or missing hardware.
Fluid leakage	Inspect vehicle for leaks.
Switches	Check operation.
Reverse warning alarm	Check operation.

BATTERY CHARGER

The charger should be operated in accordance with the charger manufacturer's instructions. Always place the charger outside the vehicle before and during the charging cycle (does not apply to on-board charger). Never charge the battery pack in a hazardous environment.

⚠ DANGER

Risk of electric shock. Connect the charger power cord to an outlet that is correctly installed and connected to an electrical ground according to all codes and regulations. A grounded outlet is necessary to decrease the risk of electric shock – do not use ground adapters or replace the plug. Do not touch parts of output connector or battery terminals that do not have insulation.

Disconnect the AC plug before you make or break the connections to a battery that is charging. Do not open or disassemble the charger. Do not operate the charger if the AC cord is damaged. Make sure qualified personnel does all repair work to the charger.

Refer to the appropriate APPENDIX for the charger manufacturer User's Guide for operating instructions, maintenance instructions and troubleshooting instructions.

The battery charger will test the temperature of the battery pack. If the temperature is too hot or too cold, the charger will shutdown. If the battery pack temperature is within the safe to charge range the charger will operate.

PERFORMANCE FEATURES

NOTICE

The vehicle operates when the run/tow switch is in the RUN position.

The speed of the motor is sensed and controlled by the controller.

Speed Control

⚠ WARNING

The speed control system is not an alternative for the brake. Use the brake to control speed and decrease the risk of injury.

Speed control system vehicles are equipped with a regenerative motor control system.

Example: If all of the following events occur:

- the vehicle is being driven down a slope
- the vehicle attempts to exceed the specified top speed with the accelerator pedal pressed or released

The regenerative brake will limit the speed of the vehicle to the specified top speed but the warning beeper will not activate. When the regenerative braking system is activated by this sequence of occurrences, the motor generates power which is returned to the batteries.

If the operator tries to override the electronic brake feature by moving the direction selector or key switch to another position, the vehicle rapidly decelerates.

Pedal-Up Braking

Pedal-up braking is regenerative braking that occurs when the accelerator pedal is released while the vehicle is moving.

Example: If both of the following events occur:

- The vehicle is being driven down a slope
- The accelerator pedal is released

The pedal-up braking decreases speed until the vehicle stops or the accelerator is applied. The warning beeper will not activate. When pedal up braking is activated by this sequence of occurrences, the motor generates power which is returned to the batteries.

High Pedal Disable Feature

High pedal disable prevents acceleration if the key switch is turned on while the accelerator or brake are pressed. To reset the controller after a High Pedal Disable, take feet off of the pedals, then press the accelerator.

STARTING AND STOPPING THE VEHICLE

All vehicles have an *interlock system* that disables the controller and prevents operation or towing of the vehicle while the charger is connected. Remove the charger plug from the receptacle and correctly store the cable before moving the vehicle.

1. Sit in the driver's seat.
2. Insert the key and turn the key switch to the desired direction (F or R).

NOTICE

When the direction selector is moved to the reverse position, a warning alarm will activate to indicate that the vehicle is ready to run in reverse.

3. Slowly press the accelerator pedal to start the motor.
4. When the accelerator pedal is released, the motor decreases the speed of the vehicle. To stop the vehicle more quickly, press the brake pedal.
5. Turn the key to the OFF position and remove the key from the switch before exiting the vehicle.

Starting on a Hill

The IntelliBrake™ (parking brake) will activate automatically when the vehicle stops. To start the vehicle on a hill, press the accelerator pedal and the parking brake will be released.

SEAT BELTS

WARNING

Vehicles without permanent front seat hip restraints are equipped with seat belts in place of hip restraints. Front seat occupants must wear seat belts at all times during vehicle operation.

Riding in this vehicle without proper use of body restraints/hand holds increases the risk of serious injury in the event of a sudden maneuver, stop or accident.

To avoid falls from the vehicle, every person must be properly seated and holding on. Keep entire body inside the moving vehicle. Hold on and remain seated while vehicle is moving.

Before each operation, inspect seat belts for proper operation and signs of damage including cuts, wear, fraying or stiffness.


Position the seat belt as low as possible across hips. If the belt is too high on the waist, the possibility of being injured in an accident increases.

NOTICE

Before lifting the seat bottom, the front seatbelts should be buckled to prevent the buckles falling under the seat when lifted. Seatbelt buckles are mounted under the seat and must be between the seat and the body to be in the proper position.

Proper Use of the Seat Belt

1. Insert the metal tab into the locking buckle. There will be an audible click when the tab locks into the buckle. Check to make sure the belt is properly locked and that the belt is not twisted.
2. Pull the loose end of the belt to adjust the length so that it fits snug across the body. The belt should be positioned as low as possible on the hips. If the belt is too high on the waist, the possibility of being injured in an accident increases.
3. Press the red button to release.

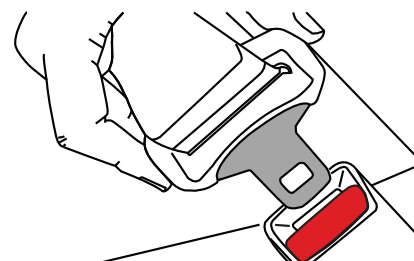

ACCELERATING

WARNING

Accidental movement of the accelerator pedal can cause the vehicle to suddenly move and cause severe injury or death.

Make sure the key switch is in the OFF position any time the vehicle is parked.

1. Move the key switch to the F or R position.
2. Apply slow and steady pressure to the accelerator pedal to start the motor and accelerate the vehicle. When the accelerator pedal is released, the motor decreases the speed of the vehicle.

BRAKING

WARNING

When carrying cargo or towing a vehicle or trailer, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under load can cause an accident or injury.

1. Release the accelerator pedal completely.
2. Press the brake pedal to slow vehicle speed or stop the vehicle completely.
3. Practice slowing and stopping using the brake to become familiar with the controls.

Coasting

The vehicle has a braking feature (pedal-up) that decreases the speed when the accelerator pedal is released. The feature continues to decrease the speed until the vehicle stops. Press the brake if you need to decrease speed or stop the vehicle quickly.

DRIVING PROCEDURE

1. Perform the daily inspection on page 23.
2. Sit in the driver's seat.
3. If equipped with seat belts, secure across hips.
4. Check the surroundings and determine the path of travel.
5. Insert the key into the key switch and turn the key switch to the desired position (F or R).
6. Slowly press the accelerator pedal to start the motor and accelerate.
7. Practice maneuvering the vehicle using the accelerator and brake pedals. Drive slowly and cautiously until you are comfortable with the controls.

DRIVING WITH A PASSENGER

- If equipped, ensure that seat belts are secured for front seat occupants.
- Passengers must be at least 59 in. (150 cm) tall. Passengers must be able to sit with their back against the seat and both feet on the floor.
- Do not allow more than three passengers in the vehicle.
- Do not allow a passenger to ride anywhere on the vehicle except the passenger seats.
- Travel at speeds appropriate for your skills, your passenger's skills and the operating conditions. Avoid unexpected or aggressive maneuvers that could cause discomfort or injury to the passengers.
- Handling characteristics can change with the added weight of a passengers. Allow more time and distance for braking.


SLIPPERY SURFACES



WARNING *Skidding or sliding can cause a loss of control. Skidding or sliding can cause rollover if tires have lost traction, then regain traction suddenly. When operating on slippery surfaces, travel at reduced speed to help maintain control of the vehicle.*

When operating in conditions such as ice, water, loose gravel, or freezing temperatures, follow these guidelines:

- Do not operate on excessively rough, slippery, or loose terrain.
- Slow down before entering potentially slippery areas.
- Maintain a high level of alertness.
- Carefully evaluate the path of travel and avoid quick, sharp turns.
- Correct a skid by turning the steering wheel in the direction of the skid. *Never apply the brakes during a skid.*

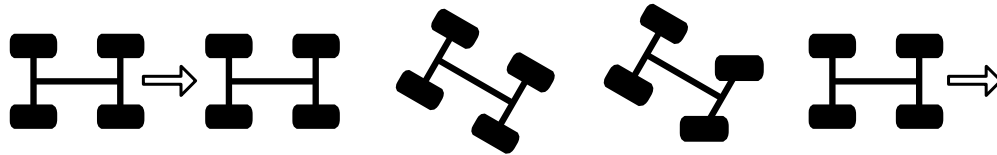

DRIVING UPHILL

When driving up a hill, follow these guidelines:

- Drive straight up the hill.
- Avoid excessively steep hills.
- Keep both feet on the floor or pedals.
- Check the terrain before driving up a hill. Do not try to climb hills that have excessively slippery or loose surfaces.
- Drive at a steady rate of acceleration and speed.
- Do not drive over the crest of a hill at high speed. An obstacle, sharp drop, or another person or vehicle could be on the other side of the hill.
- Do not attempt to drive up a hill that is beyond your skill level.

TRAVERSING HILLSIDES



WARNING *Traversing a hillside is not recommended. Improper procedure can cause loss of control or a rollover. Avoid crossing the side of a hill unless absolutely necessary. If traversing a hillside is unavoidable, check the terrain and determine if it can be accomplished safely. Do not proceed if the terrain is beyond the vehicle or driver's ability.*

If traversing a hillside is unavoidable, follow these guidelines:

- Drive slowly.
- Use extreme caution.
- Avoid crossing the side of a hill that has a slippery surface.
- Avoid crossing the side of a steep hill.
- When traversing a hillside that has soft terrain, it may be necessary to steer slightly uphill to keep the vehicle traveling in a straight line.
- If you feel that you are losing control of the vehicle, steer downhill if possible to regain control.

DRIVING DOWNHILL

⚠ WARNING *When carrying cargo, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under load can cause an accident or injury.*

When driving down a hill, follow these guidelines:

- Avoid excessively steep hills.
- Check the terrain carefully before descending any hill.
- Never drive down hills with excessively slippery or loose surfaces.
- Drive slowly.
- Drive straight down the hill. Avoid descending the hill at an angle that could cause the vehicle to lean sharply to one side.
- Apply light and constant pressure to the accelerator to maintain slow speed and control of the vehicle.

DRIVING IN REVERSE

When driving in reverse, follow these guidelines:

- Check that the area behind the vehicle is clear of obstacles and people.
- Check left and right fields of vision before driving in reverse.
- Drive in reverse slowly.
- Press the brakes lightly for stopping.
- Accelerate slow and steady.
- Avoid turning at sharp angles.

PARKING THE VEHICLE

⚠ WARNING *Park the vehicle on a flat surface if possible. If parking on an incline is unavoidable, be sure to chock the wheels to prevent the vehicle from rolling.*

1. Press the brake to stop the vehicle.
2. Turn the key switch to the OFF position.
3. Remove the key from the key switch to prevent unauthorized use.

HAULING CARGO ON THE LOAD DECK

⚠ WARNING

Hauling cargo incorrectly can alter vehicle handling characteristics and cause loss of control, brake instability, and possibly lead to serious injury or death.

Never exceed the maximum weight capacity of the vehicle. The total load (operator, passenger, accessories, cargo and load on hitch) must never exceed the maximum weight capacity of the vehicle. See Maximum Weight Capacity on page 28.

Position the load as far forward, and as low as possible in the load deck.

Secure all loads before operating. Unsecured loads can shift and create unstable operating conditions.

Operating the vehicle with passengers on the load deck can result in severe injury or death. Never allow a passenger to ride on the load deck.

Drive slowly and carefully.

Operate only with stable and safely arranged loads. When handling loads that are impossible to center on the load deck, make sure the load is secured as tightly as possible and operate the vehicle with extra caution.

Reduce speed and allow greater distances for braking when hauling cargo.

Heavy loads affect braking and handling characteristics. Use extra caution when applying brakes with a heavily loaded vehicle.

Avoid terrain or situations that may require reverse downhill travel.

Use extra caution when operating with loads that extend over the load deck sides. Stability and maneuverability can be affected and increase risk of rollover.

Never fill a gas container on the load deck. Static discharge can ignite gasoline vapor and cause an explosion.

Never fill a gas container on the load deck. Always put the gas container on the ground before you fill with gas. Static electricity is built up during the fueling process and can discharge and cause the gasoline vapor to ignite.

This vehicle is designed to carry specific capacities. Read and comply with the load distribution warnings on the warning label affixed to the load deck. The total load (operator, passenger, accessories, cargo and load on hitch) must never exceed the maximum weight capacity of the vehicle.

Maximum Weight Capacity

Maximum Vehicle Weight Capacity	800 lb (363 kg)
Maximum Load Deck Weight Capacity	300 lb (136 kg)

- Do not exceed the maximum cargo load capacity.
- Do not exceed the maximum vehicle weight capacity (includes weight of operator, passenger, cargo and accessories).

Flip Seat/Load Deck Operation

NOTICE

To prevent damage to the rear seat, remove any accessories that are installed on the hand rail before you pivot the seat bottom/load deck.

Pivot the seat bottom towards the rear of the vehicle to access the load deck. When using the load deck, follow the rules below:

- Place the load on the load deck as far forward as possible.
- Secure the load on the load deck to prevent movement.
- The center of gravity of the load must be less than 4 inches (10 cm) above the load deck.
- Do not exceed the maximum load for the deck capacity indicated in the table.

MAINTENANCE

MAINTENANCE SAFETY

⚠ WARNING

To prevent serious injury or death, follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.

Do not attempt to open the battery module(s) casing. There are no serviceable items inside the casing.

Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.

Remove all jewelry before servicing the vehicle.

Do not allow loose clothing or hair to contact the moving parts.

Do not touch hot objects.

Before you disconnect or connect a battery module or any other wires, make sure that the key switch is in the OFF position.

The drive wheels must be lifted and supported on jack stands before you do any service to the powertrain when the motor is in operation.

Support the vehicle with jack stands. NEVER get under a vehicle that is only supported by a jack. Lift the vehicle according to the instructions on page 31.

Wear a face shield when working around the battery pack.

Be careful when working around the battery pack, using solvents, or compressed air.

Use insulated tools within the battery area to prevent blowing the internal BMS fuse.

To prevent the risk of battery explosion, keep all flammable materials, open flames, or sparks away from the battery.

Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause high amperage, or get extremely hot.

After making repairs or performing maintenance, test the vehicle in a safe area that is free from vehicle and pedestrian traffic.

SCHEDULED MAINTENANCE

Consistent inspection, adjustment and lubrication of some components are necessary to maintain your vehicle so that it remains in safe and reliable condition. Refer to the SCHEDULED MAINTENANCE CHART on page 30 for detailed requirements.

Inspect, clean, lubricate, adjust and replace parts as necessary. Use Original Equipment Manufacturer's (OEM) or equivalent replacement parts.

Record the maintenance items performed, along with details in the MAINTENANCE LOG beginning on page 41.

NOTICE

Service and adjustments are important for safe and reliable vehicle operation. If not familiar with safe service and adjustment procedures, have your dealer perform the operations.

SCHEDULED MAINTENANCE CHART

Perform all services at the maintenance interval reached first.

Item	Interval (perform at interval that comes first)		Remarks	Page
	Rounds	Calendar		
Overall vehicle condition	Daily		Inspect.	
Battery Module	Daily		Charge daily after use.	35
Steering	Daily		Check for smooth and free operation.	
Front suspension	Daily		Inspect. Check for leaks and loose or missing hardware.	
Rear suspension	Daily		Inspect. Check for leaks and loose or missing hardware.	
Tires	Daily		Check condition and pressure.	11
Wheel lug nuts	Daily		Check for loose or missing.	33
Accelerator	Daily		Check for smooth operation.	20
Brake system	Daily		Check for smooth operation and acceptable stopping distance.	20
Headlights and taillights	Daily		Check operation.	34
Reverse warning alarm	Daily		Check operation.	19
Switches	Daily		Check operation.	19
Fluid leakages	Daily		Inspect entire vehicle for leaks	
Charger receptacle	Daily		Clean connections.	21
Wiring	20	Monthly	Inspect for loose connections, broken or missing insulation.	
Steering	20	Monthly	Check for excess play, loose or missing hardware.	
Tie rods	20	Monthly	Check for excess play, bent rods, loose or missing hardware.	
Front suspension	20	Monthly	Inspect strut for leaks. Check hubs and kingpins, for excessive play, worn bushings, loose or missing hardware.	
Rear axle	20	Monthly	Check for leakage; add oil as required.	
Front wheel alignment	60	3 Months	Check for unusual tire wear and adjust if necessary	
Rear Suspension	60	3 Months	Check for shock oil leakage, worn bushings, loose or missing hardware.	
Rear axle	500	5 years	Replace fluid.	

RECOMMENDED LUBRICANTS AND FLUIDS

Check and lubricate all components at the intervals shown in the SCHEDULED MAINTENANCE CHART on page 30.

Item	Capacity	Lubricants/Fluids
Rear axle oil	25 oz. (740 ml)	Mobil - 424 - W - ED
Friction Modifier	2 oz. (60 ml)	Sturaco TSV Part Number 611242

REPLACEMENT OF MAINTENANCE ITEMS

These items or their equivalents can be purchased through your dealer, directly from TSV or any other qualified source.

Item	Part Number
10A 58V Mini Fuse	636455G22
10A 58V ATO Fuse	628840

LIFTING THE VEHICLE

⚠ WARNING *Read and comply with all of the following warnings and lifting procedures to prevent the possibility of the vehicle falling and causing serious injury or death.*

For some maintenance procedures, it is necessary to lift the vehicle. Comply with the following warnings and follow the lifting procedure to ensure the safety of you, your vehicle, and surroundings.

⚠ WARNING *The vehicle must be on a firm and level surface for lifting.*

Remain constantly aware that the vehicle is not stable during the lifting process.

Place the jack and jack stands only in the areas indicated in the following illustration.

Do not get under a vehicle until it's stability on the jack stands is verified. Never get under a vehicle while it is on a jack only.

Put wheel chocks in front of and behind all wheels that are not being lifted.

Do not allow anyone to remain or get on the vehicle at any time during the lifting process or when the vehicle is lifted.

When performing any service to the drive-train, lift drive wheels off the ground.

Tools

- jack
- jack stands (4)
- wheel chocks

Lifting Front


1. Chock the rear wheels to keep the vehicle from rolling backward.
2. Put a jack under the center front behind the bumper.
3. Raise the vehicle with the jack.
4. Install a jack stand under the front frame where the instrument panel support is attached to the frame (as shown).
5. Lower the vehicle until it rests on the jack stands.
6. Remove the jack.
7. Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lifting Rear

1. Chock the front wheels to keep the vehicle from rolling forward.
2. Put a jack under the center of the bag-well.
3. Raise the vehicle with the jack.
4. Install a jack stand under each end of the frame where the leaf spring mounting brackets are welded to the frame (as shown).
5. Lower the vehicle until it rests on the jack stands.
6. Remove the jack.
7. Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lowering Vehicle

1. Make sure chocks are still in place on any wheels that remain on the ground.
2. Put the jack in the same location that was used to raise the vehicle.
3. Raise the vehicle enough to remove the jack stands. Remove the jack stands from underneath the vehicle.
4. Slowly lower the vehicle to the ground and remove the jack.

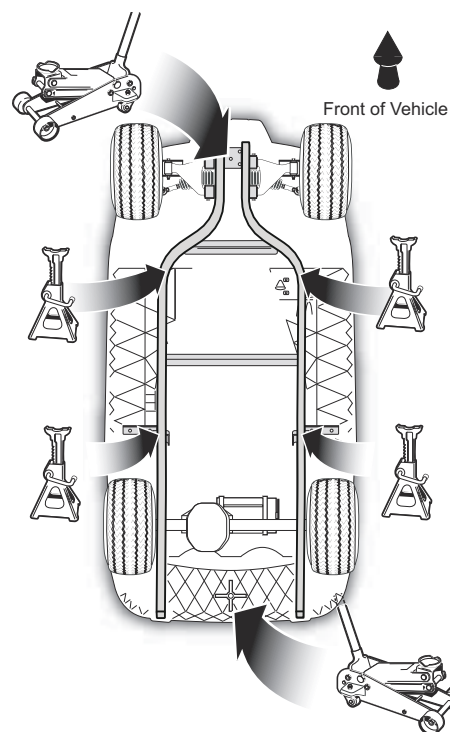

VEHICLE CLEANING AND CARE

Keeping your vehicle clean is not only beneficial to its appearance but can also help extend the life of various components.

Washing the Vehicle

NOTICE

Do not use a pressure washer to wash the vehicle. High water pressure can damage components.

Some products, including insect repellents and chemicals, will damage plastic surfaces. Do not allow these types of products to contact the vehicle.

- Do not use a pressure washer to clean the vehicle.
- Use an automotive type cleaner or mild soap to wash the vehicle. Harsh cleaners can scratch the finish.
- Use clean or new cloths and pads for washing. Reused cloths and pads can contain dirt particles that will scratch the finish.
- Use a sponge or soft brush and a soap/water solution to clean the vinyl seats. Rinse with clean water.
- Use an automotive type wash cloth to wash the body of the vehicle. To prevent the soap from drying on the vehicle, rinse with clean water frequently.
- Clean the windshield with water and a clean cloth. Remove small scratches with a plastic polish.
- Dry the vehicle with a chamois before the water dries to prevent water spots.

Polishing the Vehicle

- Do not use medium to heavy duty compounds on the finish. Use wax that is for clear coat automotive finishes only. Do not apply wax or polish to matte finish surfaces.
- Use clean or new cloths and pads for polishing. Old or reused cloths and pads can contain dirt particles that will scratch the finish.

TIRES

Follow the tire maintenance procedures as instructed in this manual and on the labels on the vehicle.

Always use approved size and type of replacement tires. See VEHICLE SPECIFICATIONS on page 39.

⚠ WARNING

Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.

Inflate all tires to the same pressure. Operating with unequal or incorrect pressure can adversely affect steering and handling and could cause an accident resulting in severe injury or death.

To decrease the risk of tire explosion, do not exceed the tire inflation rating on the tire sidewall. Make sure the tires are properly inflated at all times of operation.

To decrease the risk of tire explosion, inflate small amounts of air into the tire at intervals to allow the beads to seat properly. Because of the low volume of the small tires, over inflation can occur in seconds. Never exceed the tire inflation pressure rating on the tire sidewall when seating a bead. Protect your face and eyes when you remove a valve core.

When using an impact wrench, only use impact sockets to decrease risk of injury from a broken socket.

Do not use tires with low rated pressure. Do not use tires that have a recommended tire inflation pressure less than the tire inflation pressure in Tire Repair on page 33.

Do not over inflate the tires. Excess pressure can cause the tire to separate from the wheel or cause a tire explosion.

Tire Pressure

Maintaining correct tire inflation pressure is essential for safe vehicle operation. You can vary the inflation pressure within the recommended range to suit the condition of the terrain.

NOTICE

Low tire pressure can significantly reduce vehicle range.

TIRE PRESSURE RANGE	TERRAIN CONDITIONS	RECOMMENDATION
18 - 22 psi (124 - 152 kPa)	hard surfaces or pavement	Inflate to higher pressure within the range; never exceed maximum pressure indicated.
	soft terrain or turf	Inflate to lower pressure within the range to reduce potential damage to the terrain or turf.

Tire Repair

NOTICE

Tire repairs are not covered under the vehicle warranty.

Tools

- lug wrench, 3/4"
- impact wrench
- impact socket, 3/4"
- torque wrench, ft.lbs.

NOTICE

Tire plug tools and plugs are available at automotive outlets. The tire does not have to be removed from the wheel to install the tire plug.

Use a tire plug to repair small holes in the tread part of the tire. For large holes or holes/cuts in the tire sidewall, the tire must be replaced.

1. Remove the wheel from the vehicle. See Wheel Removal on page 33.
2. Locate the leak in the tire.
 - a. If the tire is very low or flat, fully inflate the tire.
 - b. Brush soapy water over the surface of the tire. Air bubbles will be visible where the air is leaking from the tire.
 - c. Mark the hole with chalk.
3. Install the plug according to the manufacturer's instructions.
4. Install the wheel on the vehicle. See Wheel Installation on page 33.
5. Fully inflate the tire. See Tire Pressure on page 11.

Tire Replacement

Tire replacement requires a tire mounting machine and must be done by a qualified tire center or your dealer.

WHEELS

WARNING

Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.

CAUTION

To decrease the risk of component damage, do not tighten the lug nuts to more than the torque specified below.

Check lug nuts for tightness at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 30.

Wheel Removal

Tools

- lug wrench, 3/4"
- impact wrench
- impact socket, 3/4"
- torque wrench, ft.lbs.

1. Lift the vehicle. See LIFTING THE VEHICLE on page 31.
2. Remove the lug nuts.
3. Remove the tire from the vehicle.


Wheel Installation

Lug Nut Torque	50 - 85 ft.lbs. (68 - 115 Nm)
----------------	-------------------------------


NOTICE

Always install lug nuts using a cross sequence pattern to ensure even seating of the wheel against the hub.

1. Install the wheel on the hub with lug nuts. Make sure the valve stem is to the outside.
2. Hand-tighten the lug nuts.
3. Using the tightening pattern shown at right, tighten the lug nuts to 50 - 85 ft.lbs. (68 - 115 Nm). Tighten in increments of 20 ft. lbs. (27 Nm).

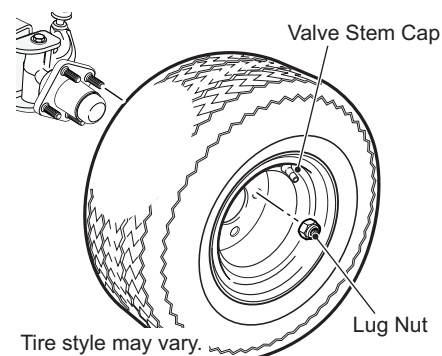

Lug Nut Tightening Pattern

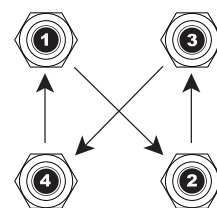

LIGHTS

All of the lights on the vehicle are LED and do not require replacement unless it is damaged. If a headlight or taillight unit is broken through impact, etc., refer to the Service Manual for replacement instructions.

REAR AXLE

The only maintenance necessary for the first five years is the inspection of the rear axle for lubricant leakage. Unless leakage is visible, the lubricant needs to be replaced after five years. Refer to the Service Manual for the fluid replacement procedure.

Change the axle oil at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 30. The drain plug is located at the bottom of the rear axle housing.

LITHIUM-ION BATTERY PACK

The lithium-ion battery pack in this vehicle is maintenance free. There is no maintenance required for the battery pack.

Charge the battery pack using only the OEM approved Lithium-Ion battery charger.

WARNING

Improper handling of the battery pack and electrical components can result in serious injury or death.

Do not attempt to remove the battery pack or battery cables. Do not use the battery pack without the control module installed. All battery pack and electrical service must be performed by an authorized service facility.

All tools used in or around the battery pack area should be insulated. Do not intentionally cause a short to the power terminal (P+, P-, B+, B-) with a metallic object.

Do not use the vehicle or charge the battery pack if the battery pack has become abnormally hot, is discolored, deformed, leaking or has an odd odor. If liquid from the battery pack leaks onto skin or clothes, wash well immediately with fresh, running water. If liquid gets into the eyes, do not rub the eyes. Wash eyes with fresh, running water and seek medical assistance immediately.

Do not disassemble or modify the design, including the electrical circuit, of the battery pack or control module.

To prevent the risk of battery pack explosion, keep all flammable materials, open flames, or sparks away from the batteries. Do not leave the battery pack near a fire or heat source. Do not throw Lithium-Ion batteries into a fire. Do not apply heat to any part of the battery pack or battery management module with a soldering iron. Do not place the battery pack in a microwave oven, dryer, or high-pressure container.

Make sure that the key switch is in the OFF position and the run/tow switch is in the RUN position before servicing the vehicle.

Do not attempt to operate the vehicle or charge the battery pack at temperatures above 140°F (60°C).

Do not immerse or throw the battery pack in water. Do not pressure wash the battery pack.

Do not puncture the battery pack or control module. Do not strike the battery pack with a hammer or heavy weight. Do not step or stand on the battery pack. Do not throw or drop the battery pack on hard surfaces.

If the battery pack terminals are contaminated or dirty, clean them with a dry cloth before using the battery pack.

Keep the battery pack and control module away from static electricity.

Before recycling or shipping battery pack, make sure that the battery pack terminals are insulated.



Lithium-Ion batteries are recyclable:

- Return discarded batteries packs to distributor or manufacturer for recycling.
- Contact local or state environmental department for the disposal information.

NOTICE

When Li-ion batteries are put into a municipal recycling bin, they will end up at a municipal recovery facility (MRF) that is typically equipped to recycle only household paper, plastic, metal, and glass. When this happens, the batteries can become damaged or crushed during processing and may become a fire hazard. It is important to note that the chasing arrow symbol (i.e three arrows forming a triangle) on Li-ion batteries means that these batteries can be recycled at specialized battery recyclers. It does not mean that Li-ion batteries can be placed in municipal/household recycling bins.

BATTERY CHARGER MAINTENANCE

- Do not attempt to start the vehicle or charge the battery pack if the vehicle has been stored at or below freezing temperatures.
- Do not spray the battery pack with water. Do not attempt to add water to the battery pack.
- Do not charge the batteries if the ambient temperature is below -4°F (-20°C) or above 113°F (45°C).
- Refer to the appropriate appendix for battery charger operating instructions.

BATTERY CHARGING

The battery charger is designed to completely charge the battery pack. If the battery pack is severely discharged the charger will indicate a fault. The automatic charger determines the correct length of charge for the battery pack and turns off when the battery pack is charged. Always refer to the instructions supplied with the charger. See the APPENDIX section in the back of this manual for charger operating instructions.

The battery management system (BMS) and charger cooperate to make sure that charging occurs at the proper rate for the battery temperature. When the battery charger is connected to the vehicle, it will determine the charge rate based on the battery temperature. The charger will operate at the rates shown in the table below.

The BMS will adjust the charge rate based on the temperature of the batteries.

Use only the OEM approved Lithium-Ion battery charger for your vehicle. See charger operating instructions in the appropriate APPENDIX beginning on 43.

1. Turn the key to the OFF position and remove it from the vehicle.
2. Inspect the charger cord for cracks, frayed wires or loose connections. If damaged, replace it.
3. Inspect the vehicle charger receptacle and charger plug for dirt, debris or damage. Clean if necessary and replace immediately if damage is found.
4. Connect the charger to the vehicle receptacle.

When the battery pack is finished charging, disconnect the charger cord from the vehicle. If disconnecting before the charge cycle is complete, it is recommended that the charger be disconnected from the wall receptacle first, then unplug the charger from the vehicle receptacle.

AC Voltage

The battery charger output is directly related to the input voltage. If the vehicle receives an incomplete charge in a normally adequate time period, low AC voltage can be the cause. Consult an electrician if necessary.

BATTERY PROLONGED STORAGE



Improper storage may damage, destroy, or cause permanent loss of battery pack capacity. Do not exceed storage time or temperature limits. The battery pack must be charged to the correct level before storage. Storing fully depleted battery packs will make them permanently unusable.

Storage Preparation

The optimum storage temperature range is between 65°F and 82°F (18°C and 28°C)

- Charge the battery module based on climate during storage period.
 - In cold climates, fully charge the battery pack. Make sure that the charging operation is complete and there are no faults displayed on the charger. The green light on the charger should be on which indicates that the charge cycle is complete.
 - In hot climates, store the vehicle with a 30% to 50% charge of battery pack capacity.
- Turn the key switch to the OFF position and remove the key from the switch.
- Check the Run - Tow switch under the seat, make sure it is set in the RUN position.
- Turn off all accessories.



The storage time for properly charged Lithium-Ion batteries supplied with this vehicle varies based on the ambient temperature.

Temperature	Length of Storage Time
-22°F to -4°F (-30°C to -20°C)	One month at 100% battery charge, all accessories turned off.
-4°F to 113°F (-20°C to 45°C)	Six months at 100% battery charge, all accessories turned off.
113°F to 140°F (45°C to 60°C)	One month at 30% - 50% charge, all accessories turned off.

Setting State of Charge (SOC)

The optional SOC meter or the hand held programmer may be used to determine the state of charge of the battery module. If the SOC is below 30%, charge the battery module until the state of charge reaches 50%. The charge cycle may be interrupted by disconnecting the charger from the AC power source first, then from the charging receptacle on the vehicle. If the SOC is above 50%, operate the vehicle until the SOC is below 50%.

During Storage

Check the state of charge every 30 days. If the SOC is below 30%, charge the battery pack until the state of charge reaches 50%.

Extreme Low Temperature Storage

If the ambient temperature is below -4°F (-20°C) DO NOT:

- turn the vehicle key to the ON position
- drive the vehicle
- tow the vehicle
- charge the vehicle
- operate accessories
- turn the lights on (if equipped)

Returning Vehicle to Service

At the end of the storage period, charge the battery pack to 100% before operating the vehicle.

Before charging the vehicle be sure that the ambient temperature is between 14°F (-10°C) and 113°F (45°C) and the vehicle has had time to adjust to the temperature.

BATTERY FAULT DIAGNOSIS

Refer to the charger instructions in the applicable APPENDIX in the back of this manual.

TRANSPORTING THE VEHICLE

⚠ WARNING *Do not ride on or allow other people on a vehicle being transported on a trailer or being towed with another vehicle.*

TOWING THE VEHICLE


⚠ WARNING *Only tow the vehicle for recovery purposes. Before towing, turn the key switch to N and move the Run/Tow switch to the TOW position. Ensure brakes and steering are operable.*

Always have a person driving the vehicle to steer and operate brakes when it is being towed. Do not tow the vehicle above 5 mph (8 kph). Failure to abide by these instructions could cause harm to vehicle and persons involved.

See RUN/TOW SWITCH OPERATION on page 15 for additional information.

1. Turn the key switch to the neutral (N) position and remove the from the switch.
2. Chock the wheels to prevent the vehicle from moving.
3. Connect the vehicle to the tow bar and remove the wheel chocks.
4. Place the run/tow switch in the TOW position; the vehicle should roll freely.

NOTICE

This vehicle is equipped with an IntelliBrake™ for parking. When the vehicle is stopped, the parking brake is automatically set. The IntelliBrake™ is released when the vehicle is in F (forward) or R (reverse) and the accelerator is pressed. The IntelliBrake™ is also released when the run/tow switch is in the TOW or  (on European Models) position with the key switch turned to N (neutral).

Hauling the Vehicle

⚠ WARNING *Loose cargo or vehicle components can fly off when the vehicle is being transported. Secure or remove all cargo. Inspect the vehicle for loose components prior to transport.*

Do not allow anyone on a vehicle being transported on a trailer.

Remove the windshield before transporting a vehicle on a trailer.


Maximum speed with canopy top installed is 50 mph (80 kph).

- If the vehicle is being hauled on a trailer or truck at highway speeds, the canopy top must be removed.
 - If the vehicle is being hauled on a trailer or truck below highway speeds, check that canopy top hardware is tight and there are no cracks in the canopy top at the mounting points.
 - The rated capacity of the hauling trailer or truck must be more than the weight of the vehicle and load plus 1000 lbs. (454 kg). See VEHICLE SPECIFICATIONS on page 39.
1. Drive the vehicle onto the trailer or truck.
 2. Turn the key to the OFF position. To prevent loss of the key, remove it from the ignition switch.
 3. Make sure the seat(s) are secured.
 4. Secure the vehicle to the trailer or truck with tie downs, straps or ropes.

Manual Release of IntelliBrake™


In case of total power loss and the RUN/TOW switch does not release the IntelliBrake™, use the instructions under the controller splash shield. Chock the tires to prevent the vehicle from moving when the brake is released.

To read the instructions, remove three re-usable plastic rivets that secure the controller splash shield to the body and the controller. To remove these rivets, press the center of the rivet with the vehicle key. When the center pin goes into position, the rivet can be removed. Repeat the procedure for each remaining rivet. Turn the splash shield over to read the instructions.

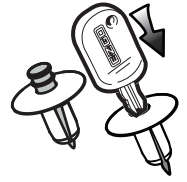

Make sure that the key switch is in the OFF position and chock the tires to prevent the vehicle from moving; then do the following:

1. Locate the auxiliary power line (1) and remove the weather pack seal (2) from the connector.
2. Locate the primary power line connector (3) and disconnect it from line (4).
3. Connect the auxiliary power line (1) to the primary power line (3) which releases the brake. If the tires are not chocked and the vehicle is not on flat ground, the vehicle will move immediately.
4. Move the vehicle to desired, safe location and chock the tires immediately.
5. Disconnect the auxiliary power line (1) from the primary power line (3).

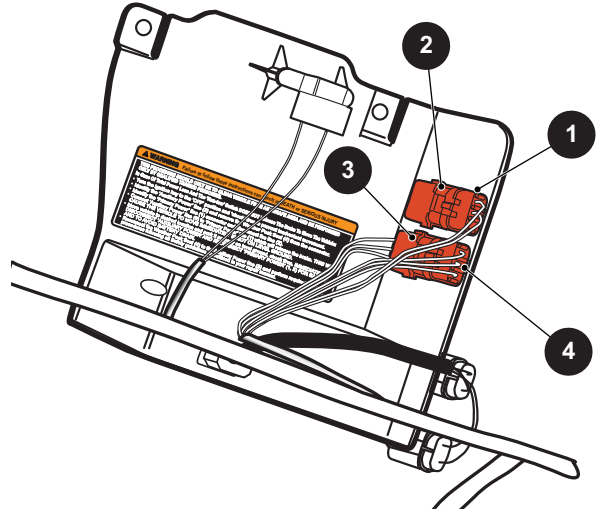

6. Connect the primary power line (3) to line (4).
7. Replace the weather pack seal (2) on the auxiliary power line connector (1).
8. To reinstall the controller splash shield, position the splash shield by aligning the mounting holes with the holes in the body, push the center pin of each rivet upward so that the top of the pin is above the rivet head.
9. Place a rivet in each mounting hole of the controller splash shield and push down on the center pin until the top of the pin is flush with the rivet head.





VEHICLE SPECIFICATIONS

RXV 4

	RXV 4	RXV 4 LIFTED
Overall Height (No Canopy)	47 in (119cm)	55.5 in (141 cm)
Overall Height (w/ Canopy)	75 in (191cm)	83.5 in (212 cm)
Ground Clearance at Differential	4 in (10 cm)	6.75 in (17 cm)
Turning Radius	9.6 ft (2.6 m)	12.2 ft (3.7m)
Dry Weight	868 lb (394 kg) (without batteries)	902 lbs (409 kg) (without batteries)
Curb Weight	915 lb (415 kg)	949 lbs (430 kg)
Front and Rear Tires	18x8.5-8 (4 Ply Rated) Tires	23x10-12 (4 Ply Rated) Tires
Front Wheel Track	34.5 in (88 cm)	38.5 in (98cm)
Rear Wheel Track	38.5 in (98cm)	
Overall Length	114.7 in (291cm)	
Overall Width	47 in (119cm)	
Wheel Base	66 in (168cm)	
Power Source	39.2 – 56.7V Li-Ion Battery	
Motor Type	AC Induction	
HP Peak	11.7 hp (8.7 kW)	
HP Continuous	4.4 hp (3.3 kW)	
Electrical System	48V primary, 12V auxiliary	
Battery Quantity and Type	Single, 56.7V max Li-Ion Composite Module (Standard Configuration)	
Key or Pedal Start	Pedal	
Battery Charger	Light World Charger, 56.7V, 10 ft DC Cord	
Speed Controller	Curtis 1206 AC Controller	
Speed (Level Ground)	19.5 Mph ± 0.5 Mph (31 Kph ± 0.8 Kph) Programmable	
Drivetrain	Motor Shaft Direct Drive	
Transaxle	Clutch-type limited-slip differential with helical gears	
Gear Selection	Dash Mounted FNR/key switch	
Rear Axle Ratio	16.99:1 (Forward)	
Seating Capacity	4-Person	
Dash / IP Storage Capacity	926 in³ (15174 cm³)	
Vehicle Load Capacity	800 lb (363 kg)	
Load Deck Weight Capacity	300 lb (136 kg)	
Towing Capacity	N/A	
Steering	Double-Ended Rack and Pinion	
Front Suspension	Independent A-Arm Coil Over Shock	
Rear Suspension	Mono-Leaf springs with hydraulic shock absorbers	
Brakes	Induction Motor	
Parking Brake	Automatic Electromagnetic	
Frame	Welded steel with DuraShield™ powder coat	
Front Body and Finish	Injection Molded TPO	
Some items shown may be optional equipment		



MAINTENANCE LOG

RECORDS

[illegible]

[illegible]

APPENDIX

QuiQ CHARGER



1 kW Industrial Battery Charger

QuiQ Charger - E-Z-GO Product Manual

This manual contains important safety and operating instructions for versions of the Delta-Q QuiQ (Model nos. 913-4830-E3/-E3B/-E5 /-E5B) installed on E-Z-GO brand vehicles. Please read this information before using your QuiQ Charger. For manufacturer contact information and technical support resources, please visit delta-q.com/support



SAVE THESE IMPORTANT SAFETY INSTRUCTIONS - This manual contains important safety and operating instructions – read before using charger.

**Warning**

Charge only 48 Volt Lithium-Ion type batteries activated by Samsung SDI. Other types of batteries may burst causing personal injury and damage. Never charge a frozen battery. Study the battery manufacturer's specific precautions.

**Danger**

Risk of electric shock. Connect charger power cord to an outlet that has been properly installed and grounded in accordance with all local codes and ordinances. A grounded outlet is required to reduce risk of electric shock – do not use ground adapters or modify plug. Do not touch uninsulated portions of output connector or uninsulated battery terminals. Disconnect the charger from either the AC supply or from the golf cart, before making or breaking the connections to the battery. Do not open or disassemble charger. Do not operate this charger if the AC supply cord is damaged or if the charger has received a sharp blow, been dropped, or is damaged in any way – refer all repair work to the manufacturer, or qualified personnel. This charger is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge on electrical systems and battery charging, unless they have been given supervision or instruction concerning use of the charger by a person responsible for their safety. Children should be supervised to ensure that they do not play with the charger.

**Attention**

Recharger uniquement les batteries de type Lithium-Ion 48V activées par Samsung SDI. Autres types de batteries pourraient exploser causant des blessures corporelles et des dommages. Ne jamais charger une batterie gelée. Prendre connaissance des mesures de précaution spécifiées par le fabricant de la batterie.

**Danger**

Risque de décharge électrique. Ne pas toucher les parties non isolées du connecteur de sortie ou les bornes non isolées de la batterie. Toujours connecter le chargeur à une prise de courant mise à la terre. Déconnectez la source AC avant de faire ou défaire les connections à la batterie en chargement. Ne pas utiliser le chargeur si le cordon d'alimentation AC est endommagé ou si le chargeur est abîmé suite à une chute ou autre incident. Ne pas ouvrir ni désassembler le chargeur – référer toute réparation aux personnes qualifiées. Cet appareil n'est pas destiné à un usage par des personnes (dont les enfants) avec des facultés motrices, sensorielles ou mentales réduites, ou ayant une expérience et des connaissances insuffisantes, à moins qu'elles sont sous la supervision ou reçoivent les instructions sur l'utilisation de l'appareil d'un répondant garant de leur sécurité. Les enfants devraient être surveillés afin qu'il ne jouent en aucun temps avec l'appareil.


Maintenance Instructions

1. Do not expose charger to high pressure water spray when cleaning vehicle.
2. The enclosure of the charger meets IP66, making it dust-tight and protected against powerful water jets. The AC connection is rated to IP20, which is not protected against water. Protect the AC connection if used in wet or dusty environments.
3. If the detachable input power supply cord set is damaged, replace with a cord that is appropriate for your region:
 - ✦ This charger is provided with a cord set for connection to outlets operating at nominal 120 Volts (or 240 Volts as appropriate). If the input plug does not fit the power outlet, contact Delta-Q Technologies for the proper cord set terminating in an attachment plug of the proper configuration for the power outlet.
 - ✦ 'North America: UL or CSA listed / approved detachable cord, 3 conductor, 16AWG minimum and rated SJT; terminated in a grounding type IEC 60320 C14 plug rated 250V, 13A minimum
 - ✦ For all other regions: Safety approved detachable cord, 3 conductor, 1.5mm² minimum, rated appropriately for industrial use. The cord set must be terminated on one end with a grounding type input connector appropriate for use in the country of destination and, on the other end, an output grounding type IEC 60320 C14 plug.

Operating Instructions

CAUTION: Charger enclosure may be hot during charging. Use hand protection if handling the charger while charging.

- + Extension cords must be 3-wire cord no longer than 30m(100') at 10AWG or 7.5m(25') at 16AWG per UL guidelines.
- + Only connect **ONE** QuiQ charger to a single 15A circuit or the circuit may become overloaded.

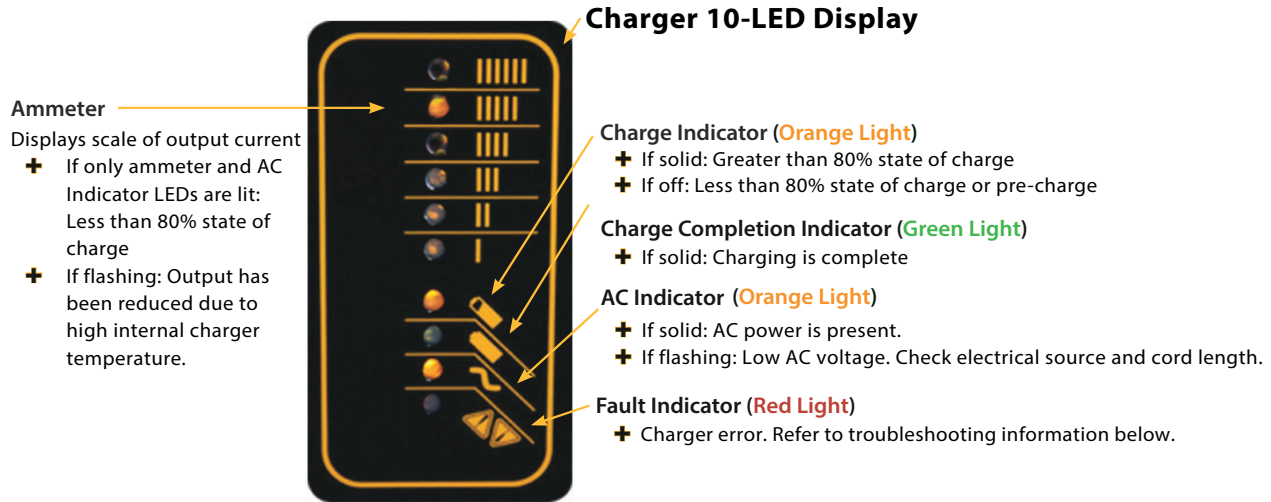

Receptacle Display

LED	Indication
Solid	Charge complete
Long flash	Greater than 80% state of charge
Short flash	Less than 80% state of charge
Off	See charger for indications.

Troubleshooting Instructions

If a fault occurs, count the number of red flashes between pauses and refer to the table below.

Flashes	Cause	Solution
II ✖ ✖ ✖ II	Charger unable to apply wake-up pulse	Refer cart to service department
II ✖ ✖ ✖ ✖ II	Charge timeout	Possible BMS error - refer cart to service department
II ✖ ✖ ✖ ✖ ✖ II	BMS fault	Refer cart to service department
II ✖ ✖ ✖ ✖ ✖ ✖ II	Charger shutdown due to high internal temperature.	Ensure sufficient cooling airflow. Reset the charger by interrupting AC power for 15+ seconds.
II ✖ ✖ ✖ ✖ ✖ ✖ ✖ II	Internal charger fault	Reset the charger by interrupting AC power for 15+ seconds. Return to service department if fault persists.

Note: This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

RC900 CHARGER

ELiTE



RC900 ELiTE Onboard Charger Original User Manual

This manual contains important safety and operating instructions for this version of the Delta-Q RC900 ELiTE Onboard Charger (Part No. 944-0003) for use with E-Z-GO ELiTE lithium brand vehicles (Model 673928). For manufacturer contact information and technical support, please visit <http://support.delta-q.com/>.

SAVE THESE SAFETY INSTRUCTIONS
This manual contains important safety & operating instructions. Read before using the charger.



Warning

Charge only 48V lithium-ion type batteries activated by Samsung SDI. Other types of batteries may burst causing personal injury and damage. The Samsung Battery Management System (BMS) ensures that in all operating modes, the battery cells are protected from inappropriate levels of voltage, current, temperature, and state of charge. Never charge a frozen battery. Study the battery manufacturer's specific precautions before using this charger.



Danger

Risk of electric shock. Connect charger power cord to an AC outlet that has been properly installed and grounded in accordance with all local codes and ordinances. A grounded AC outlet is required to reduce the risk of electric shock—do not use ground adapters or modify the plug. Do not touch uninsulated portions of the output connector or uninsulated battery terminals. Disconnect the AC supply before making or breaking the connections to the battery. Do not open or disassemble the charger. Do not operate this charger if the AC supply cord or DC output cord is damaged or if the charger is damaged in any way. Refer all repair work to the manufacturer, or qualified personnel. This charger is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge on electrical systems and battery charging, unless they have been given supervision or instruction concerning use of the charger by a person responsible for their safety. Children should be supervised to ensure they do not play with the charger.

Manuel d'origine de l'utilisateur du Chargeur À bord RC900 ELiTE

Le présent manuel contient d'importantes consignes de sécurité et d'utilisation pour cette version du chargeur Delta-Q à bord RC900 ELiTE (numéro de référence 944-0003) pour utilisation avec les véhicules de marque E-Z-GO ELiTE alimentés par des batteries au lithium-ion (Modèle 673928). Pour les coordonnées et le soutien technique du fabricant, visitez <http://support.delta-q.com/>.

CONSERVEZ CES CONSIGNES DE SÉCURITÉ
Le présent manuel contient d'importantes consignes de sécurité et d'utilisation. Lisez-les avant d'utiliser le chargeur.



Attention

Chargez uniquement les batteries au lithium-ion 48 V activées par Samsung SDI. Les autres types de batteries pourraient exploser causant des blessures corporelles et des dommages. Le système de gestion des batteries intégrés (BMS) garantit que dans tous les modes de fonctionnement, les cellules de la batterie sont protégées contre les niveaux inappropriés de tension, de courant, de température et d'état de charge. Ne chargez jamais une batterie gelée. Prenez connaissance des mesures de précaution spécifiées par le fabricant de la batterie avant d'utiliser ce chargeur.



Danger


Risque de décharge électrique. Toujours connecter le cordon d'alimentation du chargeur à une prise de secteur CA proprement installée et mise à la terre conformément à tous les codes et règlements locaux.. Une prise secteur CA mise à la terre est nécessaire pour réduire le risque de choc électrique - n'utilisez pas d'adaptateurs de terre et ne modifiez pas la fiche. Ne pas toucher les parties non isolées du connecteur de sortie ou les bornes non isolées de la batterie. Déconnectez la source CA avant de faire ou défaire les connexions à la batterie en chargement. Ne pas ouvrir ni désassembler le chargeur. Ne pas utiliser le chargeur si le cordon d'alimentation CA ou le cordon de sortie CC est endommagé ou si le chargeur est abîmé suite à une chute ou autre incident – Référez toute réparation au fabricant ou aux personnes qualifiées. Cet appareil n'est pas destiné à un usage par des personnes (dont les enfants) avec des facultés motrices, sensorielles ou mentales réduites, ou ayant une expérience et des connaissances insuffisantes, à moins qu'elles sont sous la supervision ou reçoivent les instructions sur l'utilisation de l'appareil par une personne responsable de leur sécurité. Les enfants doivent être surveillés afin qu'il ne jouent en aucun temps avec le le chargeur.

Operating & Maintenance Instructions

- ❖ The charger may become hot during charging. Do not touch the charger when it is charging.
- ❖ To maintain safe operations, the unit automatically reduces its output power if the temperature rises above set thresholds, or if the AC input voltage is too low. The charger also reduces output power if it detects the battery pack is damaged.
- ❖ If power is interrupted, and then returns, the charger starts and continues to operate without hazard to the user, or damage to the batteries.
- ❖ Unplug the charger from AC when cleaning, moving, or conducting any maintenance or repair on the vehicle. No user serviceable parts are inside the charger. Do not remove the charger or the cover due to the risk of electrical shock.
- ❖ Do not expose the charger to oil, dirt, mud, or direct heavy water spray when cleaning the vehicle or machine.
- ❖ The enclosure on these chargers meets IP56, making it protected from dust ingress and powerful water jets. The AC receptacle requires an external AC cord which is not protected against dust or water. Protect this AC connection if the charger is used in wet or dusty environments. Inspect it regularly for contamination. If the charger and/or cord are in a damp location, use a Class A GFCI AC outlet.
- ❖ If the detachable AC input power cord or DC output cord is damaged, do not use the charger until they are replaced by a qualified service technical with cord sets appropriate to your region and application.
- ❖ To charge your vehicle, use a 3-wire extension cord less than 30m (100') at 10 AWG or 7.5m (25') at 16 AWG, per UL guidelines.

AC Receptacle Indicators

LED	Indication
Off	No AC Power. Check for AC cord damage; plug into AC power outlet; ensure AC outlet has power.
Slow Green Breathing	More than 80% state of charge.
Fast Green Breathing	Less than 80% state of charge.
Solid Green	Charge Complete
Rapid Amber Flash	Error. Unplug and plug the charger in again. If the error remains, contact a qualified service technician.
Solid Red	Fault. Unplug and plug the charger in again. If the fault remains, contact a qualified service technician.

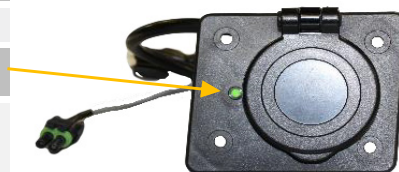

Identifying Charger Serial Number

The serial number is printed on the front of the charger. Use this number when requesting technical support.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC/ICES Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Delta-Q Technologies Corp.
3755 Willingdon Ave.
Burnaby, B.C. V5G 3H3 CANADA
Phone: +1.604.327.8244

Email: support@delta-q.com
Web: www.delta-q.com
User Documentation: www.delta-q.com/resources

DELTA-Q EZ 350

ELiTE

EZ350 Model
Lithium Golf Cart
Battery Charger



Chargeur de batterie au lithium
pour chariot de golf
Modèle EZ350

E-Z-GO ELiTE Charger – EZ350 Model Original User Manual

This manual contains important safety and operating instructions for these versions of the Delta-Q ELiTE Charger (Part Numbers: 958-0003 and 958-0004) for use with E-Z-GO ELiTE lithium brand vehicles. Read this information in its entirety before using your charger. For manufacturer contact information and technical support, visit <http://support.delta-q.com/>.

SAVE THESE SAFETY INSTRUCTIONS
This manual contains important safety & operating instructions. Read before using the charger.



Warning

Charge only 48V lithium-ion type batteries activated by Samsung SDI. Other types of batteries may burst causing personal injury and damage. Never charge a frozen or non-rechargeable battery. Study the battery manufacturer's specific precautions before using this charger.



Danger

Risk of electric shock. Connect charger power cord to an AC outlet that has been properly installed and grounded in accordance with all local codes and ordinances. A grounded AC outlet is required to reduce risk of electric shock – do not use ground adapters or modify the plug. Do not touch uninsulated portions of the output connector or uninsulated battery terminals. Disconnect the AC supply before making or breaking the connections to the battery. Do not open or disassemble the charger. Do not operate the charger if the AC supply cord or DC output cord is damaged or if the charger has received a sharp blow, been dropped, or is damaged in any way. Refer all repair work to the manufacturer or qualified personnel. This charger is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge on electrical systems and battery charging, unless they have been given supervision or instruction concerning use of the charger by a person responsible for their safety. Children should be supervised to ensure they do not play with the charger.

Manuel d'origine de l'utilisateur du Chargeur E-Z-GO ELiTE – Modèle EZ350

Le présent manuel contient d'importantes consignes de sécurité et d'utilisation pour ces versions du Chargeur Delta-Q ELiTE (numéros de référence 958-0003 et 958-0004) pour utilisation avec les véhicules de marque E-Z-GO ELiTE alimentés au lithium. Lisez en entier les informations fournies avant d'utiliser le chargeur. Pour les coordonnées et le soutien technique du fabricant, visitez <http://support.delta-q.com/>.

CONSERVEZ CES CONSIGNES DE SÉCURITÉ
Le présent manuel contient d'importantes consignes de sécurité et d'utilisation. Lisez-les avant d'utiliser le chargeur.



Mise en garde

Chargez uniquement les batteries au lithium-ion 48 V activées par Samsung SDI. Les autres types de batteries pourraient exploser causant des blessures corporelles et des dommages. Ne chargez jamais une batterie gelée ou non rechargeable. Prenez connaissance des mesures de précaution spécifiées par le fabricant de la batterie avant d'utiliser ce chargeur.



Danger

Risque de choc électrique. Branchez le cordon d'alimentation du chargeur à une prise CA qui a été correctement installée et mise à la terre conformément à tous les codes et règlements locaux en matière d'électricité. Une prise CA mise à la terre est requise pour réduire les risques d'électrocution; n'utilisez pas d'adaptateurs de terre ou ne modifiez pas la fiche. Ne touchez pas la partie non isolée du connecteur de sortie ou les bornes de la batterie non isolées. Débranchez l'alimentation CA avant d'effectuer ou de rompre les connexions à la batterie. N'ouvrez pas ou ne démontez pas le chargeur. N'utilisez pas le chargeur si son cordon d'alimentation CA ou son cordon de sortie CC est endommagé ou si le chargeur a reçu un coup violent, s'il est tombé ou s'il a été endommagé de quelque façon que ce soit. Le chargeur ne doit être réparé que par le fabricant ou du personnel qualifié. Ce chargeur n'est pas conçu pour être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances des systèmes électriques et de la charge de batteries, à moins qu'une personne responsable de leur sécurité ne les supervise ou ne leur ait fourni les consignes d'utilisation. Les enfants doivent être supervisés pour s'assurer qu'ils ne jouent pas avec le chargeur.

© 2021 Delta-Q Technologies Corp. All rights reserved.
3755 Willingdon Avenue Burnaby, BC V5G 3H3 CANADA
(PN: 710-0240 Rev 3 Date: 02/04/2021)

Maintenance Instructions

1. The enclosure on all charger models meets IP56, making it protected from dust ingress and powerful water jets. The AC connection on the 958-0004 model requires an external AC cord and is rated to IP20, which is not protected against dust or water. Protect this AC connection if the charger is used in wet or dusty environments and inspect it regularly for contamination.
2. All connectors between the battery charger and the battery should be regularly inspected for corrosion and contamination as these can cause overheating and can be a fire hazard.
3. If the AC power supply cord is damaged:
 - ☒ The 958-0003 charger model has an integral AC cord for connection to North American outlets operating at 120 Volts nominal. If this AC power supply cord is damaged, do not use the charger and send it to a qualified service technician for repair.
 - ☒ The 958-0004 charger model has a 7-inch (185mm) AC cord terminated with an IEC 320 C14 plug. If this AC power supply cord is damaged, do not use the charger and send it to a qualified service technician for repair. If the mating AC cord to the wall outlet is damaged, replace it with a 6 feet (1.83 meter) long UL/CSA approved AC cord with a grounded IEC 320 C13 socket rated 250V, 13A minimum on the charger side and an approved 3-prong grounded plug compatible with the local AC power outlet (110VAC to 240VAC). If the 3-prong grounded plug does not fit the local AC power outlet, contact E-Z-GO or Delta-Q Technologies for the proper cord for the local AC power outlet.
 - ☒ For regions with 220-240V mains supply, select a safety approved AC cord, 3-conductor, 1.0mm² minimum, rated appropriately for industrial use. The cord must be terminated on one end with a grounded input connector appropriate for the AC power in the country of destination and, on the charger end, a grounding type IEC 320 C13 socket.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC/ICES Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Mounting Instructions

The charger can be mounted horizontally or vertically with the cables and LED indicators pointing downward. Five (5) robust mounting points are cast into the charger's aluminum enclosure and another mounting hole in the center of the handle. The charger can be screwed to a table or wall with the four (4) slotted mounting holes, two (2) on each side using M6 or ¼-inch fasteners. A vertical mounting from the single cast keyhole mounting slot opposite the cables is possible using a suitable 8 or 10mm or 3/8-inch J-hook. A suspended horizontal mounting is achieved using a ceiling secured 5/16-inch threaded rod secured with nuts above and below the handle.

Consignes d'entretien

1. Le boîtier en tout modèles de chargeur est conforme à la norme IP56, le protégeant ainsi contre l'infiltration de poussière et les jets d'eau puissants. Le branchement CA sur modèle 958-0004 nécessite un cordon CA externe et est conforme à la norme IP20, qui n'offre pas de protection contre la poussière ou l'eau. Protégez ce branchement CA si le chargeur est utilisé dans un environnement humide ou poussiéreux et inspectez le régulièrement pour déceler toute contamination.
2. Tous les connecteurs entre le chargeur de batterie et la batterie doivent être régulièrement inspectés pour corrosion et contamination, car ils peuvent provoquer un surchauffage et peuvent être un risque d'incendie.
3. Si le cordon d'alimentation CA est endommagé :
 - ☒ Le modèle de chargeur 958-0003 est équipés d'un cordon CA intégré pour le branchement sur les prises en Amérique du Nord fonctionnant à une tension nominale de 120 volts. Si ce cordon d'alimentation CA est endommagé, n'utilisez pas le chargeur et envoyez-le à un technicien de service qualifié pour la réparation.
 - ☒ Le modèle de chargeur 958-0004 est équipés d'un cordon d'alimentation CA de 7 pouces (185 millimètre) se terminant par une fiche IEC 320 C14. Si ce cordon d'alimentation CA est endommagé, n'utilisez pas le chargeur et envoyez-le à un technicien de service qualifié pour la réparation. Si le cordon d'alimentation CA d'accouplement à la prise murale est endommagé, remplacez-le par un cordon d'alimentation CA approuvé UL/CSA de 6 pieds (1,83 m) de longueur avec une prise IEC 320 C13 reliée à la terre fonctionnant à une tension nominale de 250 V, 13A minimum au côté chargeur et une fiche mise à la terre approuvée à 3 broches compatible avec la prise de courant CA locale (110 V c.a. à 240 V c.a.). Si la fiche mise à la terre à 3 broches ne convient pas à la prise de courant CA locale, communiquez avec E-Z-GO ou Delta-Q Technologies pour connaître le cordon approprié pour la prise de courant CA locale.
 - ☒ Pour les régions utilisant une alimentation secteur 220-240 V, sélectionnez un cordon d'alimentation CA approuvé, à 3 conducteurs, 1,0 mm² minimum, évalué de façon appropriée pour une utilisation industrielle. Le cordon doit se terminer, à une extrémité, par un connecteur d'entrée mis à la terre approprié pour l'alimentation CA dans le pays de destination et, à l'autre extrémité du chargeur, par une fiche IEC 320 C13 mise à la terre.

REMARQUE: cet équipement a été testé et déclaré conforme aux limites pour appareils numériques de classe B, selon la section 15 des règlements de la FCC et de l'ICES. Ces limites sont destinées à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie radio électrique et, s'il n'est pas installé et utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radio.


Instructions de montage

Le chargeur peut être monté à l'horizontale ou à la verticale avec les câbles et les indicateurs DEL orientés vers le bas. Cinq (5) points de montage robustes sont moulés dans le boîtier en aluminium du chargeur et un autre trou de montage se trouve dans le centre de la poignée. Le chargeur peut être vissé sur une table ou un mur avec les quatre (4) fentes de montage, deux (2) de chaque côté, à l'aide d'attaches M6 ou de 1/4 de pouce. Un montage vertical à partir de la fente de montage en forme de trou de serrure à l'opposé des câbles est possible à l'aide d'un crochet en J approprié de 8 ou de 10 mm ou de 3/8 po. Un montage horizontal suspendu se réalise à l'aide d'une tige filetée de 5/16 po fixée au plafond avec des écrous au-dessus et en-dessous de la poignée.

Operating Instructions

CAUTION: The charger enclosure may be hot during charging. Use hand protection if handling the charger while charging.


- ☒ The extension cord must be a 3-wire cord less than 30m (100') at 10AWG or 7.5m (25') at 16AWG per UL guidelines.
- ☒ If you are connecting four (4) ELiTE Chargers to a single 120V mains circuit, a 20A circuit is recommended.
- ☒ Battery Capacity: Lithium-ion 14 Cells 50 -120Ah

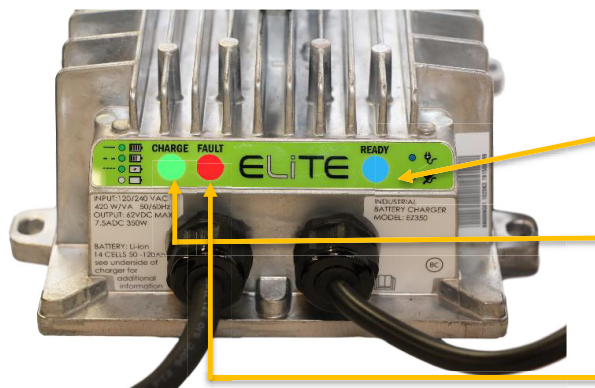

Charger Indicators

Indicator	Indication
AC Indicator Blue Light	☒ If solid, AC power is present.
Charger Status Indicator Green Light	☒ If solid, charging is complete. ☒ If slow breathing, it is more than 80% charged. ☒ If fast breathing, it is less than 80% charged.
Fault Indicator Red Light	☒ Charger error. Refer to <i>Troubleshooting Instructions</i> .

Note: The charger will flash green when the lithium Battery Management System (BMS) is in wakeup mode.

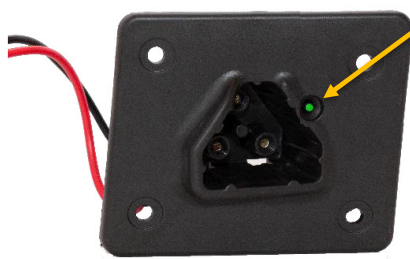


DC Receptacle Indicators

LED	Indication
Solid	Charging is complete.
Slow Flash	More than 80% state of charge.
Fast Flash	Less than 80% state of charge.
Off	See charger indicators for status.

Mode d'emploi

MISE EN GARDE : Le boîtier du chargeur peut devenir chaud pendant le chargement. Utilisez une protection pour les mains si vous manipulez le chargeur pendant le chargement.

- ☒ La rallonge électrique doit être un cordon à 3 fils de moins de 30 m (100 pi) de long à 10 AWG ou 7,5 m (25 pi) à 16 AWG selon les directives UL.
- ☒ Si vous connectez **quatre (4) chargeurs ELiTE** à un seul circuit de 120V, un circuit de 20 A est recommandé.
- ☒ Capacité de la batterie: Lithium-ion 14 cellules 50 -120Ah

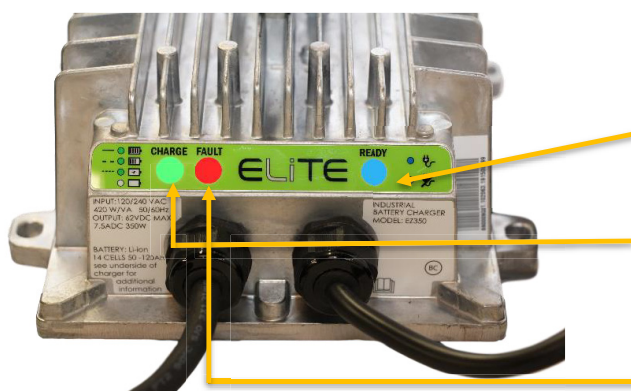

Indicateurs du chargeur

Indicateur	Indication
● Indicateur CA Voyant bleu	☒ Si constant, il y a une alimentation CA.
● Indicateur de l'état du chargeur Voyant bleu	☒ Si constant, la charge est terminée. ☒ Si la pulsation est lente, la batterie est chargée à plus de 80%. ☒ Si la pulsation est rapide, la batterie est chargée à moins de 80%.
● Indicateur de défaut Voyant rouge	☒ Erreur du chargeur. Consultez les <i>Instructions de dépannage</i> .

Remarque: le chargeur clignotera en vert lorsque le système de gestion de la batterie au lithium est en mode d'éveil.





Indicateurs de prise de courant CC



DEL	Indication
Constant	La charge est terminée.
Clignotement lente	Charge de plus de 80%.
Clignotement rapide	Charge de moins de 80%.
Éteint	Voir les indicateurs du chargeur pour l'état.





Troubleshooting Instructions

If a fault occurs, count the number of red flashes between pauses and refer to this table:

Flashes	Cause	Solution
	The lithium battery pack issued a fault indicating a wiring or charger hardware issue.	Check the green DC paddle and receptacle for damage, corrosion, and ensure it is properly inserted. Reset the charger by interrupting AC power for 15+ seconds. If the fault returns, contact E-Z-GO Customer Care.
	The charge time or amp-hour limit was exceeded.	Check the green DC paddle and receptacle for damage, corrosion, and ensure it is properly inserted. Ensure the charger has sufficient cooling airflow in ambient temperatures below 40°C; if in the sun, move to the shade. Reset the charger by interrupting AC power for 15+ seconds. If the fault returns, contact E-Z-GO Customer Care.
	The lithium battery pack shut down charging and issued a fault.	Reset the lithium battery pack by turning the ignition and tow mode off, remove the green charger paddle from the receptacle, wait 5+ seconds, re-insert the paddle. If the fault returns, contact E-Z-GO Customer Care.
	Internal charger fault	Reset the charger by interrupting AC power for 15+ seconds. If the fault returns, contact E-Z-GO Customer Care.

Instructions de dépannage

S'il survient une erreur, comptez le nombre de clignotements rouges entre les pauses et reportez-vous au tableau suivant :

Clignotement	Cause	Solution
	Le bloc-batterie au lithium a émis un défaut indiquant un problème de câblage ou de matériel du chargeur.	Vérifiez la palette CC verte et la prise pour vous assurer qu'il n'y a pas de dommage ou de corrosion et assurez-vous qu'elle est bien insérée. Réinitialisez le chargeur en interrompant l'alimentation CA pendant 15 secondes ou plus. Si le défaut revient, communiquez avec le service à la clientèle E-Z-GO.
	La limite de temps de charge ou d'ampères par heure a été dépassée.	Vérifiez la palette CC verte et la prise pour vous assurer qu'il n'y a pas de dommage ou de corrosion et assurez-vous qu'elle est bien insérée. Assurez-vous que le chargeur a suffisamment de circulation d'air de refroidissement dans les températures ambiantes inférieures à 40° C. Si le chargeur est au soleil, mettez-le à l'ombre. Réinitialisez le chargeur en interrompant l'alimentation CA pendant 15 secondes ou plus. Si le défaut revient, communiquez avec le service à la clientèle E-Z-GO.
	Le bloc-batterie au lithium a arrêté la charge et a émis un défaut.	Réinitialisez le bloc-batterie au lithium en coupant l'allumage et en désactivant le mode de remorquage, enlevez la palette verte du chargeur de la prise, attendez 5 secondes ou plus et réinsérez la palette. Si le défaut revient, communiquez avec le service à la clientèle E-Z-GO.
	Défaut interne du chargeur	Réinitialisez le chargeur en interrompant l'alimentation CA pendant 15 secondes ou plus. Si le défaut revient, communiquez avec le service à la clientèle E-Z-GO.

- A**
 accelerator pedal 20
- B**
 batteries
 prolonged storage 7
 battery charger user's manuals
 ELiTE charger 47
 QuiQ charger 43
 RC900 charger 45
 battery disposal 13
 battery maintenance 34
- C**
 canopy top 22
 capacity
 cargo load 28
 fluids 30
 max vehicle weight 39
 towing 39
 cargo
 hauling 28
 maximum load 28
 cleaning the vehicle 32
 cup holder 19
- D**
 driving procedures
 accelerating 25
 braking 25
 downhill 27
 parking 27
 passenger 26
 slippery surfaces 26
 traversing hillsides 26
 uphill 26
- E**
 engine
 starting 24
- F**
 features
 canopy top 22
 OPS 22
 side mirrors 22
 fluids
 capacities 30
 recommended 30
- G**
 glove box 21
- H**
 hauling, vehicle 36
 horn switch 19, 20
- K**
 key switch 19
- L**
 labels, safety 15
 lifting, vehicle 13, 31
 lubricants, recommended 30
- M**
 maintenance
 chart 30
 fluid capacities 30
 recommended fluids and lubricants 30
 scheduled 29
 manufacturer contact info 1
- mirrors
 side 22
- N**
 neutral lock 36
- O**
 occupant protective system (POS) 22
 operator safety 11
- P**
 parking brake, mechanical 20
 PIN plate 8
 pre-ride inspection 23
- R**
 registration 7
- S**
 safety
 cargo 28
 driving uphill 13
 labels 15
 lifting, vehicle 13, 31
 operation 23
 operator 11
 pre-ride inspection 23
 seat belts 12
 slippery terrain 13
 tire pressure 11, 32
 tires 13
 unauthorized use 12
 vehicle modification 14
 weight capacity 28
 safety symbols 7
 scheduled maintenance chart 30
 seat belts 12
 seat bottom 21
 serial number labels 8
 slippery surfaces 26
 specifications, vehicle 39
 storage compartments 21
 sun top 22
 switches
 horn 19, 20
 key 19
- T**
 tires 32
 pressure 11, 32
 repair 33
 replacement 33
 top, canopy 22
 towing capacity 39
 towing, vehicle 36
 transporting the vehicle 36
 truck bed 22
- U**
 USB port 19
- V**
 vehicle
 hauling 36
 max weight capacity 39
 specifications 39
 towing 36
 towing capacity 39
 transporting 36
 VIN plate 8

W

- warranty 7
- washing the vehicle 32
- weight capacity
 - towing 39
- weight capacity, maximum 28
- weight capacity, vehicle 39
- wheels 33
 - axle and wheel nut torques 33
 - wheel installation 33
 - wheel removal 33



TEXTRON SPECIALIZED VEHICLES, INC.

1451 Marvin Griffin Road
Augusta, Georgia 30906 - 3852
USA

CONTACT INFORMATION

North America:

Technical Assistance & Warranty:
Phone: 1-800-774-3946, FAX: 1-800-448-8124
Service Parts Phone:
1-888-GET-E-Z-GO (1-888-438-3946), FAX: 1-800-752-6175

International:

Phone: 001-706-798-4311, FAX: 001-706-771-4609

California Proposition 65



WARNING

Operating, servicing and maintaining a passenger vehicle or off-road vehicle can expose you to chemicals including phthalates and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, wear gloves and wash your hands frequently when servicing your vehicle.

For more information go to www.P65Warnings.ca.gov/passenger-vehicle

Parts Manuals and Service Manuals are available from a local Distributor, an authorized Branch, Genuine E-Z-GO Parts & Accessories Department or at www.shopezgo.com.

Copyrighted Material

This manual may not be reproduced in whole or in part without the express permission of the manufacturer.